# **Retail Market Message Guide**

# **Meter Works**

Document Information						
Business Area:	ESB Networks					
Status: Final						
Author/s:	ESBN					
Version Number:	6.1					
Reason for Change	Schema Release v14.0					

Document Updates						
	Name	Date	Reason	Version		
	H&SP Project	22/02/2012	Initial Draft	2.3		
MM	MMR 10.2	21/11/2013	Updated following approval at ReMCoWG of MCR1129 & approval at IGG of MCR 1134	2.4		
	Co-MMR 10.4	11/02/2015	The following non-conformances were addressed.  MM131 – W202: updated to Energise – Wiring Cert required.	2.5		
			"Including Reading" deleted from MM306, MM306W, MM307, MM307W, MM106D, MM106E. Message 030 – Step 2 Meter Works Type			
Co-MMR	Co-MMR	04/12/2015	changed to – Install Interval Metering and Re-versioned as part of Co-MMR 10.6	2.6		

	Co-MMR 10.7	02/06/2016	AIQ 2964 - The following paragraph on page 10 Message Version is removed: This Message Guide refers to and is consistent with the Discussion Request (DR 176) which is based on Market Design version 8 and the 131 market message from MCR0171. NI specific validations are not included in this guide  AIQ 2966 - Reference to MM 131 was missing in the scope page 11. MM131 added.  AIQ 2967 - Reference to MM 131 was missing from Market message Introduction on page 14. The following text was added:  Notification to Suppliers of the status of a meter works request, de-energisation request, re-energisation request, re-energisation request, revenue protection and meter problem calls – message 131.	2.7
	Schema Release V11.0	05/08/2016	MCR 1111 – Automated Debt Flagging MCR 1122 – Essential Plant	3.0
V	MMR 11.1	02/10/2017	MCR 1188 - Update MPD 09 to Reflect Actual Market Process in relation to Meter and/or Service Removal: Page 35 - Access Arrangements updated with reference to Meter and/or Service removal.	3.1

Schema Release V12.0	22/04/2019	Re-versioned as part of Schema Release V12.0 MCR1173: Vulnerable Customer Implementation in RoI of SI 463 MCR1140 Introduction of Eircodes into the Retail Market in Ireland	4.0
Co-MMR 12.1	19/08/2020	Re-versioned as part of Co-MMR 12.1	4.1
Schema Release V13.0	16/02/2021	Re-versioned as part of Schema Release V13.0  MCR0176: E-Mail Address Validation  MCR1160: Smart Metering Meter Works	5.0
MMR 13.2	15/12/2021	Text 'Not used in ROI' replaced with 'Not used post System Separation' for the following fields: Tariff Configuration Code, Appointment Id, Prepayment Type, Comment, Keypad Premise Number, Networks Reference, MIC Start Date, Current Changeable Service Capacity, CSC Start Date and CSC End Date Page 62 & 81 - DIJ Rejection Reason code text added- (DIJ remains in the schema post System Separation) Appendix 3A - Status Code 'S' row deleted Appendix 3B - Status Code 'S' column deleted. 252 MM updated to change NIE references to 'NO'. Appendix 3B - Status Code 'S' column deleted. 252 MM updated to change NIE references to 'NO'. Format change: ESB (Yellow) to YES (Green) Page 233 - Rationale (NIE) text deleted	5.1

MMR V13.6	02/11/2022	DR1225 MCC02 Exchanges Impacts	5.2
V14.0		Updated to include re-versioned V14.00.00 MCRs post detailed design:  • MCR1216  • MCR1219  • MCR1189	6.0
V14.3MMR	05/08/2025	Non conformance : correction of Appendix 4	6.1

## **Table of Contents**

INTRODUCTION								
1.1	PURPOSE OF THE MESSAGE IMPLEMENTATION GUIDE	11						
1.2	Message Groups							
1.3	TECHNICAL OVERVIEW							
1.4	Message Version							
1.5	SCOPE							
1.6	Validation	_						
1.7	Notes							
1.8	Market Message Introduction.	_						
MARK	KET MESSAGES	20						
1.9	017 Meter Point Status Change Request	20						
	Purpose / Description of message/Validation							
	Data hierarchy diagram							
	Message Structure/Message Validation	22						
1.10	117D CHANGE IN ENERGISATION STATUS DELAY							
	Purpose / Description of message	48						
	Data hierarchy diagram							
	Message Structure							
1.11	117R METER POINT STATUS REQUEST REJECTION							
	Purpose / Description of message	51						
	Data Hierarchy Diagram	55						
	Message Structure							
1.12	030 METER WORKS REQUEST							
	Purpose / Description of message/Validation							
	Data Hierarchy Diagram							
	Message Structure/Validation							

1.13	130D METER WORKS REQUEST DELAYED	72
	Purpose / Description of message	72
	Data Hierarchy Diagram	<b>7</b> 3
	Message Structure	
1.14	130R METER WORKS REQUEST REJECTION	75
	Purpose / Description of Message	75
	Data Hierarchy Diagram	77
1.15	137R APPOINTMENT REJECTION	80
	Purpose / Description of Message	80
	Data Hierarchy Diagram	82
	Message Structure	82
1.16	306 METER POINT STATUS CHANGE – DE-ENERGISATION READ	85
	Purpose / Description of Message	85
	Data Hierarchy Diagram	86
	Message Structure	87
1.17	306W METER POINT STATUS CHANGE CONFIRMATION - DE-ENERGISATION - WITHDRAWN READ	94
	Purpose / Description of Message	94
	Data Hierarchy Diagram	95
	Message Structure	96
1.18	307 METER POINT STATUS CHANGE— ENERGISATION READ	102
	Purpose / Description of Message Error! B	ookmark not defined
	Data Hierarchy Diagram	
1.19	307W METER POINT STATUS CHANGE CONFIRMATION – ENERGISATION – WITHDRAWN READ	110
	Purpose / Description of Message	110
	Data Hierarchy Diagram	111
	Message Structure	112
1.20	106D METER POINT STATUS CHANGE CONFIRMATION – DE-ENERGISATION	116
	Purpose / Description of Message	116
	Data Hierarchy Diagram	118
	Message Structure	
1.21	106E METER POINT STATUS CHANGE CONFIRMATION – ENERGISATION	121
	Purpose / Description of Message	121

	Data Hierarchy Diagram	
	Message Structure	
1.22	332 NON INTERVAL METER TECHNICAL DETAILS	124
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	
1.23	332W NON INTERVAL METER TECHNICAL DETAILS — WITHDRAWN READ	140
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	
1.24	331 Interval Meter Technical Details	153
	Purpose / Description of Message	
	Data Hierarchy Diagram	156
	Message Structure	156
	Message Structure	
1.25	301 METER POINT CHARACTERISTICS	160
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	
<b>1.26</b>	301N PROPOSED METER POINT CHARACTERISTICS	168
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	170
1.27	311 METER PROBLEMS	175
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	177
1.28	260 OBSERVATION OF PROBLEM, DAMAGE OR TAMPERING	181
	Purpose / Description of Message/Validation	181
	Data Hierarchy Diagram	
	Message Structure/Validation	
1.29	261 RESOLUTION OF PROBLEM, DAMAGE OR TAMPERING	188

	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	
1.30	330 NOTIFICATION OF CHANGE OF METERING FROM NON INTERVAL TO INTERVAL	194
	Purpose / Description of Message	
	Data Hierarchy Diagram	
	Message Structure	
1.31	131 Works Status	
	Purpose / Description of Message	
	Data Hierarchy Diagram	202
	Message Structure	
APPEN	IDIX 1	209
1.32	Appendix 1A – Message 306 Combinations	209
1.33	APPENDIX 1B – MESSAGE 307 COMBINATIONS	
1.34	APPENDIX 1C – MESSAGE 332 COMBINATIONS	
APPEN	IDIX 2	21
1.35	APPENDIX 2A – METER POINT STATUS CHANGE VALIDATION SEQUENCE DIAGRAM	21
1.36	APPENDIX 2B – METER WORKS REQUEST VALIDATION SEQUENCE DIAGRAM	
APPEN	IDIX 3	214
1.37	APPENDIX 3A – MESSAGE 131 – FIELDWORK STATUS CODE	214
1.38	APPENDIX 3B – MESSAGE 131 – MESSAGE USAGE MATRIX	210
APPEN	IDIX 4	218
	APPENDIX 4A MESSAGE 017 - DE-ENERGISATION/RE-ENERGISATION REQUEST MAPPING	
	•	

#### **INTRODUCTION**

#### **Purpose of the Message Implementation Guide**

This document is a Message Implementation Guide to assist Suppliers in:

- The construction of market messages to be sent to DSO and MRSO; and
- The interpretation of messages received from DSO and MRSO.

The Message Implementation Guides are organized into separate **Message Groups** documents based around key business processes. These are:

- · Registration, including Change of Supplier
- Customer Data and Agreements
- Data Processing
- Data Aggregation
- DUoS and Transaction Payments
- Meter Works
- SSA
- Unmetered
- Market Gateway Activity

This document is the Meter Works Implementation Guide.

<b>Retail Market Message C</b>	Guide – Meter	Works
--------------------------------	---------------	-------

The same type of data is often provided in several messages and, irrespective of the message type, this data is subject to common rules for population. An example is the Meter Point Address.

A separate document exists to describe the population rules for these types of data, providing:

- An overview of the structure of the segment
- Instructions relating to how to populate each segment and field.

This is the Common Data Segments Implementation Guide.

#### **Message Groups**

Each Message Group section contains:

- An introduction outlining the scope and business context for the message group
- A Message Usage Summary with a description of when each message is used
- · A list of Related Business Documents that govern the process
- A message directory with a section for each separate message which includes:
  - A description of each message and when it should be used
  - An overview diagram of the structure of the message.
  - For messages sent by Suppliers:
    - o A table containing composition instructions on how to populate each segment and field
    - o A table describing how the message will be validated
    - o A description of the responses that can be expected
  - For messages sent by ESB Networks:
    - o A table containing a description of how each segment and field will be populated.

#### **Technical Overview**

Messages are exchanged in XML format between the Market Gateway operated by ESB and the Market Participant Communication Component (MPCC) software.

#### Scope

The scope of this document covers all Meter Works messages sent between Suppliers and ESB Networks. These messages allow Registered Suppliers and ESB Networks to share data relating to Meter Works requests.

The message numbers included as in scope are as follows:

- 017 Meter Point Status Change Request
- 117D Change in Energisation Status Delay
- 117R Meter Point Status Request Rejection
- 030 Meter Works Request
- 130D Meter Works Request Delayed
- 130R Meter Works Request Rejection
- 131 Work Status
- 137R Appointment Rejection
- 306 Meter Point Status Change De-energisation
- 306W Meter Point Status Change Confirmation De-energisation Withdrawn Read
- 307 Meter Point Status Change Energisation
- 307W Meter Point Status Change Confirmation Energisation– Withdrawn Read
- 106D Meter Point Status Change Confirmation De-energisation
- 106E Meter Point Status Change Confirmation Energisation
- 332 Non Interval Meter Technical Details
- 332W Non Interval Meter Technical Details Withdrawn Read
- 331 Profile Meter Technical Details (Interval Metering)

Market Message Guide - Meter Works Baseline V6.1

- 301 Meter Point Characteristics
- 301N Proposed Meter Point Characteristics
- 311 Meter Problems
- 260 Observation of Problem, Damage or Tampering
- 261 Resolution of Problem, Damage or Tampering
- 330 Notification of Non Interval to Interval metering change

#### **Validation**

The document provides notes on how ESB Networks will validate the messages received. The purpose of these notes is to aid the Supplier in the population of each message and is intended to avoid instances where messages are rejected due to the incorrect population of a message field. The validation described is therefore limited to field specific validations.

Syntax validation is excluded from the validation notes. This is performed by using standard XML Schema validation against the ie. XML schema provided that defines the data structures of all market messages in scope. Syntax validation includes:

- Checks that the structure of the message is correct.
- Checks that all mandatory fields are provided. Mandatory fields are, however, indicated in the instructions for populations.
- Checks that any data code is selected from the list of data codes issued by ESB Networks.

In cases where the segment on a message fails on any of these reasons, a negative acknowledgement is sent back as a market message to the message sender containing the following information:

- The Transaction Reference Number supplied on the inbound message.
- A copy of the message contents as received by ESB Networks
- A description of the error.

General market process validations that are not specific to individual market message fields are excluded. These are described in the appropriate ROI market specific Market Procedure Documents (MPD) referenced in each section.

If there is any inconsistency between an MPD and the Message Implementation Guide, then the MPD will take precedence.

#### **Notes**

This document refers to segment and field levels which should be interpreted as follows:

• The level number indicated against the segment refers to the level of the data items and segments <u>within</u> that segment. Therefore, for example, in message 010 where 'MPRN Level Information -Level 2' is stated it is the data items and segments that comprise 'MPRN Level Information' that are level two items (e.g. MPRN field, Market Participant Business Reference field, Meter Point Address segment). Accordingly, within this document, MPRN Level Information segment is shown as a Level 1 segment.

• Message Header is a Level 1 segment is a child of Header Level Information.

#### **Market Message introduction**

The grouping of messages in this guide relate to the communication of requests for and changes to Metering and Metering related details at Meter Points between Registered Suppliers and ESB Networks. These can be subdivided into the following main types of change:

- Requests for and updates too Meter Point Status for Non Interval and Interval metering messages 017, 306, 306W, 307, 307W, 106D, 106E.
- Requests for Meter works at a meter location message 030
- Notification of delays and rejections to meter works and de-energisation requests and appointment time slot rejections messages 117D, 117R, 130D, 130R and 137R.
- Notification to Suppliers of the status of a meter works request, de-energisation request, re-energisation request, revenue protection and meter problem calls message 131.
- Notifications and withdrawals of Non Interval Meter Technical details (Including readings) messages 332 and 332W
- Notification of Profile Meter Technical Details (Interval Metering) Message 331
- Notification of proposed and actual changes to Meter Point Characteristics Messages 301 and 301N.
- Notification of change of metering from Non-Interval to Interval (TSO only) Message 330.
- The notification of Meter problems, damage and tampering and resolution of the same messages 311, 260 and 261.

The following table provides a trigger list for each message described in this document, detailing when it is to be used.

Message	Title	Sender	Recipient	Trigger	Predecess or	MPD Ref.
017	Meter Point Status Change Request	Supplier	Networks	Supplier wishes to request an Energisation or De- energisation at a Meter Point to which they are registered as Supplier. (Supplier can also request a COLE on this message)	none	MPD9, MPD10
117D	Change in Energisation Status Delay	Networks	Supplier	Networks wishes to delay the change in energisation status requested by Supplier for a specific reason.	017	MPD10
117R	Meter Point Status Request Rejection	Networks	Supplier	Networks wishes to reject the change in energisation status requested by Supplier for a specific reason.	017	MPD9, MPD10
030	Meter Works Request	Supplier	Networks	Supplier wishes to request meter works at a Meter Point to which they are registered as Supplier	none	MPD11, MPD35
130D	Meter Works Request Delayed	Networks	Supplier	Networks wishes to delay the request for meter works by Supplier for a specific reason.	030	MPD11, MPD35
130R	Meter Works Request Rejection	Networks	Supplier	Networks wishes to reject the request for meter works by Supplier for a specific reason.	030	MPD11,MPD35
137R	Appointment Rejection	Networks	Supplier	Networks rejects the appointment requested by Supplier on a 017 / 030 as appropriate but does not wish to reject the work request itself.	017 or 030	MPD10, MPD11
306	Meter Point Status Change  – De-energisation Read	Networks	Supplier	Networks provide De-energisation reads for a Non Interval Meter Point. This can be the result of a Supplier request or occasionally as a result of on-site safety work by Networks.	017 or none	MPD9, MPD14
306W	Meter Point Status Change Confirmation – De- energisation – Withdrawn Read	Networks	Supplier	Networks withdraws Non Interval reads provided previously on a 306	306	MPD14

Message	Title	Sender	Recipient	Trigger	Predecess or	MPD Ref.
307	Meter Point Status Change  – Energisation Read	Networks	Supplier	Networks provide energisation reads for a Non Interval Meter Point. This can be the result of a Supplier request or occasionally as a result of on-site safety work by Networks.	017 or none	MPD10, MPD14
307W	Meter Point Status Change Confirmation – Energisation– Withdrawn Read	Networks	Supplier	Networks withdraws Non Interval reads provided previously on a 307	307	MPD14
106D	Meter Point Status Change Confirmation – De- energisation	Networks	Supplier and TSO	Networks confirm a change in energisation status from energised too De-energised. This can be the result of a Supplier request or on site safety work by Networks.	017 or none	MPD9
106E	Meter Point Status Change Confirmation – Energisation	Networks	Supplier / TSO	Networks confirm a change in energisation status from De-energised to energised. This can be the result of a Supplier request or on-site safety work by Networks.	017 or none	MPD10
332	Non Interval Meter Technical Details	Networks	Supplier	Networks provides confirmation of Non Interval Meter works (Including Final and start reads if appropriate) to the Supplier registered to the Meter Point.	030 or none	MPD5, MPD8(1.1), MPD9, MPD10,MPD11, MPD12, MPD14, MP35
332W	Non Interval Meter Technical Details – Withdrawn Read	Networks	Supplier	Networks withdraws readings provided previously on a 332 message	332	MPD14
331	Profile Meter Technical Details	Networks	Supplier / TSO	Completion of meter works at a Meter Point involving Interval Metering (Removals, installs or exchanges).	030 or none	MPD2, MPD6, MPD7 (1.1), MPD7 (1.2), MPD8(1.1), MPD11,

Market Message Guide - Meter Works Baseline V6.1

Message	Title	Sender Recipien		Trigger	Predecess or	MPD Ref.	
						MPD12, MPD 35	
301N	Proposed Meter Point Characteristics	Networks	Supplier	Networks notifies Supplier of proposed changes to the connection characteristics at a Meter Point as a result of a quotation for an increased / decreased connection.	None	MPD8 (1.1)	
301	Meter Point Characteristics	Networks	Supplier / TSO	Networks make changes to the connection characteristics at a Meter Point as a result of a new connection agreement or Networks initiated changes to connection characteristics.	None	MPD8 (1.1)	
311	Meter Problems	Networks	Supplier	Networks finds problems at a meter point and notifies the Supplier registered to the meter point of those problems.	260 or none	MPD12, MPD17	
260	Observation of Problem, Damage or Tampering	Supplier	Networks	Supplier or their appointed Agent observes a problem, damage or tampering at a meter point to which they are the Supplier and notifies Networks.	None	MPD12	
261	Resolution of Problem, Damage or Tampering	Networks	Supplier	Networks have rectified problems, damage or tampering notified to them by the Registered Supplier on a 260 or notified to Supplier previously on a 311.	260 or 311	MPD12	
330	Notification of Non Interval to Interval meter changes	Networks	TSO	Networks notifies TSO of a change the metering from Non Interval to Interval at a meter point	030 or none	MPD 8 (1.1), MPD 11, MPD 35	
131	Work Status	Networks	Supplier	The 131 message allows ESB Networks to notify Suppliers of the status of a meter works request, deenergisation request, re-energisation request, revenue protection and meter problem calls	030 or 017	MPD 9, MPD 10, MPD 11, MPD12	

#### MARKET MESSAGES

#### 1.09 017 Meter Point Status Change Request

#### Purpose / Description of message/Validation

The 017 message is sent by Supplier to the ESB Networks business to request a change of energisation status at a Meter Point to which they are the Registered Supplier. DSO will undertake validation of the message at segment and field level

The following changes can be requested on this message:


- Requests to energise a Meter point
- Requests to de-energise a Meter point

Requests to carry out a Change of Legal Entity and energise the metering at a Meter Point.

Message 017 is used in the following Market Processes:

Process	Number and Title	Use of Message					
MPD 9	De-energisation	To request a change of energisation status at a meter point to 'D' "DR"					
MPD 10	Re-energisation	To request a change of energisation status at a meter point to 'E'					

#### Data hierarchy diagram

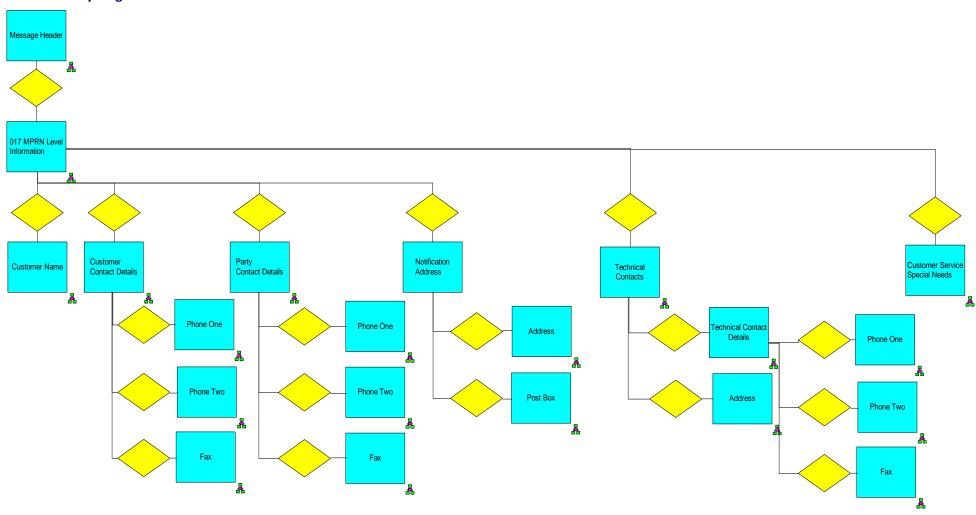

#### **Message Structure/Message Validation**

This section describes the structure of the 017 message. The purpose of the message segments and data items is explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level

_	Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
1 M	essage	Header		1	Mandatory	Refer to common data segments document	
1 M	eter Poi	nt Deta	ils	1	Mandatory		
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point. All elements of MPRN must be provided.	Message will fail validation if all elements of MPRN are not provided. If an open change of Supplier is detected for the MPRN or the Supplier is not registered to the MPRN a 117R is sent rejecting the 017 request.  If D05 or E05 is requested and an open Change of Supplier is detected for the MPRN the message will be accepted.	
2	2 SEG Customer Name  3 FLD Title		1	See Instructions	The customer with whom the Supplier has concluded an agreement to supply electricity. This segment is mandatory where a Change of Legal entity is being notified on this message.	Message will fail validation if this segment is not provided in cases where COLE is flagged as 1.	
			Title	1	Optional	This relates to the title of a person that comes before a name for addressing purposes. See the valid list of codes for Title.	This field will be ignored if it does not match one of the valid codes for title.

Segment and Field Level Identifier – 017 Message					Optionality	Description / Purpose and composition instructions	Validation
	3 FLD Last Name		1	See Instructions	This is the last or family name. This field is mandatory if the customer is a person.	Message will fail validation where COLE is flagged as Y and this item or Name_ Org1is not provided	
	3	FLD	First Name	1	Optional	This is the first given name of a person	No individual validation of this field
	3	FLD	Name_Org1	1	See Instructions	This is the name of a company or organisation. This field is mandatory if the customer is an organisation.	Message will fail validation where COLE is flagged as Y and this item or Last Name is not provided
	3	FLD	Name_Org2	1	Optional	This field can be used as overflow for the name of a company or organisation	No individual validation of this field.
	3	FLD	Registered Company No.	1	Optional Registered Company Number is the number of a business as allocated by the Company Registration Office.		No individual validation of this field.
	3	FLD	Trading As	1	Optional	This field can be used to populate information on companies / organisations that have a trading as name	No individual validation of this field.
2 SE	G	Custo	mer Contact Details	1	See Instructions	A set of details enabling the customer to be contacted. This segment is mandatory where a change of legal entity is being notified on this message and a customer phone number is available.	No individual validation at Segment level.
	3	FLD	Phone number 1	1	See Instructions	This is the principal phone number of a customer and must be populated if known by Supplier	No individual validation of this field.
	3	FLD	Phone Ext1	1	Optional	This is the principal phone number overflow field for storing number extensions where applicable	No individual validation of this field.
	3	FLD	Phone number 2	1	Optional	This field can be used for the secondary phone number where this is required.	No individual validation of this field.

Market Message Guide - Meter Works Baseline V6.1

Segment an Message	d Field	Level Identifier – 017	Rpt	Optionality	Description / Purpose and composition instructions	Validation
3	FLD	Phone Ext2 1 Opti		Optional	This is the secondary phone number overflow field for storing number extensions where applicable.	No individual validation of this field.
3	FLD	Email	1	Optional	This field is intended to store electronic mail address details where applicable  This field is intended to store electronic mail address details where applicable  This field is intended to store electronic mail address details where applicable  This field is intended to store electronic mail address details where applicable	Message will fail validation if email is not structured to the following rules:  A mail address may contain the character @ only once There must not be a full-stop at the beginning There must not be a full stop immediately before the character @ There must not be a full-stop immediately after the character @ There must not be a full-stop immediately after the character @ There must not be a full-stop at the end of the address There must not be two subsequent full-stops in the address There must be no blank character in the address Where an invalid email address is received on an 017 with CoLE, the message in its entirety will be rejected via MM117R with Reject Reason EMA
3	FLD	FLD Fax 1 Optional This field is intended to store a Fax teleph number where applicable		·	No individual validation of this field.	
3	FLD	Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable	No individual validation of this field.
Instructions This segment is mandatory when the segment is made in the segment is mandatory when the segment is made in the seg		An address for correspondence with customers. This segment is mandatory where a Change of Legal Entity is being requested on this message	No individual validation at Segment level I			

Market Message Guide - Meter Works Baseline V6.1

_	Segment and Field Level Identifier – 017 Message					Optionality	Description / Purpose and composition instructions	Validation
							and a notification address has been provided for the customer moving in to the Meter Point Address. When providing a Notification address Suppliers must provide either a Street Type Address or a PO Box Type Address but not both.	
	3	SEG	Street T	ype Address	1	See Instructions	Street type address provides details such as Street Name, House no etc. This segment is mandatory where a street type address is being provided or changed as part of notification address	No individual validation at Segment level
		4	FLD	C/O Name	1	Optional	This is the name to which correspondence can be addressed where this is different to the customer name.	No individual validation of this field
		4	FLD	Unit No.	1	Optional	This field can be used to populate information relating to the unit, flat or apartment number that can be part of an address	No individual validation of this field
		4	FLD	Addr Line 1	1	Optional	This field can be used as overflow for address details	No individual validation of this field
		4 FLD Addr Line 2		1	Optional	This field can be used as overflow for address details	No individual validation of this field	
			4 FLD House No.		1	Optional	This can be used to populate the number of a premises given as part of an address	No individual validation of this field
		4	FLD	Street	1	See Instructions	This field stores information relating to the street part of an address and must be provided if populating the street type address segment.	Message will fail validation where a Notification Address is provided and one or other of PO Box Number or Street fields are not provided.

Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation	
4	4 FLD Addr Line 4		1	Optional	This field can be used as overflow for address details	No individual validation of this field	
4	FLD	Addr Line 5	1	Optional	This field can be used as overflow for address details	No individual validation of this field	
4	4 FLD Postal Code		1 Optional		This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.  They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each Eircode is comprised of seven uppercase alpha/numeric characters.	No individual validation of this field	
4	FLD	City	1	Optional	Used to populate the details of which City an address resides in where appropriate	No individual validation of this field	
		County - Ireland	1	Optional	A field denoting the county in Ireland in which an address resides. See the list of data codes for permissible values here.	Message will fail validation if this item is provided and it does not match one of the allowed code values for this item.	

Segment and Field Level Identifier – 017 Message				Optionality	Description / Purpose and composition instructions	Validation	
4	4 FLD County / State		1	Optional	This denotes the county in which an address is situated. This is a free text 40 character field for use in non – Irish Addresses.	No individual validation of this field	
4	FLD	Country	1	See Instructions	A field that makes up part of an address denoting in which country the address resides. This item must be provided if a Notification (Street Type) Address is provided. See the list of data codes for a valid list of codes here.	Message will fail validation if this item is omitted or does not match one of the valid codes where the segment is provided.	
3 SEG	P.O. Box	Type Address	1	See Instructions	This segment allows a PO Box address to be stored as part of a notification address. This segment must be populated if a PO Box address is being provided for a customer on moving into a property.	This address type takes precedence over the Street type address part of Notification address for the purposes of correspondence with the customer where provided.	
4	FLD	PO Box Number	1	See Instructions	This number denotes the number given to a PO Box address and is a mandatory field if a PO Box address is provided for a customer at COLE.	Message will fail validation where a Notification Address is provided and one or other of PO Box Number or Street fields are not provided.	
4	FLD	Postal Code	1	Optional	This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.	No individual validation of this field.	
					They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each		

Segment and Field Level Identifier – 017 Message					Rpt	Optionality	Description / Purpose and composition instructions	Validation	
							Eircode is comprised of seven uppercase alpha/numeric characters.		
		4	FLD	City	1	Optional	Used to populate the details of which City an address resides in where appropriate	No individual validation of this field.	
		4	FLD	Country	1	See Instructions	A field that makes up part of an address denoting in which country the address resides. This field is mandatory if a PO Box address is provided for a customer at COLE. See the list of data codes for a valid list of codes here.	Message will fail validation if this item is omitted or does not match one of the valid codes where the segment is provided.	
2	FLD	Meter	Point Stat	us	1	Mandatory	Meter Point Status on a 017 message is a code to identify the requested connection status of a meter point. This must be set to code values of either <b>E</b> – Energised or <b>D</b> – De-energised. Meter Point Status should be in alignment with Meter Point Status Reason and not the existing status at the Meter Point.	This must be set to code values of either <b>E</b> – Energised or <b>D</b> – Deenergised. The status requested here is checked against the current status held for the meter point.  • Where the requested status is E and the current status in Networks systems is also E the message will not fail validation.  Where the requested status is D and the current status in Networks systems is also D the message will fail validation generating an 117R (Rejection Code IID).	

Segment and Field Level Identifier – 017 Message				Optionality	Description / Purpose and composition instructions	Validation
						Where the requested status is D and the Meter Point Status Reason is D05,if the message is received outside the De-Energisation Period the message will fail validation generating a 117R with a Reject reason Code ODP.  De-Energisation Period is 9am to 4pm, Monday to Friday and fixed date bank holidays are excluded  Where the requested status is D and the Meter Point Status Reason is D01 or D02, if the message is received outside the De-Energisation Period the message will fail validation generating a 117R with a Reject Reason Code ODP.  De-Energisation Period is 9am to 4pm, Monday to Thursday with bank holidays and the day preceding a bank holiday excluded
2	FLD	Meter Point Status Reason	1	Mandatory	Meter Point Status Reason is a code to indicate why the status of a Meter Point is being requested to be changed. The allowed code values for this message are as follows. The table below also indicates which statuses requested by Supplier are able to be requested with an appointment.	This item must match one of the valid statuses for this code.  Message will fail validation if Current Meter Point status held by Networks is D and one of following codes is provided:  • D01

_	Segment and Field Level Identifier – 017 Message		Rpt	Optionality	Descri instruc	ption / Purpose and c ctions	omposition	Validation
						note: 017 Messages of are given priority and to as possible by Networg this status reason with rejected using a 137R the the 017 message. If invalid but in the future	D01 is only to be used where the supplier suspects the site is vacant or where the supplier has no registered customer at the site  D02  D03  D05  D06	
					Cod e	Description	Appointment Possible Y/N	E05  Message will fail validation if
					E01	Re-energise (Not NPA related)	Y N if remote	Current Meter Point status held by Networks is DR and one of following codes is provided:
					E02	Re-energise (NPA related)	Y N if remote	• D01 • D02
					E03	Re-energise (Un- metered)	N	• D03
					E05	Re-energise (HH PAYG)	N	• D05 E01/E02/E03 and E05* requests
					D01	De-energise (Supplier Request, Not NPA)	N	are not rejected if energisation status held by Networks is E  The De-Energise HH PAYG D05
					D02	De-energise (NPA related)	N	can only be requested where it is supported by the CTF value i.e.

_	Segment and Field Level Identifier – 017 Message			Optionality	Descri instruc	ption / Purpose and co ctions	omposition	Validation	
					D03	De-energise (Un- metered)	N	- If the value of the CTF is <4 the market message in its entirety will be rejected	
					D04	De-energise Service Removal	N	using MM117R with Reject Reason Code ISR. The	
					D05	De-energise (HH PAYG)	N	De-Energise (HH PAYG) D05 can only be requested where it is supported by	
					D06	De-energise Customer Request	Optional	correct MCC i.e.  - If the value of the MCC	
								does not equal MCC12 the market message in its entirety will be rejected using MM117R with a Reject Code ISR.	
								- The De-Energise (HH PAYG) D05 and Re-Energise (HH PAYG) E05 can only be requested where it is a Whole Current Single Phase Smart Meter. Otherwise the market message in its entirety will be rejected using MM117R with a Reject Code ISR.	
								- The Re-Energise (HH PAYG) E05 can only be requested where it is MCC12.	

Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation	
						Otherwise the market message in its entirety will be rejected using MM117R with a Reject Code ISR  *for E05 requests where the current Meter Point Status is 'E', the E05 request will be executed via site visit.	
f2	FLD	Supplier ID	1	Mandatory	Supplier ID is the identification code of a Supplier. This must be the Supplier to whom the Meter Point is registered.	See Instructions Message will fail validation if this value is omitted or does not match registered Supplier for the Meter Point.	
2	FLD	Supply Agreement (Flag)	1	See instructions	Supply Agreement is a Boolean True / False flag that denotes the existence of a supply agreement with a customer and should be set to 1, i.e. a logical value of True, if there is a Change of Legal entity notified on this message, otherwise it is ignored.	No validation of this field	
2	SEG	Party Contact Details	1	See instructions	Party Contact Details provides details such as contact name, organisation and department, telephone, e-mail and/or fax details enabling the party to be contacted. This allows Suppliers / Networks to forward their contact details in case of queries with the message. Networks require at least one contact number to be provided on 017 Meter Works requests in the Phone number 1 field if the Party Contact Details segment is provided (except where Meter Works type equals M04	No individual validation at segment level	

Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
3	FLD	Phone number 1	1	See instructions	This is the principal phone number of a contact and must be populated if the segment is provided and contact number is known by Sender.	Message will fail validation where this segment is provided but this field is not populated (except where Meter Works Type equals M04)
3	FLD	Phone Ext1	1	Optional	This is the principal phone number overflow field for storing number extensions where applicable	No individual validation of this field.
3	FLD	Phone number 2	1	Optional	This field can be used for the secondary phone number where this is required.	No individual validation of this field.
3	FLD	Phone Ext2	1	Optional	This is the secondary phone number overflow field for storing number extensions where applicable.	No individual validation of this field.
3	FLD	Fax	1	Optional	This field is intended to store a Fax telephone number where applicable	No individual validation of this field.
3	FLD	Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable	No individual validation of this field.
3	FLD	Email	1	Optional	This field is intended to store electronic mail address details where applicable	No individual validation of this field.
2 FLD	Change of Tenant / Legal Entity		1	Mandatory	Change of Tenant/Legal Entity is a Boolean True / False flag that signifies that a new customer has moved into the Meter Point Address. This flag must only be set to 1, i.e. a logical value of True,	Message will fail validation if this flag is not present.  Where this flag is set to 1 i.e. a logical value of True the

Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
				where Supplier wishes to signify a Change of Legal Entity.	following segment becomes mandatory:	
					CoLE flag is mandatory on Non-NPA Re- Energisation requests except where site was previously De-Energised for reason of De- energise (HH PAYG)	Customer Name Segment
					Re-Energisation for reason of NPA or HH PAYG will be rejected where CoLE flag is set to 1 i.e. a logical value of true	
2	FLD	Request Status	1	Mandatory	This item defines the status of the request being made in the message. For 017 messages this must be set to either <b>I</b> - initiate or <b>W</b> - withdrawn. Request status should only be set to <b>W</b> where a previous 017 has been sent and no confirmation of site works has been received back, (306 / 307 and 106E / 106D messages) and Supplier wishes to cancel that previous instruction. 017 withdrawn messages should mirror the data sent on the previous 017 in all other respects including the Market Participant Business Reference Number.	Mandatory Message will fail validation if item is not set to either I - initiate or W- withdrawn. Request status should only be set to W where a previous 017 has been sent and Supplier wishes to cancel that instruction. If an initiated and Withdrawn request cannot be matched on receipt of a withdraw 017 this will be rejected using rejection reason IID.
2	FLD	Appointment Date	1	Optional	The date on which a supplier requests an appointment to be made with the customer. Suppliers can request appointments for the following working day up to <b>1400Hrs</b> on the day of making the appointment and on receipt of the message by Networks when requesting an	Where this item is populated, the following validation takes place:  • Where an appointment is selected for a Meter Point Status Reason for which no appointment is available the

Market Message Guide - Meter Works Baseline V6.1

Segment and Field Level Identifier – 017 Message		Optionality	Description / Purpose and composition instructions	Validation
			appointment date. Where an appointment is requested both the Appointment Date and Appointment Time slot must be provided.	appointment will be rejected using a 137R but the work instruction is still carried out.  Appointments will be rejected where De-energisation is requested for the following reasons:  De-energise (Supplier request, not NPA related) De-energise (NPA related) De-energise (Service Removal) De-energise (HH PAYG)  Appointments will be rejected where Re-energisation is requested for the following reasons: Re-energise (Not NPA related), that can be completed remotely Re-energise (Not NPA related), that can be completed via site visit and service installation is required Re-energise (NPA related), that can be completed remotely Re-energise (NPA related), that can be completed remotely Re-energise (HH PAYG)

Segment and Field Level Identifier – 017 Message		Rpt	Optionality	Description / Purpose and composition instructions		Validation	
							A 137R Appointment Rejection message will be sent to Supplier if a minimum of notice from receipt of this message by Networks is not provided (See composition notes)
2	FLD	Appointment Time Slot	1	Optional	The requested time period for an appointment. This field must be set to one of the following values where an appointment is requested:  A01  AM (Morning Appointment)		The message will fail validation if this item does not match one of the valid code values.
					A02	PM (Afternoon Appointment)  All-day Appointment	
						Status Reason for further rules	
2	FLD	Access Arrangements	1	Mandatory	Access arrangements are the arrangements provided by a customer specific to a particular request for work. Suppliers should provide as much detail as possible here so as to improve the chances of gaining access to carry out the requested work.		The message will fail validation (Rejection reason IID) where this field is blank.
					Where a meter and/or service removal is also required Suppliers are requested to populate this field with the specific meter and/or service removal requirement. This field must be populated with some form of text even if this is "N/A."		
					Where a mobile phone number is provided in this field, it will be used to contact the customer to		

_	Segment and Field Level Identifier – 017 Message			Optionality	Description / Purpose and composition instructions	Validation
					arrange access in the event of a remote energisation failure that requires a site visit.	
2	FLD	Access Instructions	1	Optional	Access Instructions is text for standing instructions for Networks access to the metering. This field should only be provided by suppliers where they are creating new access instructions at a change of legal entity.	This field is ignored if COLE is flagged as N.
2	FLD	Tariff Configuration Code	1	Optional	Not used post System Separation	No validation on this field
2	FLD	Appointment Id	1	Optional	Not used post System Separation	No validation on this field
2	FLD	Economic Activity Indicator	1	Optional	Economic Activity Indicator is a code indicating the type of activity undertaken by the customer in the premises. This item should only be provided by Suppliers where a Change of Legal entity is being notified on this message and must match one of the allowed values for this code. See list of data codes for valid entries here.	This field is ignored if it does not match one of the allowed values.  Validation to be added at backend system to.
2	FLD	Technical Contact Name	1	See instructions	This is the name of a person available for contacting. This field must be provided where Technical contact details are being provided at COLE.	No individual validation of this field
2	FLD	Company Authorised Officer	1	See instructions	This is a person authorised by a company to sign connection agreements. This item must be sent if the message includes a Change of Legal Entity and involves a company / organisation moving into the premises and it is known by the Supplier.	No individual validation of this field

	Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
2	SEG	Techn	ical Contact Details	1	See instructions	This segment refers to the technical contact phone numbers for a technical representative. This segment must be populated where Suppliers are creating new technical contact details for an MPRN at change of legal entity	No individual validation at segment level
	3	FLD	Phone number 1	1	See instructions	This is the principal phone number of a Technical contact and must be populated by Supplier	No individual validation of this field
	3	FLD	Phone Ext1	1	See instructions	This is the principal phone number overflow field for storing number extensions where applicable	No individual validation of this field
	3	FLD	Phone number 2	1	Optional	This field can be used for the secondary phone number where this is required.	No individual validation of this field
	3	FLD	Phone Ext2	1	Optional	This is the secondary phone number overflow field for storing number extensions where applicable.	No individual validation of this field
	3	FLD	Email	1	Optional	This field is intended to store electronic mail address details where applicable	Message will fail validation if email is not structured to the following rules: A mail address may contain the character @ only once There must not be a full-stop at the beginning There must not be a full stop immediately before the character @ There must not be a full-stop immediately after the character @ There must not be a full-stop immediately after the character @ There must not be a full-stop at the end of the address There must not be two subsequent full-stops in the address There must be no blank character in the address Where an invalid email address is received on an 017 with CoLE, the

Segn Mess		d Field	Level Identifier – 017	Rpt	Optionality	Description / Purpose and composition instructions	Validation
							message in its entirety will be rejected via MM117R with Reject Reason EMA.
	3	FLD	Fax	1	Optional	This field is intended to store a Fax telephone number where applicable	No individual validation of this field
	3	FLD	Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable	No individual validation of this field
2	SEG	Stree	et Type Address (Technical Contact)	1	See instructions	Street type address provides details such as Street Name, House no etc. This segment is mandatory at change of legal entity where a street type address is being provided as part of Technical Contact details.	No individual validation at segment level
	3	FLD	C/O Name	1	Optional	This is the name to which correspondence can be addressed where this is different to the contact name.	No individual validation of this field
	3	FLD	Unit No.	1	Optional	This field can be used to populate information relating to the unit, flat or apartment number that can be part of an address	No individual validation of this field
	3	FLD	Addr Line 1	1	Optional	This field can be used as overflow for address details	No individual validation of this field
	3	FLD	Addr Line 2	1	Optional	This field can be used as overflow for address details	No individual validation of this field
	3	FLD	House No.	1	Optional	This can be used to populate the number of a premises given as part of an address	No individual validation of this field

Segment and Message	Segment and Field Level Identifier – 017 Message			Optionality	Description / Purpose and composition instructions	Validation
3	FLD	Street	1	Mandatory	This field stores information relating to the street part of an address and must be populated where street type address is being provided.	Message will fail validation where the segment is provided and this field is omitted.
3	FLD	Addr Line 4	1	Optional	This field can be used as overflow for address details	No individual validation of this field
3	FLD	Addr Line 5	1	Optional	This field can be used as overflow for address details	No individual validation of this field
3	FLD	Postal Code	1	Optional	This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.  They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each Eircode is comprised of seven uppercase alpha/numeric characters.	No individual validation of this field
3	FLD	City	1	Optional	Used to populate the details of which City an address resides in where appropriate	No individual validation of this field
3	FLD	County - Ireland	1	See instructions	A field denoting the county in Ireland in which an address resides. This field must be populated if the Technical contact address is in Ireland See the list of data codes for permissible values here.	This item must match one of the allowed code values where this item is populated. See Data codes for allowed list of Irish Counties codes.

_	Segment and Field Level Identifier – 017 Message			Rpt O	Optionality	Description / Purpose and composition instructions	Validation
	3	FLD	County / State	1	Optional	This denotes the county in which an address is situated. This is a free text 40 character field for use in non – Irish Addresses.	No individual validation of this field.
	3	FLD	Country	1	See instructions	A field that makes up part of an address denoting in which country the address resides. See the list of data codes for permissible values here. This field must be populated where a Technical Contact Address is provided.	A field that makes up part of an address denoting in which country the address resides. See the list of data codes for permissible values here. Message will fail validation if Street Type Address (Technical contact) Segment is provided and this item is omitted.
2	2 FLD Medical Equipment Special Needs Details		01	See Instructions	A code indicating the type of medical equipment special needs that a customer has. This item must be provided by Suppliers where they are notifying a change of Legal Entity and the customer moving in has Medical Equipment Special Needs. The allowed values to be used by Suppliers are as follows: 03 – Life Support 04 – Non Life Support 05 - Medical Institution	Where COLE flagged as Y and this item is populated - This message will fail validation if item does not match one of permissible values.	
2	FLD	Displa	y on Extranet	01	See Instructions	A Boolean message flag to indicate whether the Priority Services Register code(s) for the MPRN should be displayed on the ROI MP Extranet and the DOM\$_CUST Downloadable Meter Point Details File. This field is mandatory if either Medical Equipment Special Needs codes 0003 or	No individual validation of this field

_	Segment and Field Level Identifier – 017 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
						0004 are populated on this message and this flag should be 'Y' or 'N'.	
2	SEG	Custo	mer Service Special Needs	0 N	Optional	Add new segment to carry one or more Customer Special Needs Codes	
	3	FLD	CustomerServiceDetailsC ode	1 N	Mandatory	A code or set of codes indicating the type of special customer service need(s) that a customer has.  If the customer has special customer service needs then the relevant code or codes should be selected from the following:  • 0001 Visually Impaired  • 0002 Speech Impaired	One or more customer special needs codes as provided by the Supplier will be validated against the permitted list. If the message is fully valid, then a 306 or 307 market message will issue but will not specifically list the code or codes provided (as today for a single code). If any of the codes provided is invalid, then a 117R market message will issue with a single Reject Reason Code of DIJ.
						<ul> <li>0003 Hearing Impaired</li> <li>0004 Elderly</li> <li>0005 Language Difficulty</li> <li>0006 Learning Difficulty</li> <li>0007 Mobility Impaired</li> <li>0008 Dexterity Impaired</li> <li>0009 Mental Health</li> </ul>	Where COLE flagged as Y and this item is populated - this message will fail validation if supplied code or set of codes does not match the permissible values.  New code 0010 Other is included in the schema but should not be selected by Market Participants  Where the code 0010 Other is submitted on an 017, the message, in its entirety, will be rejected using

Segn		d Field Level Identifier – 017	Rpt Optionality	Optionality	Description / Purpose and composition instructions	Validation
					0010 Other  New code 0010 Other is included in the schema but should not be selected by Market Participants.	the 117R , with the Reject Reason Code IID.
2	FLD	Market Participant Business Reference	1	Mandatory	This is the Suppliers number given as reference in the request. This will be used in future contact with Suppliers to reference the request. Where a message is sent to withdraw a request then the reference number provided on the initiating and withdrawing request must be the same.	Message will fail validation if this item is not provided (Rejection reason IID).
2	FLD	Required Date	1	Optional	If this field is omitted a date as soon as possible is assumed by Networks.	No individual validation of this field
2	SEG	Smart Data Services	01	Optional	Segment to carry Smart Data Services	Once there are Smart Data Services this segment must be present otherwise the message will be rejected on 117R with Reject Reason Code SCI This segment is only valid where a smart Meter is present and Meter Point Status on the message is E otherwise the message in its entirety will be rejected on 117R with Reject Reason Code NSM  This segment is not valid where a Smart Meter is present and Meter Point Status on the message is D.

Segment and Field Level Identifier – 017 Message	Rpt	Optionality	Description / Purpose and composition instructions	Validation
3 FLD Smart Data Services Code	1	Mandatory	This field is populated where a Smart Data Service is being requested  The valid codes are: .  01 - Interval Services  02 - Non Interval Services	Where the Smart Data Service Code field is populated - this message will fail validation if:  Where the Smart Data Service Code is populated and the smart meter is MCC02, the 117R will issue with Reject reason code 'IA'.  Both the Smart Data Services Code and Smart Non Participation Code are populated, the 117R will issue with Reject Reason Code ISR  The Smart Data Services Code value requested is not supported by the CTF value i.e.  If the value of the Smart Data Services Code field is 01 then CTF must be 03 or 04  If the value of the Smart Data Services Code field is 02 then CTF must be 01,02,03 or 04  Otherwise a 117R will issue with Reject Reason Code SCI. Where Smart Data Services are requested on a MM017 E05 Re- Energisation request, the MM117R will issue with Reject Reason Code SCI – Smart Configuration Invalid

Segment and Fi Message	Segment and Field Level Identifier – 017 Message				Description / Purpose and composition instructions	Validation
2 [1	I.D.	Motor Configuration	1	Mandatary	The Motor Configuration Code (Required) in a	Magaga will fail validation and
3 FL	LD	Meter Configuration Code (Required)	1	Mandatory	The Meter Configuration Code (Required) is a code on a message to the supplier to indicate the functionality required by the Supplier to be delivered by the combination of registers physically installed at a meter point. It does not describe the technical attributes of the meter(s).	Message will fail validation and 117R will issue with Reject Reason Code SCI where:  The required MCC does not correspond with the relevant Smart Data Services Code Field or  The MCC specified is a Legacy MCC  Allowable Combinations:  Smart Data Required MCC Service Code  Interval Data MCC12  Service (01)  Non Interval MCC16  Data Service(02)  Message will fail validation and

Segm		d Field Level Identifier – 017	Rpt	Optionality	Description / Purpose and composition instructions	Validation
						117R will issue with Reject Reason Code IMF where:
						New MCC's 13 ,14, 15, 17,18,19,20 are included in the schema but should not be selected by Market Participants
						Where any of the MCC's 13,14,15,17,18,19,20 are submitted on an 017, the message, in its entirety, will be rejected using the 117R, with the Reject Reason Code IMF
2	FLD	Smart Non Participation Code	1	Optional	A code indicating the type of Smart Non Participation customer detail to be removed.  The relevant code should be selected from the following:  02 - Non - Technical Non Participation 03 - Multiple Visits No Access	If Meter Point Status on the message is E then Smart Non Participation code, as provided by the Supplier, will be validated against the permitted list.  If the message is fully valid, then a 114 market message will issue.  If the code provided is invalid, then a 117R market message will issue with a Reject Reason Code of SNP
						If the Meter Point Status on the message is D and Smart Non Participation code is provided then a 117R market message will issue with a Reject Reason Code of SNP.

Segment and Field Level Identifier – 017 Message			Optionality	Description / Purpose and composition instructions	Validation
					Only the removal of 02 and 03 codes is permissible.  Where removal of Smart Non Participation code is requested as part of a request for Re-Energisation with CoLE then a 117R will issue with reason code SNP.

### 1.10 117D Change in Energisation Status Delay

### **Purpose / Description of message**

The 117D Change of Energisation Status Delay message is sent by the ESB Networks business to Market registered Supplier to advise them that there is a delay in carrying out their request to change the energisation status at a meter point sent on a 017 message.


The 117D is sent on receipt of a 017 in the following circumstances:

- Completion Certificate required
- Connection Agreement required
- Application Form required
- Further investigation

Message 117D is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 10	Re-energisation	To notify a delay in carrying out a request to change the energisation status to 'E'

### Data hierarchy diagram

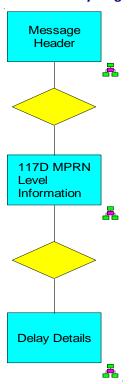

### **Message Structure**

This section describes the structure of the 117D message. The purpose of the message segments and data items is explained and any rules for composition outlined.

Segm	ent and	Field Le	evel Identifier – 117D Message	Rpt	Optionality	Description / Purpose and composition instructions				
1 Me	ssage H	leader		1	Mandatory	Refer to common data segments document				
1 Me	1 Meter Point Details				Mandatory					
2	FLD	MPRN		1	Mandatory	•	entifying reference number for the Meter Point to be elements of MPRN will be provided.			
2	SEG	Delay [	Details	1 N	Mandatory	An instance of this segment is provided for each Delay reason provided.				
	3 FLD Delay Reason		1 Mandatory		Delay Reason will provide details of the reason for delays in performing requests for changes to energisation status requested by the supplier. At least one delay reason will be provided. The following are valid Delay Reasons for this message:  DE01					
2	FLD	Request Status			Mandatory	This item defines the status of the request being made in the message. For 117D messages this will always be set to I - initiate.				
2	FLD	Market	Participant Business Reference	1	Mandatory	This is the number that was given as reference on the 017 message. It will be referenced back here on the117D message.				

#### 1.11 117R Meter Point Status Request Rejection

#### **Purpose / Description of message**

The 117R Meter Point Status Request Rejection message is sent by the ESB Networks business to Supplier to reject a requested change to the energisation status at a meter point that was notified by that Supplier on a 017 message.

The 117R is sent on receipt of a 017 in the following circumstances:

- Where an invalid MPRN is sent on the 017
- Where an MPRN with an invalid MPRN status is sent on the 017. (See rules on 017)
  - The 017 message will always be rejected where the MPRN is found to carry a status of terminated
  - The 017 would also be rejected where the MPRN is found to carry the same status as is being requested in certain circumstances (See 017 Meter Point Status validation instructions).
- Where the Supplier ID sent on the 017 is not known
- Where the Supplier is found not to be the Registered Supplier for the MPRN provided on the 017
- Where a Change of Supplier is found to be in progress for non PAYG requests.
- Where Incorrect / Incomplete data is sent on the 017.
- Where a change of MIC is detected at the Meter Point.
- Where a PAYG De-Energise request is received outside the De-Energisation Period the message will fail validation generating a 117R with Reject Reason Code ODP.
- Where a Non-NPA or NPA De-Energise request is received outside the De-Energisation Period the message will fail validation generating a 117R with Reject Reason Code ODP.
- Where the CustomerServiceDetailsCode 0010 Other is submitted on an 017, the message, in its entirety, will be rejected using the 117R, with the Reject Reason Code IID.

- Where there is a request for Smart Data Services and a smart Meter is not present the message in its entirety will be rejected on 117R with Reject Reason Code NSM.
- Where the request for Smart Data Services and the requested MCC are not consistent the message in its entirety will be rejected using the 117R, with the Reject Reason Code SCI.
- Where any of the MCC's 13,14, 15, 17,18,19,20 included in the schema are submitted on an 017, the message, in its entirety, will be rejected using the 117R, with the Reject Reason Code IMF.
- Where there is a request for Smart Non Participation changes and a smart Meter is present the message in its entirety will be rejected using the 117R, with the Reject Reason Code SNP.
- Where there is a request to remove a Smart Non Participation Code and the Meter Point Status field is D on the 017MM the message in its entirety will be rejected on 117R with Reject Reason Code SNP.
- Where there is a request for Smart Data Services and the Meter Point Status field is D on the 017MM the message in its entirety will be rejected on 117R with Reject Reason Code SCI.
- Where the Smart Data Service Code and Smart Non Participation Code is present on the 017MM, the message in its entirety will be rejected on 117R with Reject Reason Code ISR.
- Where invalid email address is received on the 017MM with CoLE the message in its entirety will be rejected on 117R with Reject Reason Code EMA.
- Where there is a request for Re-energisation via MM017 and Smart Data Services are present at the MPRN, but are not populated on the MM017, the message in its entirety will be rejected on 117R with Reject Reason Code SCI.
- Where there is a request for a Re-energisation with CoLE via MM017 and removal of Smart Non Participation Code is also requested, the message in its entirety will be rejected on 117R with reason code SNP.
- Where a De-energise (HH PAYG) request is for a site with a current Meter Point Status of D or DR, the message in its entirety will be rejected on MM117R with Reject Reason Code IMS.
- Where a De-energise (HH PAYG) request is for a Site with a CTF less than CTF 04 the message in its entirety will be rejected on 117R with Reject Reason Code ISR

- Where a De-energise (HH PAYG) request is for any MCC except MCC12 the message in its entirety will be rejected on 117R with Reject Reason Code ISR.
- Where there is a request for a De-energise (HH PAYG), and it cannot be carried out due to unavailability of Comms, the message in it's entirety will be rejected on 117R with Reject Reason Code RCF
- Where there is a request for a De-energise (HH PAYG) and the customer is a vulnerable customer on the Priority Services Register, the message in its entirety will be rejected on 117R with Reject Reason Code VUL
- Where a De-energise (HH PAYG) request includes a change to Smart Data Services, the message in its entirety will be rejected on 117R with Reject Reason SCI
- Where a De-energise (HH PAYG) request is for a customer where a Whole Current Single Phase Smart Meter is not installed the message in its entirety will be rejected with Reject Reason Code ISR
- Where there is a request for a Re-energise (HH PAYG) and the current Meter Point Status is 'D', the message in its entirety will be rejected on 117R with Reject Reason Code IMS
- Where a Re-energise (HH PAYG) request is for any MCC except MCC12 or MCC01/MCC16 requesting a move to MCC12, the message in its entirety will be rejected on 117R with Reject Reason Code ISR.
- Where there is a request for a Re-Energise (HH PAYG) and CoLE = Y, the message in its entirety will be rejected on 117R with Reject Reason Code IID
- Where a Re-Energise (HH PAYG) request is for a customer where a Whole Current Single Phase Smart Meter is not installed the message in its entirety will be rejected on 117R with Reject Reason Code ISR
- Where a Re-Energise (HH PAYG) request includes a change to Smart Data Services, the message in its entirety will be rejected on 117R with Reject Reason Code SCI
- Where a De-energisation is in progress as a result of MM017 received from the Supplier, ESBN will reject any subsequent MM017 Deenergisation request received on 117R with Reject Reason Code IA

- Where a Re-energisation is in progress as a result of MM017 received from the Supplier, ESBN will reject any subsequent MM017 Reenergisation requests received on 117R with Reject Reason Code IA
- De-energisation requests for reason of De-energise (HH PAYG) requested by the Old Supplier on the date of CoS processing will be rejected on MM117R with Reject Reason CIP CoS in progress.
- Where a Re-energisation is in progress that has been initiated by ESBN to complete a Change of Supplier, ESBN will reject any MM017 E05 Re-energisation requests received from the Supplier on 117R with Reject Reason Code CIP
- Where a request to De-Energise via MM017 with Meter Point Status Reason Code D04 De-energise (Service Removal) is received and DSO records indicate that the service is already removed, ESBN will reject on 117R with Reject Reason IA Invalid Action.

Message 117R is used in the following Market Processes:

Process	Number and Title	Use of Message				
MPD 9	De-energisation	To notify a rejection of a request to change the meter point status to 'D'				
MPD 10	Re-energisation	To notify a rejection of a request to change the meter point status to 'E'				

### **Data Hierarchy Diagram**



### **Message Structure**

This section describes the structure of the 117R message. The purpose of the message segments and data items is explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	1 Message Header			Mandatory	Refer to common data segments document
1 Me	ter Poin	t Details	1	Mandatory	
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point to be registered. All elements of MPRN will be provided.
2	SEG	Rejection Details	1 N	Mandatory	An instance of this segment is provided for each rejection reason provided.
					Only one reject reason will be populated in the following scenarios
					<ul> <li>Where the CustomerServiceDetailsCode 0010 Other is submitted on an 017, the message, in its entirety, will be rejected with the Reject Reason Code IID.</li> </ul>
					<ul> <li>Where there is a request for Smart Data Services and the Meter Point Status field is D on the 017MM the message in its entirety will be rejected on 117R with Reject Reason Code SCI.</li> </ul>
					<ul> <li>Where there is a request for Smart Data Services and a smart Meter is not present the message in its entirety will be rejected on 117R with Reject Reason Code NSM.</li> </ul>
				Where the request for Smart Data Services and the requested MCC are not consistent the message in its entirety	

Segment and Field Level Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
			will be rejected using the 117R, with the Reject Reason Code SCI.
			<ul> <li>Where any of the MCC's 13,14, 15, 17,18,19,20 included in the schema are submitted on an 017, the message, in its entirety, will be rejected using the 117R, with the Reject Reason Code IMF.</li> </ul>
			<ul> <li>Where there is a request for Smart Non Participation changes and a smart Meter is present the message in its entirety will be rejected on 117R with Reject Reason Code SNP.</li> </ul>
			<ul> <li>Where there is a request to remove a Smart Non Participation Code and the Meter Point Status field is D on the 017MM the message in its entirety will be rejected on 117R with Reject Reason Code SNP.</li> </ul>
			<ul> <li>Where both the Smart Data Service Code and Smart Non Participation Code are populated, 117R will issue with Reject Reason Code ISR</li> </ul>
			<ul> <li>Where Smart Data Services exist but haven't been requested, the message in its entirety will be rejected on 117R with Reject Reason Code SCI.</li> </ul>
			<ul> <li>Where an MM017 with status 'W' is received however no existing switch document exists against the Market Participant Business Reference, the MM017 with status 'W' is rejected via MM117R with Reject Reason Code IID</li> </ul>
			Where there is a request for De-energise (HH PAYG) and the current MPRN status is D or DR, the message in its entirety will be rejected on 117R with Reject Reason IMS

Segment and Field Level Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
			Where there is a request for De-energise (HH PAYG) and the CTF is less than CTF04 the message in its entirety will be rejected on 117R with Reject Reason Code ISR.
			<ul> <li>Where a De-energise (HH PAYG) request is for any MCC except MCC12 the message in its entirety will be rejected on 117R with Reject Reason Code ISR.</li> </ul>
			<ul> <li>Where a De-energise (HH PAYG) request includes a change to Smart Data Services, the message in its entirety will be rejected using Reject Reason SCI</li> </ul>
			<ul> <li>Where there is a request for a De-energise (HH PAYG), and it cannot be carried out due to unavailability of Comms a MM117R rejection message will Issue with Reject Reason Code RCF</li> </ul>
			<ul> <li>Where a De-energise (HH PAYG) request is for a customer where a Whole Current Single Phase Smart Meter is not installed, the request in its entirety will be rejected using the Reject Reason ISR</li> </ul>
			Where there is a request for a Re-energise (HH PAYG) Re-energisation and the current MPRN status is D, the message in its entirety will be rejected on 117R with Reject Reason IMS
			Where a Re-energise (HH PAYG) request is for any MCC except MCC12 the message in its entirety will be rejected on 117R with Reject Reason Code ISR.

Segment and Field Level Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
			Where there is a request for a Re-Energise (HH PAYG)     Re-energisation and CoLE = Y, the message in its     entirety will be rejected on 117R with Reject Reason IID
			Where a Re-Energise (HH PAYG) request includes a change to Smart Data Services, the message in its entirety will be rejected on 117R with Reject Reason SCI
			Where a Re-energise (HH PAYG) request is for a customer where a Whole Current Single Phase Smart Meter is not installed, the request in its entirety will be rejected using the Reject Reason ISR
			<ul> <li>Where a change in Energisation Status is in progress for the requested Meter Point Status, the MM017 De- Energisation request will be rejected in its entirety on 117R with Reject Reason IA</li> </ul>
			Where a change in Energisation Status is in progress for the requested Meter Point Status, the MM017 Re- Energisation request will be rejected in its entirety on 117R with Reject Reason IA
			Where a HH PAYG De-energisation request is received from the Supplier and an SoLR event is in progress, the request will be rejected in its entirety using Reject Reason LOC.
			Where a request to De-Energise via MM017 with Meter Point Status Reason Code D04 - De-energise (Service Removal) is received and DSO records indicate that the service is already removed, the MM017 request in its

Segme	Segment and Field Level Identifier – 117R Message		Rpt	Optionality	Description / Purpose and composition instructions		
						entirety will be rejected on MM117R with Reject Reason IA.	
						<ul> <li>Where an invalid email is received on an 017 with CoLE, the message in its entirety will be rejected on 117R with Reject Reason Code EMA.</li> </ul>	
						<ul> <li>Where there is a request for a Re-energisation with CoLE via MM017 and removal of Smart Non Participation Code is also requested, 117R will issue with reason code SNP.</li> </ul>	
						<ul> <li>Where there is a request for Smart Data Services and the smart meter is MCC02, the 117R will issue with Reject reason code 'IA'.</li> </ul>	
1	3 FLD Reject Reason		Reject Reason	1	Mandatory	Reject Reason is a code to identify why data was rejected. The valid reject reasons for this message are as follows:	
						IMP - Invalid MPRN (MPRN does not exist or is for a Grouped Unmetered site) or is invalid for this jurisdiction	
						IMS - Invalid MPRN status	
						SNK - Supplier not known	
						SNR - Supplier Not registered to MPRN	
						CIP - CoS in progress	
						IID - CoLE = 'N' and ESBN systems indicate no customer at the site	
						IA - Invalid Action	
						IA – Invalid Action - Where there is a request for Smart Data Services and the smart meter is MCC02.	
						RCF – Remote Change Failed	

Segment and Field Level Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
			IMF - Invalid Meter Configuration code
			SCI –Smart Configuration Invalid
			NSM –No Smart Meter
			ISR – Inconsistent Service Request
			EMA - Invalid Email Address
			MIC - MIC Change detected
			IID – Invalid/Incomplete Data
			<b>DIJ</b> – data invalid for jurisdiction (DIJ remains in the schema post System Separation)
			SNP – Smart Non Participation details invalid
			VUL – Vulnerable Customer
			A de-energise (Supplier requested, not NPA related) (D01) or de- energisation NPA (D02) request has been made for where either:
			A vulnerable customer registered on the Priority Services     Register (Medical Equipment Special Needs Life-Support and     Non-life Support) for all year around     Or
			A vulnerable customer registered on the Special Services Register (Customer Services Special Needs) from 1st November to 31st March
			A De-energise (HH PAYG) D05 request has been made for where: A vulnerable customer registered on the Priority Services Register (Medical Equipment Special Needs Life-Support and Non-life Support) for all year around
			ODP – Outside De-Energisation Period

Segm	ent and	Field Le	evel Identifier – 117R Message	Rpt	Optionality	Description / Purpose and composition instructions
						LOC – Supplier of Last Resort Lock-In.
2	FLD	Reques	st Status	1	Mandatory	This item defines the status of the request being made in the message. For 117R messages this will be set to I - initiate.
2	FLD	Market Participant Business Reference			Mandatory	This is the number that was given as reference on the 017 message.  It will be referenced back here on the 117R message.

#### 1.12 030 Meter Works Request

### Purpose / Description of message/Validation

The 030 message is sent by Supplier to the ESB Networks business to request Meter works at a Meter Point to which they are the Registered Supplier. DSO will undertake validation of the message at segment and field level

The following types of meter works can be requested on this message:

- Request for a new Meter Configuration at a Meter Point
- Request for a special test in-situ at a Meter Point
- Request for a major Meter test at a Meter Point
- Requests to Install Interval Metering and Communications Metering at a Meter Point
- Requests to exchange MD for Multi Function Metering (MFM) plus signals


- Requests to install signals at a Meter Point with existing MFM
- Requests to remove token metering at a Meter Point
- Requests to install token metering at a Meter Point
- Request to exchange a token meter at a Meter Point
- Requests to reset or check token meter installed at a Meter Point.

Please note: Meter Works requests involving Token meters are not selectable by non PES Suppliers.

Message 030 is used in the following Market Processes:

Process	Number and Title	Use of Message				
MPD 11	Changes to Meter Configuration	To request a change of meter configuration				
MPD 35	Change of metering from Non Interval to Interval	To request a change of metering from Non Interval to Interval				

### **Data Hierarchy Diagram**

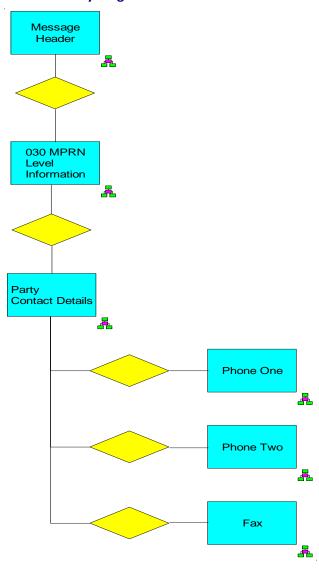

Message Structure/Validation

	ent and Messaç	Field Level Identifier ge	Rpt	Optionality	Description / Purpose and composition instructions	Validation	
1 Me	ssage F	leader	1 Mandatory		Refer to common data segments document		
1 Me	1 Meter Point Details			Mandatory			
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point. All elements of MPRN must be provided.	Mandatory Message will fail validation if all elements of MPRN are not provided. If an open change of Supplier is detected for the MPRN a 130R is sent rejecting the 030 request.	
2	FLD	Market Participant Business Reference	1	Mandatory	This is the Suppliers number given as reference in the request. This will be used in future contact with Suppliers to reference the request. Where a message is sent to withdraw a request then the reference number provided on the initiating and withdrawing request must be the same.	Message will fail validation if this reference number is not provided.	
2	FLD	Token Meter Details 1 See Token by a si inform credit where installed			Token meter details relate to token meter information used by a site operative to program token meters. This information is made up of values for total debt, emergency credit and recovery rate. This field is only to be populated where a token meter is installed or is requested to be installed.  The field is made up as follows:  • The first set of values are equal to currency - EUR (Char 3)	Message will fail validation where Meter works type is equal to M08, M09 or M10 and this item is not provided.	
					<ul> <li>The second set of values are Total amount of debt (Num 7)</li> </ul>		

	ent and Messag	Field Level Identifier ge	Rpt	Optionality	Description /	Purpose and composition in	Validation	
2	FLD	Meter Works Type	1	Mandatory	• The th 6) • The fo 6) • For all fall to	Mandatory Message will fail validation where this item is not		
					types below:	Description	Appointment possible Y/N Dependant on	populated with a valid Meter works type code.  Message will fail where a Meter Works Type of "05 - Exchange MD
					M01	New MCC	specific work instruction beir requested also where permits, wiring certifical Application for required no appointment is available.	If the current MCC at the MPRN is not MCC05, MCC06, MCC10 or MCC11,
					M02 Special test in-situ Y		Υ	- OR -
					M03	Major Meter test	N	If the current MCC at the MPRN is MCC10 or MCC11 but the DUoS Group is DG5.

Segment and Field Level Identifier - 030 Message			Rpt	Optionality	Description / I	Purpose and composition ins	tructions	Validation
					M04	Install Interval Metering and Communications	N	Message will fail where a Meter Works Type of "01 – New MCC" is requested and where the following
					M05	Exchange MD for MFM plus signals	N	rule applies:  If the Current MCC at the
					M06	Install signals - existing MFM	N	MPRN is MCC12 or MCC16 and MCC01 is
					M07	Remove token meter	Υ	requested
					M08	Install token meter	Υ	If there is a Smart Meter     installed and the Supplier
					M09	Token meter fault / Exchange	Υ	requests an MCC that requires a change to Smart Data Services
					M10	Reset token meter	Υ	The rejection message will carry a
								Reject Reason Code of "IMF - Invalid Meter Configuration code".
2	FLD	Meter Configuration Code	1	See instructions	functionality recombination of	ation Code is a code to indicate quired by the Supplier to be del registers physically installed at cribe the technical attributes of	ivered by the a meter point.	Message will fail validation where Meter Works Type is set to <b>M01</b> and a valid MCC code is not provided.
2	FLD	Supplier ID	1	Mandatory	Supplier ID is the identification code of a Supplier. This must be the Supplier to whom the Meter Point is registered.  Message will fail validation where a valid Supplier ID to which the Meter Point is registered is not provided.			

Segment and Field Level Identifier – 030 Message					Optionality	Description / Purpose and composition instructions	Validation	
2	SEG	Party (	Contact Details	ails 1 See instructions		Party Contact Details provides details such as contact name, organisation and department, telephone, e-mail and/or fax details enabling the party to be contacted. This allows Suppliers to forward their contact details in case of queries with the work instruction. Networks require at least one contact number to be provided on 030 Meter Works requests in the Phone number 1 field if the Party Contact Details segment is provided (except where Meter Works type equals M04	No individual validation at segment level	
	3	3 FLD Phone number 1		1	See instructions	This is the principal phone number of a contact in Supply and must be populated if the segment is provided (except where Meter Works type equals M04)	Message will fail validation where this segment is provided but this field is not populated (except where Meter Works Type equals M04)	
	3	FLD	Phone Ext1	1	See instructions	This is the principal phone number overflow field for storing number extensions	No individual validation of this Field	
	3 FLD Phone number 2		1	Optional	This field can be used for the secondary phone number where	No individual validation of this Field		
	3	3 FLD Phone Ext2 1 Opti		Optional	This is the secondary phone number overflow field	No individual validation of this Field		
	3 FLD Fax 1 Optional		Optional	This field is intended to store a Fax	No individual validation of this Field			

Segment and Field Level Ide - 030 Message			evel Identifier	Rpt	Optionality	Description / Purpose and composition instructions	Validation
	3	FLD	Fax Ext	1	Optional Optional	This field is intended to  This field is intended to store electronic mail address details	No individual validation of this Field  No individual validation of this
	-			·	·	where applicable	Field.
message. For 030 minitiate or <b>W</b> - withdraw <b>W</b> where a previous 0 to cancel that instruct		This item defines the status of the request being made in the message. For 030 messages this must be set to either I - initiate or W- withdrawn. Request status should only be set to W where a previous 030 has been sent and Supplier wishes to cancel that instruction and no confirmation of work completion has been received on a 332 or 331.	Message will fail validation where this item is not populated with the Value I = Initiate or W = Withdraw. If an initiated and Withdrawn request cannot be matched on receipt of a withdraw 030 this will be rejected using rejection reason IID.				
2	2 FLD Appointment Date		ntment Date	1	Optional	The date on which a supplier requests an appointment to be made with the customer. Suppliers can request appointments for the following working day up to <b>1400Hrs</b> on the day of making the appointment and on receipt of the message by Networks when requesting an appointment date.  Appointments are only valid for certain Meter works types (See Meter Works Type composition instructions for a list of those available for appointment). Where an appointment is requested both the Appointment Date and the Appointment Time Slot must be provided.	Where this item is populated the following validation takes place:  • A 137R Appointment Rejection message will be sent to Supplier if a minimum of notice from receipt of this message by Networks is not provided (See composition notes and 137R Instructions)  Appointment selection will be ignored if an appointment is

Segment and Field Level Identifier – 030 Message			Rpt	Optionality	Description / Purpose and composition instructions			Validation	
									selected for a Meter Works type unavailable for appointment.
2	FLD	Appointment Time Slot	1	Optional	The requested time period for an appointment. This field must be set to one of the following values where an appointment is requested:			The message will fail validation if this item does not match one of the valid code values.	
					A01	AM (Morning	g Appointment)		
					A02	PM (Afterno	on Appointment)		
					A03	All-day Appo	pintment		
2	FLD	Access Arrangements	1	Mandatory	Access arrangements are the arrangements provided by a customer specific to a particular request for work. Suppliers should provide as much detail as possible here so as to improve the chances of gaining access to carry out the requested work. This field must be populated with some form of text even if this is "N/A."  Where a Budget Controller is installed at the site, this field has an extended use in that it allows Suppliers to set and reset the financial status, rates and contact details for the installation. In these circumstances, this field must be composed as follows:			The message will fail validation if this field is left blank by Supplier.	
					Unit Format Rate Max Value				
					Rate 1	R1_xx.xx	Cent	99.99	

Segment and Field Level Identifier – 030 Message			Rpt	Optionality	Description / Purpose and composition instructions			Validation	
					Rate 2	R2_xx.xx	Cent	99.99	
					Standing charge*	SC/wk_XX.xx	Euro	99.99	
					Contact 1	T_XXXXXXXXX	Telephone Number		
					Contact 2	T_XXXXXXXXX	Telephone Number		
						on a weekly basis. Sho ding PSO levy, if applic		fixed	
2	FLD	Tariff Configuration Code	1	Optional	Not used post System Separation				No individual validation of this Field
2	FLD	Appointment ID	1	Optional	Not used post System Separation				No individual validation of this Field
2	FLD	Prepayment Type	1	Optional	Not used post	t System Separation			No individual validation of this Field

### **Additional Validation:**

The 030 message will also fail validation if the Meter Point Status = 'D' or 'DR'. Refer to 'IID' Rejection Reason Code on 130R message.

### 1.13 130D Meter Works Request Delayed

### **Purpose / Description of message**


The 130D Meter Works Request Delayed message is sent by the ESB Networks business to Market registered Suppliers to notify them of a delay to meter works requested on a 030 at a meter point to which they are the appointed Supplier. Meter Works requests can be delayed in the following circumstances:

- Completion (Wiring) Certificate required
- Connection Agreement required
- Application Form required
- Further investigation

Message 130D is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 11	Changes to Meter Configuration	To notify a supplier of delay to the request for a change of meter configuration
MPD 35	Change of metering from Non Interval to Interval	To notify the supplier of a delay to their request a change of metering from Non Interval to Interval

### **Data Hierarchy Diagram**

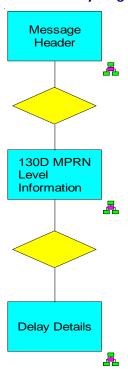

Message Structure - This section describes the structure of the 130D message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segment and Field Level Identifier – 130D Message				Rpt	Optionality	Description / F	Purpose and composition instructions
1 Me	1 Message Header			1	Mandatory	Refer to comm	on data segments document
1 Me	ter Poin	t Details		1	Mandatory		
2	FLD	MPRN		1	Mandatory	·	entifying reference number for the Meter Point to be elements of MPRN will be provided.
2	SEG	Delay Details		1 N	Mandatory	An instance of provided.	this segment is provided for each Delay reason
	FLD Delay Reason		1	Mandatory	performing Met	will provide details of the reason for delays in ter Works requests. At least one delay reason will be following are valid Delay Reasons for this message:	
						DE01	Completion Certificate required
						DE02	Connection Agreement required
						DE03	Application Form required
						DE04	Further investigation
2	2 FLD Request Status		1	Mandatory	This item defines the status of the request being made in the message. For 130D messages this will always be set to I - initiate.		
2	FLD	Market Participant Business Reference		1	Mandatory	This is the number that was given as reference on the 030 message. It will be referenced back here on the 130D message.	

#### 1.14 130R Meter Works Request Rejection

#### **Purpose / Description of Message**

The 130R Meter Works Request Rejection message is sent by the ESB Networks business to Supplier to reject a Meter works 030 request.

The 130R is sent on receipt of a 030 in the following circumstances:

- Where an invalid MPRN is sent
- Where an MPRN with an invalid MPRN status is sent.
  - o The 030 message will be rejected where the MPRN is found to carry a status of terminated
- Where the Supplier ID sent on the 030 is not known
- Where the Supplier is found not to be the Registered Supplier for the MPRN provided on the 030
- Where a Change of Supplier is found to be in progress
- Where Incorrect / Incomplete data is sent on the 030
- Where a change of MIC is detected at the Meter Point
- Where the Meter Configuration code was invalid, where provided.
- Where there is a Smart Meter installed and the Supplier requests an MCC01.
- Where there is a Smart Meter installed and the Supplier requests an MCC that requires a change to Smart Data Services.
- Where the Meter Point is not Interval eligible.

Message 130R is used in the following Market Processes:

Process Number and Title		Use of Message		
MPD 11	Changes to Meter Configuration	To notify a supplier of rejection of the request for a change of meter configuration		
MPD 35	Change of metering from Non Interval to Interval	To notify the supplier of a rejection of the request a change of metering from Non Interval to Interval		

### **Data Hierarchy Diagram**



### Message Structure

This section describes the structure of the 130R message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segment and Field Level Identifier – 130R Message				Rpt	Optionality	Description /	Purpose and composition instructions
1 Message Header				1	Mandatory	Refer to comn	non data segments document
1 Me	1 Meter Point Details			1	Mandatory		
2	FLD	MPRN		1	Mandatory		entifying reference number for the Meter Point to be elements of MPRN will be provided.
2	SEG	Rejection Details		1 N	Mandatory	An instance of provided.	f this segment is provided for each rejection reason
	3	FLD	Reject Reason	1	Mandatory		n is a code to identify why data was rejected. The valid for this message are as follows:
						IMP	Invalid MPRN
						IMS	Invalid MPRN status
						SNK	Supplier not known
						SNR	Supplier Not registered to MPRN
						CIP	CoS in progress
						IID*	Incorrect/Incomplete data
						MIC	MIC Change detected
						IMF	Invalid Meter Configuration Code
						NQE	Not QH eligible
						DIJ**	Data invalid for jurisdiction

Segment and Field Level Identifier – 130R Message				Rpt	Optionality	Description / Purpose and composition instructions
						*IID is also used to reject an 030 message where the Meter Point Status = 'D' (de-energised).  IMP is used where the MPRN is not valid for this jurisdiction.  DIJ** remains in the schema post System Separation
2	FLD	Request Sta	atus	1	Mandatory	This item defines the status of the request being made in the message. For 130R messages this will be set to I - initiate.
2	FLD	Market Parti	icipant Business Reference	1	Mandatory	This is the number that was given as reference on the 030 message. It will be referenced back here on the 130R message.

#### 1.15 137R Appointment Rejection

#### **Purpose / Description of Message**

The 137R Rejection of Appointment message is sent by the ESB Networks business to Supplier to reject an appointment requested on a 017 or 030 message.

Appointments are rejected in the following circumstances:

- Appointments will be rejected if appointments are received after 1400Hrs on date of receipt of message by Networks requesting a next working day appointment
- Appointments will be rejected where Suppliers select an appointment date / time un-available for the route in which the Meter Point address is located
- Appointments will be rejected where Suppliers select an appointment for a call type for which it is invalid to select an appointment (See 017 and 030 composition instructions).
- Where applicable appointments will be rejected where a 117D / 130D has been sent to notify Supplier of a delay to work requested on a 017 / 030.
- Where an appointment has been provided on a PAYG Re-Energisation/ De-Energisation it will be rejected using appointment reject reason code AR01
- Where an appointment has been provided on a De-energise (Supplier Requested, not NPA related) or Re-energise (Not NPA related) request that can be completed remotely, it will be rejected using appointment reject reason AR01
- Where an appointment has been provided on a De-energise (NPA related) or Re-energise (NPA related) request that can be completed remotely, it will be rejected using appointment reject reason AR01
- Where an appointment has been provided on a De-energise (Supplier Requested, not NPA related) or a De-energise (Service Removal) request that is completed via site visit, it will be rejected using appointment reject reason AR01


Retail Market Message G	Guide – Meter	Works
-------------------------	---------------	-------

• Where an appointment has been provided on a Re-energise (Not NPA related) request where the request is completed via site visit and service installation is required, it will be rejected using appointment reject reason AR03.

Message 137R is used in the following Market Processes:

Process Number and Title		Use of Message			
MPD 9	De-energisation	To notify a supplier of a rejection of the appointment on the request for a change of meter point status to 'D' or "DR"			
MPD 10	Re-energisation	To notify a supplier of a rejection of the appointment on the request for a change of meter point status to 'E'			
MPD 11	Changes to Meter Configuration	To notify a supplier of a rejection of the appointment on the request for a change of meter configuration			

#### **Data Hierarchy Diagram**

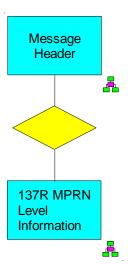

### **Message Structure**

This section describes the structure of the 137R message. The purpose of the message segments and data items is explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier -137R Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	ssage H	eader	1	Mandatory	Refer to common data segments document
1 Me	1 Meter Point Details			Mandatory	
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Appointment Rejection Reason	1	Mandatory	This item provides the reason for the rejection of the Appointment. The valid codes for this are as follows:  AR01 Call type invalid for appt  AR02 Route/Time Combination invalid  AR03 Meter Works Delay  AR04 No available timeslot
2	FLD	Appointment Date	1	Optional	This will be the date that was requested on the 017 / 030.
2	FLD	Appointment Time Slot	1	Optional	The preferred time period for an appointment. This will reflect what was sent on the 017 / 030. See values below:  A01
2	FLD	Market Participant Business Reference	1	Optional	This is the Suppliers reference provided on the 017 / 030 request referenced back to Supplier.

Segment and Field Level Identifier -137R Message			Rpt	Optionality	Description / Purpose and composition instructions	
2	2 F	FLD	Appointment ID	1	Optional	Not used post System Separation

#### 1.16 306 Meter Point Status Change - De-energisation Read

#### **Purpose / Description of Message**

The 306 message is sent to the Registered Supplier of the Non Interval Meter Point.


The message includes notification of the following:

- Confirmation of De-energisation final readings
- Meter and Meter register Information
- Where a Non Interval Meter Point has been de-energised remotely and the re-energisation occurs on the same day the MM306 will not issue
- Where a Non Interval Meter Point has been de-energised via site visit and the re-energisation occurs on the same day the MM306 will be withdrawn

Message 306 is used in the following Market Processes:

Process Number and Title		Use of Message			
MPD 9	De-energisation	To confirm completion of a request for a change of Non Interval meter point status to 'D' or DR'			
MPD 14	Readings Processing Non Interval	To confirm completion of a request for a change of Non Interval meter point status to 'D' or DR'			

### **Data Hierarchy Diagram**

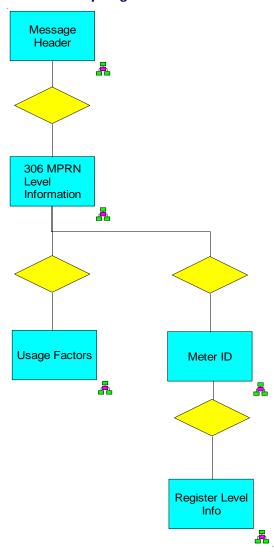

#### **Message Structure**

This section describes the structure of the 306 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segment and Field Level Identifier – 306 Message				Optionality	Description / Purpose and composition instructions
1 Me	1 Message Header			Mandatory	Refer to common data segments document
1 Me	ter Poin	t Details	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the number given as reference on the 017 request referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.
					Note: For the majority of Networks generated service orders there will be no value enter in this field as it is a result of a supplier initiating meter works - networks do not generate a number for this when meter works initiated by them
2	FLD	Networks Reference Number	1	Mandatory	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction.
					The purpose of this field is for use when messages are withdrawn. This field can be used to identify which originating message corresponds with the message being withdrawn

Market Message Guide - Meter Works Baseline V6.1

Segm	ent and	Field Level Identifier – 306 Message	Rpt	Optionality	Description / Purpose and composition instructions
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 306 message is a code to identify the connection status of a meter point. This will always be set to <b>D</b> – Deenergised or DR De-energised Remote on this message.
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement. See the list of data codes for allowed values here. This is provided to Suppliers for confirmation.
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. This is provided to Suppliers for confirmation. See list of data codes for valid entries here.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the de-energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	SEG	Usage Factors	0 N	Optional	Usage factors will be calculated in all cases with the following exception:  • The readings are not for a Change of Legal Entity and all readings are estimated.

Segment and Field L	evel Identifier – 306 Message	Rpt	Optionality	Description / Purpose and composition instructions
				For each Timeslot there will be two usages; the first being the actual usage and the second the estimate usage, each with their own separate Effective from Date.
				Note: Actual and Estimate usage factors do not appear on the same segment - Actual and Estimate usage factors are entered on separate usage factor segments with a separate Effective from date on each segment for the respective usage factor
3 FLD	Timeslot	1	Mandatory	A code that indicates the time intervals for which a usage factor is effective and will be aggregated. The code may currently be set to:  • 24H denoting a usage factor for a 24 hour time period  • 00D denoting a usage factor for day-time intervals of between 0800 and 2300 Hours  • 00N denoting a usage factor for night-time intervals of between 2300 and 0800 Hours  • 01D denoting a usage factor for day-time intervals of between 0800 and 1700 hours plus 1900 and 2300 hours  • 01N denoting a usage factor for night-time intervals of between 2300 and 0800 Hours  • 01P denoting a usage factor for peak-time intervals of between 1700 and 1900 Hours
3 FLD	Effective from Date	1	Mandatory	This is the date from which the usage factor de-energisation became effective.

Market Message Guide - Meter Works Baseline V6.1

Segment and	Field Le	evel Ide	ntifier – 306 Message	Rpt	Optionality	Descrip	otion / Purpose and composition instructions
						Where	e this applies to EUF this is the Current Read Date + 1 day
						• Wher	e this applies to AUF this is the previous read date + 1 day
3	FLD	Actua	l Usage Factor	1	See instructions	the Effe	ment in kWh of the actual consumption for the Timeslot from ective From Date to the Read Date inclusive, extrapolated to ual consumption based on the applicable <u>derived</u> profile.
3	FLD	Estima	ated Usage Factor	1	See instructions		ment in kWh of the estimated consumption for the Timeslot for days starting from the Effective From Date
2 SEG	Meter I	D		1 N	Mandatory	The iter	ms in this segment uniquely identify a Meter at a Meter Point.
3	FLD	Meter	Category	1	Optional	denote	Category is a code allocated by Meter Asset Manager to the manufacturer and type of meter. When combined with lumber it uniquely identifies device.
3	FLD	Serial	Number	1	Mandatory		No is the physical number found on a Meter. When combined eter Category it uniquely identifies device.
3	SEG	Regis	ter Level Information	1 N	Mandatory		the segment that stores information relating to the registers ed on a meter.
	4	FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between t meter registers on a physical meter or set of meters.
	4	FLD	Timeslot	1	Mandatory		ot is a code that indicates the period that a meter is recording. id codes are as follows:
						24H	24 Hour Consumption
						00D	08-23 Day Consumption

Segment and Field Le	evel Ide	entifier – 306 Message	Rpt	Optionality	Description / Purpose and composition instructions		
					00N	23-08 Night Consumption	
					01D	08-17 and 19-23 Day consumption	
					01N	23-08 Night consumption	
					01P	17-19 Peak consumption	
					24M	24Hour MD	
					0NR	08-21 MD Normal	
					0PK	17-19 MD Peak	
4	FLD	Unit of Measurements	1	Mandatory	_	f measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes.	
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at a in order to derive a true value.	
4	FLD	Reading	1	Mandatory		g is the value of a reading measured in the units identified by ter register prior to application of any multipliers.	
4	FLD	Read Reason	1	Mandatory		Reason is a code that indicates the reason that a reading was ed. Read Reason will always be <b>13</b> - De-Energisation on this ge.	
4	FLD	Read Type	1	Mandatory	Custom	type is a code that indicates whether a reading is an Actual, ner, Estimated or Substitute reading. The following values are r Non Interval de-energisations:	
					Α	Actual	
					E	Estimated (No Access)	

Segment and Field Le	evel Ide	ntifier – 306 Message	Rpt	Optionality	Description / Purpose and composition instructions		
					Estimate (Implausible / No  EF read available)		
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register		
4	FLD	Consumption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.		
4	FLD	Read Status	1	Mandatory	<ul> <li>RV –Reading which is plausible / valid</li> <li>RREL – Reading was originally implausible but released on investigation as plausible</li> <li>REST – Reading was estimated and usage factors deriving from estimate will be used in Settlement. See Read Type for reason for estimate.</li> <li>RENS – Reading was estimate but usage factors are not updated and will not be used in settlement. This is generally because a full set of readings was estimated due to implausibility.</li> </ul>		
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries for this message are as follows:  01  24Hr  02  Day  03  Night		

Market Message Guide - Meter Works Baseline V6.1

Segment and Field Level Ider	ntifier – 306 Message R	<b>lpt</b>	Optionality	Description / Purpose and composition instructions		
				04	NSH	
				05	Wattless	
				06	MD Normal	
				07	MD Peak	
				80	Cumulative MD Normal	
				09	Cumulative MD Peak	
				78	Day Off Peak	
				79	Night Off Peak	
				80	Peak	

#### 1.17 306W Meter Point Status Change Confirmation - De-energisation - Withdrawn Read

#### **Purpose / Description of Message**

 
The 306W message is sent to the Registered Supplier of the Non Interval Meter Point to withdraw Non Interval readings sent on a previous 306 message. The message includes notification of the following:

- Notification of the readings that have been withdrawn
- A reason for the withdrawal of the readings
- Meter and Meter register Information

Message 306W is used in the following Market Process:

Process	Number and Title	Use of Message					
MPD 14	Readings Processing Non Interval	To notify withdrawal of a completed request for a change of Non Interval meter point status to 'D'					

### **Data Hierarchy Diagram**



#### **Message Structure**

This section describes the structure of the 306W message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 306W Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	ssage F	leader	1	Mandatory	Refer to common data segments document
1 Me	1 Meter Point Details			Mandatory	
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the unique number given as reference on the 017 request referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request. See Networks Reference Number
2	FLD	Networks Reference Number	1	Mandatory	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction. This is the same reference provided on the 306 for which the readings are being withdrawn on this message and will allow Suppliers to match readings to their withdrawals.
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 306 message is a code to identify the connection status of a meter point. This will always be set to <b>D</b> – Deenergised or DR De-energised Remote on this message.
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement. See the list of data codes for allowed values here. This is provided to Suppliers for confirmation.

Segm	ent and	Field Level Identifier – 306W Message	Rpt	Optionality	Description / Purpose and composition instructions
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. This is provided to Suppliers for confirmation. See list of data codes for valid entries here.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the de-energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	FLD	Withdrawal Reason	1	Mandatory	Withdrawal reason is a code to indicate why a reading has been withdrawn. The following are valid withdrawal reasons on a 306W:
					A1 Erroneous Change of Supplier
					A2 Disputed CoS Meter Reading
					Change of Supplier  A3 Cancellation
					A4 Change of Supplier
					A5 Change of Legal Entity
					B1 Incorrect MPRN
					C1 Incorrect Estimation
					C2 Incorrect Meter Reading
					D1 Incorrect Rate

Segmo	ent and	Field Le	vel Ide	ntifier – 306W Message	Rpt	Optionality	Descrip	otion / Purpose and composition instructions	
							D2 D3	Incorrect Billing Period Incorrect Meter	
2	SEG	Meter I	D		1 N	Mandatory	The iter	ms in this segment uniquely identify a Meter at a Meter Point.	
	3	3 FLD Meter Category		1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.			
	3	FLD	Serial	Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.		
	3	SEG	Register Level Information		1 N	Mandatory	This is the segment that stores information relating to the registers displayed on a meter.		
		4	FLD	Meter Register Sequence	1	Mandatory	Meter Register Sequence is an identifier to distinguish between different meter registers on a physical meter or set of meters.		
		4	FLD	Timeslot	1	Mandatory		ot is a code that indicates the period that a meter is recording.  id codes are as follows:  24 Hour Consumption	
							00D	08-23 Day Consumption	
							00N	23-08 Night Consumption 24Hour MD	
							01D	08-17 and 19-23 Day consumption	

Segment and Field Le	vel Ide	entifier – 306W Message	Rpt	Optionality	Description / Purpose and composition instructions		
					01N	23-08 Night consumption	
					01P	17-19 Peak consumption	
					0NR	08-21 MD Normal	
					0PK	17-19 MD Peak	
4	FLD	Unit of Measurements	1	Mandatory		measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes allowed on ssage.	
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at a in order to derive a true value.	
4	FLD	Reading	1	Mandatory	the met	g is the value of a reading measured in the units identified by ter register prior to application of any multipliers. This is the provided on the previous 306 and being withdrawn on this ge.	
4	FLD	Read Reason	1	Mandatory		Reason is a code that indicates the reason that a reading was ed. Read Reason will always be <b>13</b> - De-Energisation on this ge.	
4	FLD	Read Type	1	Mandatory	Custom	ype is a code that indicates whether a reading is an Actual, ner, Estimated or Substitute reading. The following values are r Non Interval de-energisations:	
					A	Actual	
					E	Estimated (No Access)	

vel Ide	ntifier – 306W Message	Rpt	Optionality	Description / Purpose and composition instructions		
				Estimate (Implausible/ No read <b>EF</b> available)		
FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register		
FLD	Consumption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.		
FLD	Read Status	1	Mandatory	A code that indicates: <b>RWI –</b> Reading Withdrawn.		
FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid list of data codes are as follows:  01  24Hr  02  Day  03  Night  04  NSH  05  Wattless  06  MD Normal  07  MD Peak  08  Cumulative MD Normal		
	FLD FLD	FLD Consumption  FLD Read Status	FLD Previous Read Date 1  FLD Consumption 1  FLD Read Status 1	FLD Previous Read Date 1 Mandatory  FLD Consumption 1 See instructions  FLD Read Status 1 Mandatory		

Segment and Field Level Identifier – 306W Message	Rpt	Optionality	Description / Purpose and composition instructions		
			09 Cumulative MD Peak		
			78 Day Off Peak		
			79 Night Off Peak		
			80 Peak		

Retail Market Message Gu	ide – Meter Works
--------------------------	-------------------

#### 1.18 307 Meter Point Status Change – Energisation Read

### **Purpose / Description of Message**

The 307 message is sent to the Registered Supplier of the Non Interval Meter Point.


The message includes notification of the following:

- Confirmation of Energisation Meter Readings
- Meter and Meter register Information

Message 307 is used in the following Market Processes:

Process Number and Title		Use of Message					
MPD 10 Re-energisation		To confirm completion of a request for a change of meter point status to 'E'					
MPD 14	Readings Processing Non Interval	To confirm completion of a request for a change of meter point status to 'E'					

### **Data Hierarchy Diagram**

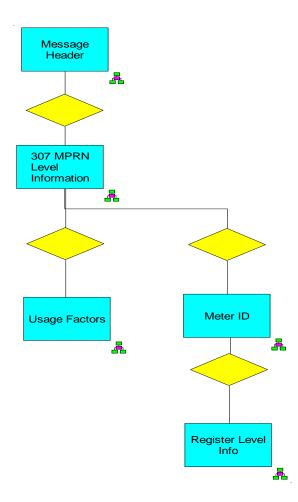

# **Message Structure**

This section describes the structure of the 307 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 307 Message	Rpt	Optionality	Description / Purpose and composition instructions		
1 Me	1 Message Header			Mandatory	Refer to common data segments document		
1 Me	1 Meter Point Details			Mandatory			
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.		
2	FLD	Market Participant Business Reference	1	Optional	This is the unique number given as reference on the 017 request referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.		
2	FLD	Networks Reference Number	1	Mandatory	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction.  The purpose of this field is for use when messages are withdrawn. This field can be used to identify which originating message corresponds with the message being withdrawn		

Segm	ent and	Field Level Identifier – 307 Message	Rpt	Optionality	Description / Purpose and composition instructions
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 307 message is a code to identify the connection status of a meter point. This will always be set to <b>E</b> – Energised on this message.
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement. See the list of data codes for allowed values here This is provided to Suppliers for confirmation.
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. This is provided to Suppliers for confirmation. See list of data codes for valid entries here.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	SEG	Usage Factors	0 N	Optional	Usage factors will be calculated in all cases with the following exception:  • The readings are not for a Change of Legal Entity and all readings are estimated.  For each Timeslot there will be two usages; the first being the actual usage and the second the estimate usage, each with their own separate Effective From Date.

Market Message Guide - Meter Works Baseline V6.1

Segment and Field Level Identifier – 307 Message					Optionality	Description / Purpose and composition instructions
						Note: Actual and Estimate usage factors do not appear on the same segment - Actual and Estimate usage factors are entered on separate usage factor segments with a separate Effective from date on each segment for the respective usage factor
	3	FLD	Timeslot	1	Mandatory	A code that indicates the time intervals for which a usage factor is effective and will be aggregated. The code may currently be set to:  • 24H denoting a usage factor for a 24 hour time period  • 00D denoting a usage factor for day-time intervals of between 0800 and 2300 Hours  • 00N denoting a usage factor for night-time intervals of between 2300 and 0800 Hours  • 01D denoting a usage factor for day-time intervals of between 0800 and 1700 hours plus 1900 and 2300 hours  • 01N denoting a usage factor for night-time intervals of between 2300 and 0800 Hours  • 01P denoting a usage factor for peak-time intervals of between 1700 and 1900 Hours
	3	FLD	Effective from Date	1	Mandatory	This is the date from which the usage factor de-energisation became effective.  • Where this applies to EUF this is the Current Read Date + 1 day  • Where this applies to AUF this is the previous read date + 1 day

Market Message Guide - Meter Works Baseline V6.1

Segment and Field Level Identifier – 307 Message					Rpt	Optionality	Descri	Description / Purpose and composition instructions		
	3 FLD Actual Usage Factor		1	See instructions	the Effe	A statement in kWh of the actual consumption for the Timeslot from the Effective from Date to the Read Date inclusive, extrapolated to annual consumption based on the applicable <u>derived</u> profile.				
	3 FLD Estimated Usage Factor		1	See instructions		A statement in kWh of the estimated consumption for the Timeslot for the 365 days starting from the Effective from Date				
2	SEG	Meter I	D		1 N	Mandatory	The ite	ms in this segment uniquely identify a Meter at a Meter Point.		
	3	FLD	Meter	Category	1	Optional	denote	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.		
	3 FLD Serial Number		1	Mandatory		Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.				
	3 SEG		Register Level Information			Mandatory		This is the segment that stores information relating to the registers displayed on a meter.		
			FLD	Meter Register Sequence	1	Mandatory	Meter Register Sequence is an identifier to distinguish between different meter dials on a physical meter or set of meters.			
	4		FLD	Timeslot	1	Mandatory	Timeslot is a code that indicates the period that a meter is record The valid codes are as follows:			
							24H	24 Hour Consumption		
							00D	08-23 Day Consumption		
							00N	23-08 Night Consumption		
							24M	24Hour MD		

Segment and Field Level Identifier – 307 Message			Rpt	Optionality	ty Description / Purpose and composition instructions		
					01D	08-17 and 19-23 Day consumption	
					01N	23-08 Night consumption	
					01P	17-19 Peak consumption	
					0NR	08-21 MD Normal	
					0PK	17-19 MD Peak	
4	FLD	Unit of Measurements	1	Mandatory	Units of measurement is a code that indicates the value that is measured e.g. KWh. See data codes for valid list of codes.		
4	FLD	Meter Multiplier	1	Mandatory	Meter Multiplier is a factor to be applied to an advance or reading at a register in order to derive a true value.		
4	FLD	Reading	1	Mandatory	Reading is the value of a reading measured in the units identified by the meter register prior to application of any multipliers.		
4	FLD	Read Reason	1	Mandatory	Read Reason is a code that indicates the reason that a reading was collected. Read Reason will always be 18 - Energisation on this message.		
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. Read Type will always be A – Actual on this message.		
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register		

Segment and Field Le	vel Ide	entifier – 307 Message	Rpt	Optionality	Description / Purpose and composition instructions  This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.		
4	FLD	Consumption	1	See instructions			
4	FLD	Read Status	1	Mandatory	Read Status will be set to one of the following values that indicate the following:		
					RV Reading Valid  RREL Reading - Manually released		
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries for this message are as follows:		
					<b>01</b> 24Hr		
					<b>02</b> Day		
					03 Night		
					<b>04</b> NSH		
					05 Wattless		
					06 MD Normal		
					07 MD Peak		
					08 Cumulative MD Normal		
					09 Cumulative MD Peak		
					78 Day Off Peak		
					79 Night Off Peak		
					80 Peak		

### 1.19 307W Meter Point Status Change Confirmation – Energisation – Withdrawn Read

#### **Purpose / Description of Message**

The 307W message is sent to the Registered Supplier of the Non Interval Meter Point to withdraw Non Interval readings sent on a previous 307 message.

Where a site has been re-energised and the MM307 has been issued and subsequently an MCC change for non interval meter is performed on the same day or the day after, the MM307W and the MM332 will both be issued.


The message includes notification of the following:

- Notification of the readings that have been withdrawn
- A reason for the withdrawal of the readings
- Meter and Meter register Information

Message 307W is used in the following Market Process:

Process	Number and Title	Use of Message			
MPD 14	Readings Processing Non Interval	To notify withdrawal of a completed request for a change of meter point status to 'E'			

### **Data Hierarchy Diagram**

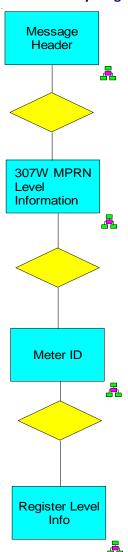

### **Message Structure**

This section describes the structure of the 307W message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier	Rpt	Optionality  Mandatory	Description / Purpose and composition instructions
1 Me	ssage F	leader	1		Refer to common data segments document
1 Me	ter Poin	t Details	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the number given as reference on the 017 request referenced back to Supplier. The message may be generated by Networks initiated work so will not always relate back to an originating Supplier request. See Networks Reference Number
2	FLD	Networks Reference Number	1	Mandatory	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction. This is the same reference provided on the 307 for which the readings are being withdrawn on this message and will allow Suppliers to match readings to their withdrawals.
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 307W message is a code to identify the connection status of a meter point. This will always be set to <b>E</b> – Energised on this message.
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement.

Segm	ent and	l Field Level Identifier	Rpt	Optionality	Description / Purpose and composition instructions
					See the list of data codes for allowed values here. This is provided to Suppliers for confirmation.
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. This is provided to Suppliers for confirmation. See list of data codes for valid entries here.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	FLD	Withdrawal Reason	1	Mandatory	Withdrawal reason is a code to indicate why a reading has been withdrawn. The following are valid withdrawal reasons on a 307W:  A1 Erroneous Change of Supplier  A2 Disputed CoS Meter Reading  Change of Supplier  A3 Cancellation  A4 Change of Supplier  A5 Change of Legal Entity  B1 Incorrect MPRN  C1 Incorrect Estimation  C2 Incorrect Meter Reading  D1 Incorrect Rate

Segment and Field Level Identifier					Rpt	Optionality	Descri	ption / Purpose and composition instructions
							D3	Incorrect Meter
2	SEG	Meter I	D		1 N	Mandatory	The ite	ms in this segment uniquely identify a Meter at a Meter Point.
	3	FLD	Meter	Category	1	Optional	denote	Category is a code allocated by Meter Asset Manager to the manufacturer and type of meter. When combined with Number it uniquely identifies device.
	3	FLD	Serial	Number	1	Mandatory		No is the physical number found on a Meter. When combined eter Category it uniquely identifies device.
	3	SEG	Regis	ter Level Information	1 N	Mandatory		the segment that stores information relating to the registers ed on a meter.
		4	FLD Meter Register Sequence		1	Mandatory		Register Sequence is an identifier to distinguish between at meter dials on a physical meter or set of meters.
		4	4 FLD Timeslot	Timeslot	1	1 Mandatory		ot is a code that indicates the period that a meter is recording. lid codes are as follows:
							24H	24 Hour Consumption
							00D	08-23 Day Consumption
							00N	23-08 Night Consumption
							24M	24Hour MD
							01D	08-17 and 19-23 Day consumption
							01N	23-08 Night consumption
							01P	17-19 Peak consumption

Segment and Field Le	evel Ide	entifier	Rpt	Optionality	Description / Purpose and composition instructions		
					ONR 08-21 MD Normal		
					<b>0PK</b> 17-19 MD Peak		
4	FLD	Unit of Measurements	1	Mandatory	Unit of measurement is a code that indicates the value that is measured e.g. KWh. See data codes for valid list of codes allowed on this message.		
4	FLD	Meter Multiplier	1	Mandatory	Meter Multiplier is a factor to be applied to an advance or reading at a register in order to derive a true value.		
4	FLD	Reading	1	Mandatory	Reading is the value of a reading measured in the units identified by the meter register prior to application of any multipliers.		
4	FLD	Read Reason	1	Mandatory	Read Reason is a code that indicates the reason that a reading was collected. Read Reason will always be <b>18</b> - Energisation on this message.		
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. Read Type will always be <b>A</b> – Actual on this message.		
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register		
4	FLD	Consumption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.		
4	FLD	Read Status	1	Mandatory	Read Status is a code that indicates the following on this message:  RWI Reading withdrawn		

Segment and Field Le	vel Ide	ntifier	Rpt	Optionality	Description / Purpose and composition instructions
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries for this message are as follows:
					<b>01</b> 24Hr
					<b>02</b> Day
					03 Night
					<b>04</b> NSH
					05 Wattless
					06 MD Normal
					07 MD Peak
					08 Cumulative MD Normal
					09 Cumulative MD Peak
					78 Day Off Peak
					79 Night Off Peak
					80 Peak

### 1.20 106D Meter Point Status Change Confirmation – De-energisation

### **Purpose / Description of Message**

The 106D message is sent to the Registered Supplier of the Interval Meter Point and, when QH Meter Point, to TSO in the following scenarios:

• To confirm that their request to De-energise the Meter Point on a 017 has been completed.

• As a result of Networks initiated work (e.g. Safety disconnection and subsequent reconnection).

The 106D is also sent to the Registered Supplier of a Non Interval site that has been de-energised:

• To confirm that their request to De-energise the Non interval meter point on an 017 has been completed with a Meter point status of DR or D.

The 106D is also sent to the Old Supplier where a CoS is in progress

 To confirm that their request to De-energise the meter point on an 017 with Meter Point Status Reason De-Energise (HH PAYG) has been completed.

The 106D is also sent to the Old Supplier as part of a CoS cancellation process where the request is accepted post CoS completion for a site that was De-energised (Meter Point Status D or DR) post-CoS completion:

• To confirm an updated Meter Point Status, post CoS completion, of 'D' or 'DR' to the Old Supplier.

The 106D is also sent to the Registered Supplier of a Single Point Unmetered site

• To confirm that their request to De-energise the single point unmetered meter point on a 017 has been completed

The message includes notification of the following:


Confirmation of De-energisation

Effective from date of the de-energisation.

Message 106D is used in the following Market Process:

Process Number and Title		Use of Message				
MPD 09	De-energisation	To confirm a completed request for a change of a meter point status to 'D' or DR'				
MPD 02	Change of Supplier Interval	To confirm a completed HH PAYG De-energisation request to the Old Supplier where a Change of Supplier request is in progress				
MPD 03	Change of Supplier Objection and Cancellation	To confirm an updated Meter Point Status of 'D' or 'DR' to the Old Supplier as part of a CoS cancellation where the site was De-energised post-CoS completion				

# **Data Hierarchy Diagram**

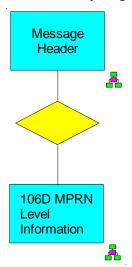

### **Message Structure**

This section describes the structure of the 106D message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 106D Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	ssage H	leader	1	Mandatory	Refer to common data segments document
1 Me	ter Poin	t Details	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the unique number given as reference on the 017 request referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.  This field will not be populated where the 106D is sent to the Old Supplier confirming an updated Meter Point Status upon cancellation of the Change of Supplier request where a site was De-energised post Change of Supplier completion (current meter point status 'D' or 'DR').
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 106D message is a code to identify the connection status of a meter point. This will always be set to <b>D</b> – Deenergised or DR De-energise Remote on this message.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the de-energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to :  1 i.e. a logical value of True – where ESBN determine a site is

Segm	ent and	Field Level Identifier – 106D Message	Rpt	Optionality	Description / Purpose and composition instructions
					Essential Plant 0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	FLD	Comments	1	Optional	Not used post System Separation

#### 1.21 106E Meter Point Status Change Confirmation – Energisation

#### **Purpose / Description of Message**

The 106E message is sent to the Registered Supplier of the Interval Meter Point and when QH Meter Point, to TSO in the following scenarios:

- To confirm that their request to Energise the Meter Point on a 017 has been completed.
- As a result of Networks initiated work (e.g. Safety disconnection and subsequent reconnection).

The 106E is also sent to the Registered Supplier of a Non Interval site that has been Re-energised

• To confirm that their request to Re-energise the Non interval meter point on an 017 has been completed

The 106E is also sent to the Old Supplier where a CoS is in progress

• To confirm that their request to Re-energise the meter point on an 017 with Meter Point Status Reason Re-Energise (HH PAYG) has been completed

The 106E is also sent to the Old Supplier on completion of a CoS cancellation

• To confirm the current Meter Point Status on completion of a CoS cancellation where the site was Re-energised as part of the CoS

The 106E is also sent to the Registered Supplier of a Single Point Unmetered site

• To confirm that their request to Re-energise the single point unmetered meter point on a 017 has been completed


The message includes notification of the following:

- Confirmation of Energisation
- Effective from date of the Energisation.

Message 106E is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 02	Change of Supplier Interval	To confirm a completed HH PAYG Re-energisation request to the Old Supplier where a Change of Supplier request is in progress
MPD 03	Change of Supplier – Objection and Cancellation	To confirm the current Meter Point Status where a site was Re-energised as part of a CoS to the Old Supplier on completion of a CoS cancellation
MPD 10	Re-energisation	To confirm a completed request for a change of a Interval meter point status to 'E'

### **Data Hierarchy Diagram**

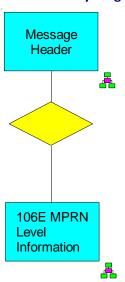

### **Message Structure**

This section describes the structure of the 106E message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 106E Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	ssage F	leader	1	Mandatory	Refer to common data segments document
1 Me	ter Poin	t Details	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the unique number given as reference on the 017 request referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.
					This field will not be populated where the 106E is sent to the Old Supplier confirming an updated Meter Point Status upon cancellation of the Change of Supplier request where a site was Re-energised as part of the Change of Supplier completion process (current meter point status 'E'),
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 106E message is a code to identify the connection status of a meter point. This will always be set to <b>E</b> – Energised on this message.
2	FLD	Effective from Date	1	Mandatory	This is the date from which the Energisation became effective.
2	FLD	Essential Plant	1	See Instructions	A flag will be set to :  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant

					0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	FLD	Comments	1	Optional	Not used post System Separation

#### 1.22 332 Non Interval Meter Technical Details

#### **Purpose / Description of Message**

The 332 Non Interval Meter Technical Details message provides the Supplier registered to the Non Interval Meter point with the technical details of the meters installed at that meter point following meter works carried out at that meter point.

This includes the following details:

- The details applicable to the meter point, including MCC, DUOS Group and meter point status.
- Any Usage factor information held for the Meter Point.
- The details of meters that have been removed from the Meter Point including register information from that meter and final readings if appropriate
- The details of meters that have been newly installed at a meter point including register information from that meter and start readings if appropriate
- The details of meters that are retained at a meter point following meter works including register information from that meter and readings if appropriate.
- The details applicable to the meter point that it has been de-energised and the meters removed on the same day including register information from that meter and final readings and meter point status
- The details applicable to the meter point where token meters have been newly installed at the meter point


- The details applicable to the meter point where token meter has been removed from the meter point
- The details applicable to the meter point where the token meter has been exchange at the meter point
- The details applicable to the meter point where the token meter has been reset at the meter point
- The details applicable to the meter point where Networks have installed signals ex MFM to notify Register supplier that the meter works has been completed

### Message 332 is used in the following Market Process:

Process N	umber and Title	Use of Message					
MPD 5	New Non Interval Metered Connection	To notify meter technical details and readings after completion of a New Non Interval Metered Connection					
MPD 8	Change to Connection Characteristics	To notify meter technical details and readings after a change of Non Interval meter connection characteristics where applicable					
MPD 9	De-energisation	To notify meter technical details and readings after completion of a change of Non Interval meter point status to 'D' which required change meter works					
MPD 10	Re-energisation	To notify meter technical details and readings after completion of a change of Non Interval meter point status to 'E' which required change meter works					
MPD 11	Change to Meter Configuration	To notify meter technical details and readings after completion of a change of Non Interval meter configuration which required meter works					
MPD 12	Meter Problems and Damage	To notify meter technical details and readings when resolution of Non Interval meter problems and damage resulted in meter works					
MPD 14	Readings Processing (Non Interval)	To notify meter technical details and readings for a Non Interval meter point					
MPD 35	Change of metering from Non Interval to Interval	To notify meter technical details and readings for a Non Interval meter point following a change of metering from Non Interval to Interval					

Process Nu	mber and Title	Use of Message
MPD 35.1	Change of Smart Data Service from Interval to Non Interval	To notify meter technical details and readings for a Interval meter point following a change of metering from Interval to Non Interval
MPD 13	Planned Meter Exchange	To notify meter technical details and readings for a Non Interval meter point

### **Data Hierarchy Diagram**

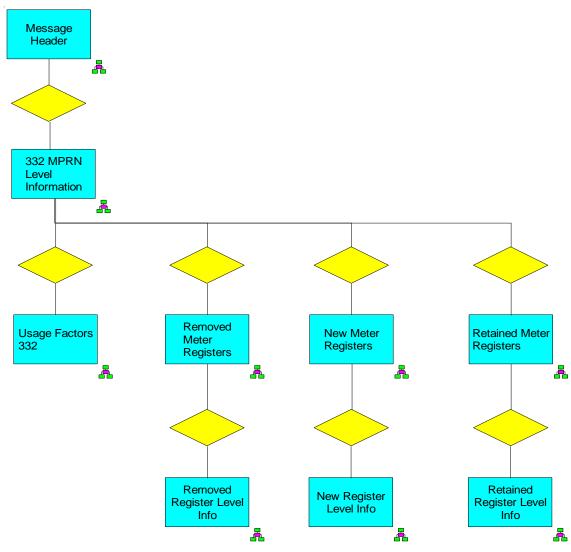

### **Message Structure**

This section describes the structure of the 332 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	l Field Level Identifier – 332 Message	Rpt	Optionality  Mandatory	Description / Purpose and composition instructions	
1 Me	ssage F	leader	1		Refer to common data segments document	
1 Me	ter Poin	t Details	1	Mandatory		
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.	
2	FLD	Market Participant Business Reference	1	Optional	This is the Suppliers reference where provided on the inbound market message referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.	
2	FLD	Networks Reference Number	1	Optional	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction. Where this message carries register readings this item will always be populated.	
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement. See the list of data codes for allowed values here.	
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. See list of data codes for valid entries here.	
2	FLD	Meter Configuration Code	1	Mandatory	Meter Configuration Code (MCC) describes the current configuration of meter registers and other equipment at an MPRN which allow Customer Billing to take place. The MCC does not describe the specific metering equipment in use at an MPRN nor does it describe the overall capability of the metering equipment at the site.	

Segm	ent and	Field L	evel Identifier – 332 Message	Rpt	Optionality	Description / Purpose and composition instructions
						The code supplied here will reflect the MCC requested by Supplier on the 030 message where applicable.
2	FLD	Кеура	d Premise Number	1	Optional	Not used post System Separation
2	FLD	Tariff C	Configuration Code	1	Optional	Not used post System Separation
2	FLD	Meter Point Status			Mandatory	Meter Point Status is a code to identify the connection status of a meter point. This will always be set to <b>E</b> – Energised or <b>D</b> – Deenergised on this message.
2	FLD	Effective from Date			Mandatory	This is the date from which the meter point information supplied became effective.
2	FLD	Essential Plant		1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	SEG	Usage Factors		0 N	Optional	For each Timeslot there will be two usages; the first being the actual usage and the second the estimate usage, each with their own separate Effective From Date.
	3	FLD	Effective from Date	1	Mandatory	This is the date from which the usage factor provided became effective.  • Where this applies to EUF this is the Current Read Date + 1 day  • Where this applies to AUF this is the previous read date + 1 day
	3	FLD Timeslot		1	Mandatory	A code that indicates the time intervals for which a usage factor is effective and will be aggregated. The code may currently be set to:  • 24H denoting a usage factor for a 24 hour time period

Segment and	Field Lo	evel Identifier – 332 Message	Rpt	Optionality	Description / Purpose and composition instructions
					• 00D denoting a usage factor for day-time intervals of between 0800 and 2300 Hours
					• <b>00N</b> denoting a usage factor for night-time intervals of between 2300 and 0800 Hours
					• 01D denoting a usage factor for day-time intervals of between 0800 and 1700 hours plus 1900 and 2300 hours
					• 01N denoting a usage factor for night-time intervals of between 2300 and 0800 Hours
					• 01P denoting a usage factor for peak-time intervals of between 1700 and 1900 Hours
3	FLD	Actual Usage Factor	1	See instructions	Actual Usage Factor is a statement in kWh of the actual consumption for a given Timeslot at a Meter Point since the previous read-date, extrapolated to an annual consumption based on the applicable standard profile. This is provided for the period terminated by the read date  • Where meters have been removed AUF will be provided.
3	FLD	Estimated Usage Factor	1	See instructions	Estimated Usage Factor is a statement in kWh of the estimated consumption for a given Timeslot at a Meter Point over the next year and is provided for the period following the read date.  • Where Meters have been installed EUF will be provided.
2 SEG Removed Meter ID 0 Optional N		This segment identifies the Non Interval Meters removed at a Meter Point if appropriate.			

Segment and	Field L	evel Idei	ntifier – 332 Message	Rpt	Optionality	Descri	ption / Purpose and composition instructions
3	FLD	Meter (	leter Category		Optional	denote	Category is a code allocated by Meter Asset Manager to the manufacturer and type of meter. When combined with Number it uniquely identifies device.
3	FLD	Serial Number  Exchanged Meter Reference		1	Mandatory		No is the physical number found on a Meter. When combined eter Category it uniquely identifies device.
3	FLD			1	See instructions	in the c	ence to allow the old and new meter to be related to each other case of a meter exchange. This is always provided where have been exchanged at an MPRN.
3	SEG	Remov Informa	ed Register Level ttion	N meters that have been removed from the meter		gment provides the information pertaining to the registers on that have been removed from the meter point. <b>N:B</b> Register ation is not provided for token devices with no registers	
	4 FLD Timeslot		1	Mandatory		ot is a code that indicates the period that a meter is recording. lid codes are as follows:	
						24H	24 Hour Consumption
						00D	08-23 Day Consumption
						00N	23-08 Night Consumption
						24M	24Hour MD
						01D	08-17 and 19-23 Day consumption
						01N	23-08 Night consumption
						01P	17-19 Peak consumption
						0NR	08-21 MD Normal

Segment and Field Level Identifier – 332 Message			Rpt Op	Optionality	Description / Purpose and composition instructions	
					<b>0PK</b> 17-19 MD Peak	
4	FLD	Meter Register Sequence	1	Mandatory	Meter Register Sequence is an identifier to distinguish between different meter registers on a physical meter.	
4	FLD	Unit of Measurement	1	Mandatory	Units of measurement is a code that indicates the value that is measured e.g. KWh. See data codes for valid list of codes.	
4	FLD	Meter Multiplier	1	Mandatory	Meter Multiplier is a factor to be applied to an advance or reading at a register in order to derive a true value.	
4	FLD	Reading	1	Mandatory	Reading is the value of a reading in the form passed to the Data Processor measured in the units identified by the meter register prior to application of any multipliers. May contain an estimate if read type so indicates.	
4	FLD	Read Reason	1	Mandatory	Read Reason is a code that indicates the reason that a reading was collected and will be set to:	
					See Appendix 1C for valid read types on the 332 market message and the read types sent depending on the meter works carried out	
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. This will always be set to either <b>A</b> – Actual, <b>E</b> – Estimated or <b>EF</b> –Estimate (Implausible).	
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the of the previous consumption period for the register	

Segment and Field Level Identifier – 332 Message		Rpt	Optionality	Description / Purpose and composition instructions			
4	4 FLD Consumption		1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.		
4	FLD	Post Decimal Digits	1	Optional	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependant upon meter category.		
4	FLD	Pre Decimal Digits	1	Optional	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependant upon meter category.		
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries are as follows:		
					<b>01</b> 24Hr		
					<b>02</b> Day		
					03 Night		
					<b>04</b> NSH		
					05 Wattless		
					06 MD Normal		
					07 MD Peak		
					08 Cumulative MD Normal		
					09 Cumulative MD Peak		
					78 Day Off Peak		
					79 Night Off Peak		
					80 Peak		

Segment and Field L	evel Identifier – 332 Message	Rpt	Optionality	Description / Purpose and composition instructions
4	FLD Read Status	1	Mandatory	Read Status is a code that indicates the status of the reading supplied. The following statuses are allowed on this message for removed meters:
				RV Reading Valid
				RREL Reading - Manually released
				REST Reading estimated- used for settlement
2 SEG New I	Meter ID	0 N	Optional	This segment identifies the new Non Interval Meters fitted at a Meter Point if appropriate.
3 FLD	Meter Category	1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.
3 FLD	Serial Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.
3 FLD	Meter Location	1	See instructions	Meter Location is a code that refers to the physical position of a meter at a premise. This item is always provided for newly installed Meters. See list of data codes for list of valid codes for this item. In some circumstances no meter location code was convertible from legacy data. In such cases no Meter Location will be provided.
3 FLD	Exchanged Meter Reference	1	See instructions	A reference to allow the old and new meter to be related to each other in the case of a meter exchange. This is always provided where meters have been exchanged at an MPRN.

Segment and Field	Level Id	entifier – 332 Message	Rpt	Optionality	Descri	Description / Purpose and composition instructions		
3 SE	S New I	Meter Registers	0 N	Optional	Optional  This segment provides the information pertaining to the registers of meters that have been fitted at the meter point. <b>N:B</b> Register information is not provided for token devices with no registers			
	4 FLD	Timeslot	1	Mandatory		ot is a code that indicates the period that a meter is recording. lid codes are as follows:		
					24H	24 Hour Consumption		
					00D	08-23 Day Consumption		
					00N	23-08 Night Consumption		
					24M	24Hour MD		
					01D	08-17 and 19-23 Day consumption		
					01N	23-08 Night consumption		
					01P	17-19 Peak consumption		
					0NR	08-21 MD Normal		
					0PK	17-19 MD Peak		
	4 FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between not meter registers on a physical meter or set of meters.		
	4 FLD	Unit of Measurement	1	Mandatory	_	f measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes.		

Segment and Field L	evel Ide	ntifier – 332 Message	Rpt	Optionality	Description / Purpose and composition instructions
4	FLD	Meter Multiplier	1	Mandatory	Meter Multiplier is a factor to be applied to an advance or reading at a register in order to derive a true value.
4	FLD	Reading	1	Mandatory	Reading is the value of a reading in the form passed to the Data Processor measured in the units identified by the meter register prior to application of any multipliers.
4	FLD	Read Reason	1	Mandatory	Read Reason is a code that indicates the reason that a reading was collected. The following code is permitted for this item:
					See Appendix 1C for valid read types on the 332 market message and the read types sent depending on the meter works carried out
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. This will always be set to A – Actual for this item.
4	FLD	Post Decimal Digits	1	Mandatory	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependant upon meter category. This is always provided for new meters.
4	FLD	Pre Decimal Digits	1	Mandatory	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependant upon meter category. This is always provided for new meters.
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries are as follows:

Segment and Field Level Identifier – 332 Message					Optionality	Description / Purpose and composition instructions
						<b>01</b> 24Hr
						<b>02</b> Day
						03 Night
						<b>04</b> NSH
						05 Wattless
						06 MD Normal
						07 MD Peak
						08 Cumulative MD Normal
						09 Cumulative MD Peak
						78 Day Off Peak
						79 Night Off Peak
						80 Peak
2	SEG	Retaine	ed Meter ID	0 N	Optional	This segment identifies the Non Interval Meters that were installed at a Meter Point prior to meter works and are retained there after meter works are completed if appropriate.
	3	FLD	Meter Category		Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.
	3	FLD	Serial Number		Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.
	3 SEG Retained Meter Registers		0 N	Optional	This segment provides the information pertaining to the registers on meters that have been retained at the meter point. <b>N: B</b> Register information is not provided for token devices with no registers.	

Segment and Field Level Identifier – 332 Message				Optionality	Description / Purpose and composition instructions		
4	FLD	Timeslot	1	Mandatory	Timeslot is a code that indicates the period that a meter is recording. The valid codes are as follows:		
					24H	24 Hour Consumption	
					00D	08-23 Day Consumption	
					00N	23-08 Night Consumption	
					24M	24Hour MD	
					01D	08-17 and 19-23 Day consumption	
					01N	23-08 Night consumption	
					01P	17-19 Peak consumption	
					0NR	08-21 MD Normal	
					0PK	17-19 MD Peak	
4	FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between t meter registers on a physical meter or set of meters.	
4	FLD	Unit of Measurement	1	Mandatory		f measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes.	
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at in order to derive a true value.	
4	FLD	Reading	1	Mandatory	Process	g is the value of a reading in the form passed to the Data sor measured in the units identified by the meter register pric cation of any multipliers.	

Segment and Field Level Identifier – 332 Message				Optionality	Description / Purpose and composition instructions	
4	FLD	Read Reason	1	Mandatory	Read Reason is a code that indicates the reason that a reading was collected. The valid code for retained meters is: <b>09</b> Special Read – Non Chargeable	
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. This will always be set to <b>A</b> – Actual, <b>E</b> – Estimated or <b>EF</b> – Estimate (Implausible / No Read available).	
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register	
4	FLD	Consumption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.	
4	FLD	Post Decimal Digits	1	Optional	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependent upon meter category.	
4	FLD	Pre Decimal Digits	1	Optional	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependent upon meter category.	
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries are as follows:  01  24Hr  02  Day  03  Night  04  NSH	

Segment and Field Level Identifier – 332 Message				Optionality	Description / Purpose and composition instructions
					05 Wattless
					06 MD Normal
					07 MD Peak
					08 Cumulative MD Normal
					09 Cumulative MD Peak
					78 Day Off Peak
					79 Night Off Peak
					80 Peak
4	FLD	Read Status	1	Mandatory	Read Status is a code that indicates the status of the reading supplied. The following code values are allowed for retained meters:
					RV Reading Valid
					RREL Reading - Manually released
					REST Reading estimated- used for settlement

#### 1.23 332W Non Interval Meter Technical Details – Withdrawn Read

### **Purpose / Description of Message**

The 332W Non Interval Meter Technical Details – Withdrawn Read message informs the Supplier registered to the Non Interval Meter point that previous readings provided on a 332 message have been withdrawn.


This includes the following details:

- The reason for the withdrawal
- The details applicable to the meter point, including MCC, DUOS Group and meter point status previously provided on the 332.
- The details of meters that have been removed from the Meter Point including register information from that meter and withdrawn readings
- The details of meters that have been newly installed at a meter point including register information from that meter and withdrawn readings
- The details of meters that are retained at a meter point following meter works including register information from that meter and withdrawn readings.
- Note: Where 332 is sent for meter points in regards Token Meter installation, removal, exchange or resets no 332W is sent
- Note: Where 332 is sent for meter points in regards to installation of signals ex MFM no 332W is sent

Message 332W is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 14	Readings Processing (Non Interval)	To notify withdrawn readings for a Non Interval meter point for a previously issued 332 message

### **Data Hierarchy Diagram**

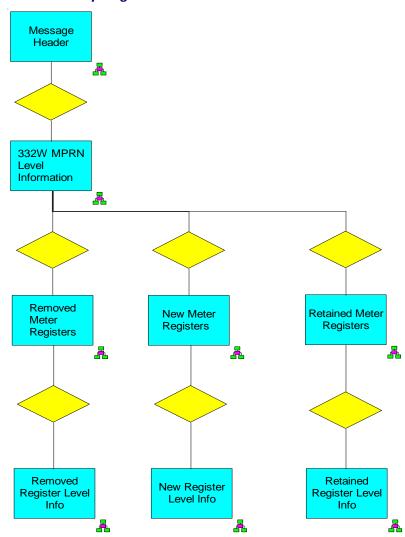

### **Message Structure**

This section describes the structure of the 332W message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 332W	Rpt	Optionality  Mandatory	Description / Purpose and composition instructions  Refer to common data segments document
1 Me	ssage F	leader	1		
1 Me	ter Poin	t Details	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	Optional	This is the Suppliers reference where provided on the inbound market message referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.
2	FLD	Networks Reference Number	1	Mandatory	A Non Interval billing document reference created at inception of the Non Interval billing document in Networks and used to reference that Non Interval billing transaction.
2	FLD	Load Profile	1	Mandatory	Load Profile is a code that determines, when coupled with Timeslot, the standard profile to be applied to the consumption for settlement. See the list of data codes for allowed values here.
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN. See list of data codes for valid entries here.
2	FLD	Meter Configuration Code	1	Mandatory	Meter Configuration Code (MCC) describes the current configuration of meter registers and other equipment at an MPRN which allow Customer Billing to take place. The MCC does not describe the specific metering equipment in use at an MPRN nor does it describe the overall capability of the metering equipment at the site.

Segment and Field Level Identifier – 332W			Rpt	Optionality	Description / Purpose and composition instructions		
					The code supplied here will reflect the MCC requested by Supplier on the 030 message where applicable.		
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status is a code to identify the connection status of a meter point. This will always be set to <b>E</b> – Energised or <b>D</b> – Deenergised on this message.		
2	FLD	Effective from Date	1	Mandatory	This is the date from which the meter point information supplied on the original 332 became effective.		
2	FLD	Essential Plant	1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant		
2	FLD	Withdrawal Reason	1	Mandatory	Withdrawal reason is a code to indicate why a reading has been withdrawn. The following are valid withdrawal reasons on a 332W:		
					A1 Erroneous Change of Supplier		
					A2 Disputed CoS Meter Reading		
					Change of Supplier  A3 Cancellation		
					A4 Change of Supplier		
					A5 Change of Legal Entity		
					B1 Incorrect MPRN		
					C1 Incorrect Estimation		
					C2 Incorrect Meter Reading		
					D1 Incorrect Rate		

Segment and Field Level Identifier – 332W					Rpt	Optionality	Descri	ption / Purpose and composition instructions	
							D2 D3	Incorrect Billing Period Incorrect Meter	
2	FLD	Кеура	d Premis	e Number	1	Optional	Not use	ed post System Separation	
2	FLD	Tariff C	Configura	tion Code	1	Optional	Not use	ed post System Separation	
2	SEG	Remov	ved Mete	r ID	0 N	Optional		gment identifies the Non Interval Meters removed at a Meter appropriate.	
	3	FLD	Meter (	Category	1	Optional	denote	Category is a code allocated by Meter Asset Manager to the manufacturer and type of meter. When combined with Number it uniquely identifies device.	
	3	FLD	Serial N	Serial Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.		
	3	FLD	Exchar	ged Meter Reference	1	See instructions	in the c	ence to allow the old and new meter to be related to each other ase of a meter exchange. This is always provided where have been exchanged at an MPRN.	
	3	SEG Removed Meter Registers		ed Meter Registers	1 N	Mandatory	This segment provides the information pertaining to the registers on meters that have been removed from the meter point.		
		4	FLD	Timeslot	1	Mandatory		ot is a code that indicates the period that a meter is recording. iid codes are as follows:	
						Managery	24H	24 Hour Consumption	
							00D	08-23 Day Consumption	
							00N	23-08 Night Consumption	
							24M	24Hour MD	

Segment and Field L	evel Ide	ntifier – 332W	Rpt	Optionality	Descrip	otion / Purpose and composition instructions
					01D	08-17 and 19-23 Day consumption
					01N	23-08 Night consumption
					01P	17-19 Peak consumption
					0NR	08-21 MD Normal
					0PK	17-19 MD Peak
4	FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between t meter registers on a physical meter.
4	FLD	Unit of Measurement	1	Mandatory	_	measurement is a code that indicates the value that is ed e.g. KWh. See data codes for valid list of codes.
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at a in order to derive a true value.
4	FLD	Reading	1	Mandatory	Process	g is the value of a reading in the form passed to the Data sor measured in the units identified by the meter register prior cation of any multipliers. May contain an estimate if read type ates.
4	FLD	Read Reason	1	Mandatory		eason is a code that indicates the reason that a reading was d and will be set to:
						pendix 1C for valid read types on the 332 market message read types sent depending on the meter works carried out
4	FLD	Read Type	1	Mandatory	Custom	ype is a code that indicates whether a reading is an Actual, er, Estimated or Substitute reading. This will always be set to A – Actual, E – Estimated or EF – Estimate (Implausible / No ailable).

LD Previou	us Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the
LD Consur				previous consumption period for the register
	nption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.
LD Post D	ecimal Digits	1	Optional	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependent upon meter category.
LD Pre De	cimal Digits	1	Optional	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependent upon meter category.
LD Registe	er Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries are as follows:  01  24Hr  02  Day  03  Night  04  NSH  05  Wattless  06  MD Normal  07  MD Peak  08  Cumulative MD Normal  09  Cumulative MD Peak  78  Day Off Peak
L	D Pre De	D Pre Decimal Digits	D Pre Decimal Digits 1	D Post Decimal Digits 1 Optional  D Pre Decimal Digits 1 Optional

Segme	ent and	Field L	evel Ide	ntifier – 332W	Rpt	Optionality	Description / Purpose and composition instructions
					79 Night Off Peak 80 Peak		
			FLD	Read Status	1	Mandatory	Read Status is a code that indicates the status of the reading supplied. The following code value is allowed on this message:  RWI Reading withdrawn
2	SEG	New N	leter ID		0 N	Optional	This segment identifies the new Non Interval Meters fitted at a Meter Point if appropriate.
	3 F		Meter Category		1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.
	3	FLD	Serial I	Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.
	3	FLD	Meter I	Location	1	See instructions	Meter Location is a code that refers to the physical position of a meter at a premise. Provided for newly installed meters. In some circumstances no meter location code was convertible from legacy data. In such cases no Meter Location will be provided.
	3	FLD	Exchar	nged Meter Reference	1	See instructions	A reference to allow the old and new meter to be related to each other in the case of a meter exchange. This is always provided where meters have been exchanged at an MPRN.
	3	SEG	New M	eter Registers	1 N	Mandatory	This segment provides the information pertaining to the registers on meters that have been fitted at the meter point.
			FLD	Timeslot	1	Mandatory	Timeslot is a code that indicates the period that a meter is recording.  The valid codes are as follows:  24H 24 Hour Consumption

Segment and Field L	evel Ide	ntifier – 332W	Rpt	Optionality	Descri	ption / Purpose and composition instructions
					00D	08-23 Day Consumption
					00N	23-08 Night Consumption
					24M	24Hour MD
					01D	08-17 and 19-23 Day consumption
					01N	23-08 Night consumption
					01P	17-19 Peak consumption
					0NR	08-21 MD Normal
					0PK	17-19 MD Peak
4	FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between at meter registers on a physical meter or set of meters.
4	FLD	Unit of Measurement	1	Mandatory	_	f measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes.
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at a in order to derive a true value.
4	FLD	Reading	1	Mandatory	Process	g is the value of a reading in the form passed to the Data sor measured in the units identified by the meter register prior cation of any multipliers.
4	FLD	Read Reason	1	Mandatory		Reason is a code that indicates the reason that a reading was ed. The following codes are permitted for this item:
					See Ap	pendix 1C for valid read types on the 332 market message read types sent depending on the meter works carried out

Seg	ment an	d Field	Level Id	lentifier – 332W	Rpt	Optionality	Description / Purpose and composition instructions	
	4		FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. This will always be set to <b>A</b> – Actual for this item.	
	4		FLD	Post Decimal Digits	1	Mandatory	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependant upon meter category. This is always provided for new meters.	
	4		FLD	Pre Decimal Digits	1	Mandatory	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependant upon meter category. This is always provided for new meters.	
		4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. See the list of data codes for valid entries here.	
2	SEG	Retaine	ed Mete	r ID	0 N	Optional	This segment identifies the Non Interval Meters that were installed at a Meter Point prior to meter works and are retained there after meter works are completed if appropriate.	
	3	FLD	Meter Category  Serial Number		1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.	
	3	FLD			1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.	
	3 SEG		Retained Meter Register s		0 N	Optional	This segment provides the information pertaining to the registers on meters that have been retained at the meter point.	
			FLD	Timeslot	1	Mandatory	Timeslot is a code that indicates the period that the meter is recording. The valid codes are as follows:  24H 24 Hour Consumption	

Segment and Field	Level Id	lentifier – 332W	Rpt	Optionality	Descri	ption / Purpose and composition instructions
					00D	08-23 Day Consumption
					00N	23-08 Night Consumption
					24M	24Hour MD
					01D	08-17 and 19-23 Day consumption
					01N	23-08 Night consumption
					01P	17-19 Peak consumption
					0NR	08-21 MD Normal
					0PK	17-19 MD Peak
4	FLD	Meter Register Sequence	1	Mandatory		Register Sequence is an identifier to distinguish between nt meter registers on a physical meter or set of meters.
4	FLD	Unit of Measurement	1	Mandatory		f measurement is a code that indicates the value that is red e.g. KWh. See data codes for valid list of codes.
4	FLD	Meter Multiplier	1	Mandatory		Multiplier is a factor to be applied to an advance or reading at a r in order to derive a true value.
4	FLD	Reading	1	Mandatory	Proces	g is the value of a reading in the form passed to the Data sor measured in the units identified by the meter register prior ication of any multipliers.
4	FLD	Read Reason	1	Mandatory		Reason is a code that indicates the reason that a reading was ed. The valid code for retained meters is:
					09	Special Read – Non Chargeable

Segment and Field	Level Ic	lentifier – 332W	Rpt	Optionality	Description / Purpose and composition instructions
4	FLD	Read Type	1	Mandatory	Read Type is a code that indicates whether a reading is an Actual, Customer, Estimated or Substitute reading. This will always be set to either <b>A</b> – Actual, <b>E</b> – Estimated or <b>EF</b> – Estimate (Implausible / No read available).
4	FLD	Previous Read Date	1	Mandatory	Previous Read Date is the date to which a reading prior to the one currently being reported applies, i.e. this is the end of the of the previous consumption period for the register
4	FLD	Consumption	1	See instructions	This data item is only provided for on consumption meters.  Consumption is the metered or estimated consumption for the period from a previous read date to this read date, measured in kWh.
4	FLD	Post Decimal Digits	1	Optional	The number of digits after the decimal place on a meter register. This data is provided where it is defined for register and device and is dependant upon meter category.
4	FLD	Pre Decimal Digits	1	Optional	The number of digits before the decimal place on a meter register This data is provided where it is defined for register and device and is dependant upon meter category.
4	FLD	Register Type	1	Mandatory	Register Type is a code to indicate the purpose of the register. The valid entries are as follows:
					<b>01</b> 24Hr
					<b>02</b> Day
					03 Night
					<b>04</b> NSH
					05 Wattless
					06 MD Normal
					07 MD Peak

Segment and Field	Segment and Field Level Identifier – 332W			Optionality	Description / Purpose and composition instructions
					08 Cumulative MD Normal
					09 Cumulative MD Peak
					78 Day Off Peak
					79 Night Off Peak
					80 Peak
4	FLD	Read Status	1	Mandatory	Read Status is a code that indicates the status of the reading supplied. The following code value is allowed on this message:
					RWI Reading withdrawn

#### 1.24 331 Interval Meter Technical Details

#### **Purpose / Description of Message**

The 331 Interval Meter Technical Details message provides the Supplier registered to the Interval Meter point and, for QH Meter point, to TSO with the technical details of the meters installed at that meter point following meter works carried out at that meter point.

This includes the following details:


- The details applicable to the meter point, including MCC, DUOS Group and meter point status.
- The details of meters that have been removed from the Meter Point if applicable
- The details of meters that have been newly installed at a meter point including register / channel information for that meter if applicable.
- The details of meters that have been removed from the meter point and the de-energisation of the meter point at the same time
- The details of meters that have been exchanged for revenue protection purposes
- The details of the completion of the installation of signals ex MFM meter works

# Message 331 is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 2	Change of Supplier – Interval	To notify meter technical details to the new supplier after completion of a Interval Change of Supplier
MPD 3	Change of Supplier – Objection and Cancellation	To notify the meter technical details to the Old Supplier following cancellation of an Interval Change of Supplier
MPD 6	New QH Metered Demand Connection	To notify Interval meter technical details after completion of a new connection of a new Interval Metered Demand Connection
MPD 7 (1.1)	New Distribution Connected Non Participant Generator	To notify Interval meter technical details after completion of a new connection for a new Distribution Connected Non Participant Generator
MPD 7 (1.2)	New Distribution Connected Participant Generator	To notify Interval meter technical details after completion of a new connection for a new Distribution Connected Participant Generator
MPD 8 1.1.	Changes to Connection Characteristics	To notify Interval meter technical details after a change to connection characteristics
MPD 9	De-energisation	To notify Interval meter removal after de-energisation of a Interval site
MPD 11	Changes to Meter Configuration	To notify Interval meter technical details after a change in Meter Configuration
MPD 12	Meter Problems and Damages	To notify Interval meter technical details where resolution of meter problems and damage result in a change of Interval meter technical details
MPD 35	Change of Metering from Non Interval to Interval	To notify Interval meter technical details following completion of a change of metering from Non Interval to Interval
MPD 35.1	Change of Smart Data Service from Interval to Non Interval	To notify meter technical details for a Interval meter point following a change of metering from Interval to Non Interval
MPD 13	Planned Meter Exchange	To notify meter technical details for a Interval meter point

Process	Number and Title	Use of Message			
MPD 10	Re-Energise	To notify Interval meter technical details after re-energisation of an Interval site where a meter installation or reconfiguration from Non Interval to Interval has occurred			

#### **Data Hierarchy Diagram**

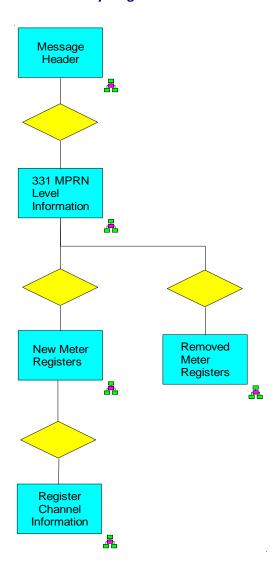

#### **Message Structure**

This section describes the structure of the 331 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 331 Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Message Header				Mandatory	Refer to common data segments document
1 Me	1 Meter Point Details			Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference	1	See instructions	This is the Suppliers reference where provided on the inbound market message referenced back to Supplier. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier request.
2	FLD	Networks Reference Number	1	Optional	Not used post System Separation
2	FLD	DUOS Group	1	Mandatory	Duos Group is a code which denotes the use of system tariff that applies to the MPRN.
2	FLD	Meter Configuration Code	1	See instructions	Meter Configuration Code (MCC) describes the current configuration of meter registers and other equipment at an MPRN which allow Customer Billing to take place. The MCC does not describe the specific metering equipment in use at an MPRN nor does it describe the overall capability of the metering equipment at the site.
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status is a code to identify the connection status of a meter point. This will be set to one of the following on this message: <b>E</b> – Energised or <b>D</b> – De-energised.

Segm	ent and	Field L	evel Identifier – 331 Message	Rpt	Optionality	Description / Purpose and composition instructions
2	FLD	Effective from Date		1	Mandatory	This is the date from which the meter point information supplied became effective.
2	FLD	Essential Plant		1	See Instructions	A flag will be set to:  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	FLD	DUOS Billing Frequency Code		1	Mandatory	DUoS Billing Schedule for an MPRN with Half Hourly interval meter  B Bi-Monthly
2	FLD	DUOS Billing Cycle		1	Mandatory	The day in a 41 day cycle that a Half Hourly meter is due to be billed.  Provided for Half Hourly Meter Points only
2	SEG	Removed Meter ID		0 N	Optional	This segment identifies the Interval Meters removed at a Meter Point if appropriate.
	3	FLD	Meter Category	1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.
	3		FLD Serial Number		Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.
	3	FLD	Exchanged Meter Reference	1	See instructions	A reference to allow the old and new meter to be related to each other in the case of a meter exchange. This is always provided where meters have been exchanged at an MPRN.
2	2 SEG New Meter ID		Meter ID	0 N	Optional	This segment identifies the new Interval Meters fitted at a Meter Point if appropriate.

Segment and	Field L	evel Ide	ntifier – 331 Message	Rpt	Optionality	Description / Purpose and composition instructions	
3	FLD	Meter (	Category	1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies device.	
3	FLD	Serial N	Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies device.	
3	3 FLD Meter Location		1	See instructions	Meter Location is a code that refers to the physical position of a meter at a premise. See list of data codes for valid codes for this item. In some circumstances no meter location code was convertible from legacy data. In such cases no Meter Location will be provided.		
3	FLD	Exchar	nged Meter Reference	1	See instructions	A reference to allow the old and new meter to be related to each other in the case of a meter exchange. This is always provided where meters have been exchanged at an MPRN.	
3	SEG	Registe	er / Channel Information	1 N	Mandatory	This segment provides the information pertaining to the registers or channels on meters that have been fitted at the meter point.	
	4 F		Metering Interval	1	Mandatory	Metering Interval identifies the length of a period when consumption is recorded on an Interval meter.  15	
	4	FLD	Register Type	1	Mandatory	Register Type is a code that indicates the purpose of the register. The valid register types on this message are as follows:  50 Import QH (Kw)	

vel Ider	ntifier – 331 Message	Rpt	Optionality	Description	/ Purpose and composition instructions
				51	Import QH (kVAr)
				52	Export QH (Kw)
				53	Export QH (kVAr)
				70	Import HH kW
				74	Import 24hr kWh
FLD	Unit of Measurements	1	Mandatory		asurement is a code that indicates the value that is The valid codes on this message are:
				KWT	kW
				KVR	KVAr
				KWH	kWh
		FLD Unit of Measurements			FLD Unit of Measurements 1 Mandatory Units of measured. T

#### 1.25 301 Meter Point Characteristics

#### **Purpose / Description of Message**

The 301 Meter Point Characteristics message notifies the Supplier registered to the Non Interval / Interval Meter Point of the following:

**N.B** This message is also sent to TSO for Interval Meter Points

- An increased / decreased connection at that Meter Point
- Manual changes to Meter Point characteristics

The message includes the following details:

- Metered technical details for the meter point where applicable
- Confirmation of Meter Point Address.

Message 301 is used in the following Market Process:

Process	Number and Title	Use of Message		
MPD 8	Changes to Connection	To notify Non Interval or Interval meter point characteristics following a change to		
1.1.	Characteristics	connection characteristics		

#### **Data Hierarchy Diagram**



#### **Message Structure**

This section describes the structure of the 301 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 301 Message	Rpt	Optionality	Description / Purpose and composition instructions		
1 Message Header			1	Mandatory	Refer to common data segments document		
1 Me	1 Meter Point Details			Mandatory			
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.		
2	2 FLD DLF (Distribution Loss Factor) Code		1	See instructions	Distribution Loss Factor is either linked to the connection voltage or may be specific to a site. The Distribution Loss Factor itself is expressed as a multiplier and may vary according to time of day. It represents the number of KWH required to pass from the transmission system to provide 1 KWH of consumption at a connection point to the distribution system. For demand customers, it is a standard code dependent on connection voltage. For embedded generators, it is site specific. It is used in Data Aggregation. It is currently expressed as a value for day KWH and a value for night KWH.  The code values for this item are as follows:		
					LV Low voltage  MV Medium voltage  38KV 38 KV  110KV 110 KV  This item will only be changed following increased / decreased connections initiated by the Customer via Networks.		

2	FLD	Transformer Loss Factor	1	See instructions	Transformer Loss Factor is a factor that is applied to account for transformer losses when a meter point is metered at lower voltage than the connection voltage. Where the consumption at a meter point is metered on the secondary side of the customer's primary transformer, the metered consumption is multiplied by the TLF to infer the consumption at the actual connection point.  This item may be changed manually by Networks when changes to a connection result in a change to the TLF for a site. For example, change of transformer or metering.
2	FLD	Connection System Code	1	See instructions	Connection System is a code that indicates the network to which a meter point is connected.  The code values for this item are as follows:  DSO_GRID ESB Distribution  TSO_GRID Eirgrid Transmission  This item is provided for information on this message.
2	FLD	Load Profile	1	See instructions	Load Profile is a code that determines, when coupled with Timeslot, the derived profile to be applied to the consumption for settlement. This item may be changed following an increased / decreased connection, or manual change which results in an update to the Load Profile. See list of data codes for the valid list of codes.
2	FLD	Load Factor	1	See instructions	A code that defines the pattern of demand and so affects the load profile allocated to a Maximum demand Meter Point. The code will not be present for Interval or non-Maximum Demand Meter Points. Where present it will be set to one of the following values:

					LF1 0<30%
					<b>LF2</b> 30% = < LF 2 < 50%
					<b>LF3</b> >=50%
					This item may be changed manually by Networks following changes in patterns of demand, or may be changed following an increased / decreased connection.
2	FLD	Maximum Import Capacity	1	See instructions	Maximum Import Capacity is the capacity in kVA agreed in the connection agreement and permitted to be imported at a meter point.
					This item will only be changed following increased / decreased Connections initiated by the Customer via Networks.
2	FLD	Maximum Export Capacity	1	See instructions	Maximum Export Capacity is the capacity in kVA agreed in the connection agreement and permitted to be exported at a meter point.
					This item will only be changed following increased / decreased connections initiated by the Customer via Networks.
2	FLD	MIC Start Date	1	Optional	Not used post System Separation
2	FLD	Current Changeable Service Capacity	1	Optional	Not used post System Separation
2	FLD	CSC Start Date	1	Optional	Not used post System Separation
2	FLD	CSC End Date	1	Optional	Not used post System Separation
2	FLD	Meter Configuration Code	1	See instructions	Meter Configuration Code (MCC) describes the current configuration of meter registers and other equipment at an MPRN which allow Customer Billing to take place. The MCC does not describe the specific metering equipment in use at an MPRN nor does it describe the overall capability of the metering equipment at the site.

						This may be changed as part of an Increased / decreased connection.
2	FLD	FLD DUOS Group		1	See instructions	DUOS Group is a code which denotes the use of system tariff that applies to the MPRN. This item may be changed as part of an increased / decreased connection initiated by Networks. See list of data codes for valid entries here.
2	FLD	Effective from Date		1	Mandatory	This is the date from which the meter point characteristics provided became effective.
2	FLD	Essential Plant		1	See Instructions	A flag will be set to :  1 i.e. a logical value of True – where ESBN determine a site is Essential Plant  0 i.e. a logical value of False - where ESBN determine a site is no longer Essential Plant
2	SEG	Meter Point Address		1	Mandatory	The address at which the Meter Point is connected. This is provided to Suppliers as confirmation of the Meter Point address to which the changes apply. Networks will provide the Meter Point Address held on their systems in this segment.
	3	FLD	Unit No.	1	Optional	This field can be used to populate information relating to the unit, flat or apartment number that can be part of an address.
	3	FLD	Addr Line 1	1	Optional	This field can be used as overflow for address details
	3	FLD	Addr Line 2	1	Optional	This field can be used as overflow for address details
	3		House No.	1	Optional	This can be used to populate the number of a premises given as part of an address

3	FLD	Street	1	See instructions	This field stores information relating to the street part of an address. This field will be provided by Networks.
3	FLD	Addr Line 4	1	Optional	This field can be used as overflow for address details
3	FLD	Addr Line 5	1	Optional	This field can be used as overflow for address details
3	FLD	Postal Code	1	Optional	This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.
					They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each Eircode is comprised of seven uppercase alpha/numeric characters.
3	FLD	City	1	Optional	Used to populate the details of which City an address resides in where appropriate
3	FLD	County - Ireland	1	See instructions	This denotes the county in which an address is situated and is defined as a AN(3) field for Meter Point Address. This item will match one of the permissible values for County - Ireland codes. See the list of Data codes for permissible values here.
3	FLD	Country	1	See instructions	This denotes the Country in which a Meter Point address is situated and is defined as a AN(3) field. This item will be populated with the value <b>IE</b> – Ireland or <b>GB</b> –United Kingdom for Meter Point addresses.

#### 1.26 301N Proposed Meter Point Characteristics

#### **Purpose / Description of Message**

The 301N Proposed Meter Point Characteristics message notifies the Supplier registered to the Non Interval / Interval Meter Point that a Quotation involving an increased / decreased connection at that Meter Point is active.

The message includes the following details:

- Proposed changes to Metered technical details for the meter point where applicable
- Confirmation of Meter Point Address.

Message 301N is used in the following Market Processes:

Process Number and Title		Use of Message			
	Changes to Connection Characteristics	To notify Non Interval or Interval meter point characteristics following an active quotation from the customer for increased / decreased connection			

#### **Data Hierarchy Diagram**



#### **Message Structure**

This section describes the structure of the 301N message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field Level Identifier – 301N	Rpt	Optionality	Description / Purpose and composition instructions	
1 Message Header			1	Mandatory	Refer to cor	mmon data segments document
1 Me	1 Meter Point Details			Mandatory		
2	FLD	MPRN	1	Mandatory		identifying reference number for the Meter Point that the as taken over. All elements of MPRN will be provided.
2	2 FLD DLF (Distribution Loss Factor) Code		1	See instructions	Distribution Loss Factor is either linked to the connection voltage or may be specific to a site. The Distribution Loss Factor itself is expressed as a multiplier and may vary according to time of day. It represents the number of KWH required to pass from the transmission system to provide 1 KWH of consumption at a connection point to the distribution system. For demand customers, it is a standard code dependent on connection voltage. For embedded generators, it is site specific. It is used in Data Aggregation. It is currently expressed as a value for day KWH and a value for night KWH.	
					The valid co	ode values are as follows:
					LV	Low voltage
					MV	Medium voltage
					38KV	38 KV

Segment and Field Level Identifier – 301N		Rpt	Optionality	Description / Purpose and composition instructions	
					<b>110KV</b> 110 KV
					This item will only be changed when increased / decreased connections are proposed by the Customer via Networks.
2	FLD	Transformer Loss Factor	1	See instructions	Transformer Loss Factor is a factor that is applied to account for transformer losses when a meter point is metered at lower voltage than the connection voltage. Where the consumption at a meter point is metered on the secondary side of the customer's primary transformer, the metered consumption is multiplied by the TLF to infer the consumption at the actual connection point.
					This item will only be changed where increased / decreased connections are proposed by the Customer via Networks.
2	FLD	Connection System Code	1	See instructions	Connection System is a code that indicates the network to which a meter point is connected.
					The valid code values are as follows:
					DSO_GRID ESB Distribution
					TSO_GRID Eirgrid Transmission
					This item is provided for information on this message.
2	FLD	Load Profile	1	See instructions	Load Profile is a code that determines, when coupled with Timeslot, the derived profile to be applied to the consumption for settlement.  This item may be changed where increased / decreased connections

Segm	Segment and Field Level Identifier – 301N			Optionality	Description / Purpose and composition instructions
					that affect the load profile are proposed by Networks. See list of data codes for the valid list of codes.
2	FLD	Load Factor	1	See instructions	A code that defines the pattern of demand and so affects the load profile allocated to a Maximum demand Meter Point. The code will not be present for Interval or non-Maximum Demand Meter Points. Where present it will be set to one of the following values:
					<b>LF1</b> < 30%
					<b>LF2</b> 30 =< LF2 <50%
					<b>LF3</b> >=50%
					This item may be changed where increased / decreased connections that affect the load factor are proposed by the Customer via Networks.
2	FLD	Maximum Import Capacity	1	See instructions	Maximum Import Capacity is the capacity in kVA agreed in the connection agreement and permitted to be imported at a meter point.
					This item will only be changed where increased / decreased connections are proposed by the Customer via Networks.
2	FLD	Maximum Export Capacity	1	See instructions	Maximum Export Capacity is the capacity in kVA agreed in the connection agreement and permitted to be exported at a meter point.
					This item will only be changed where increased / decreased connections are proposed by the Customer via Networks which change the MEC at a meter point.
2	FLD	Meter Configuration Code	1	See instructions	Meter Configuration Code (MCC) describes the current configuration of meter registers and other equipment at an MPRN which allow

Segm	ent and	Field L	evel Identifier – 301N	Rpt	Optionality	Description / Purpose and composition instructions
						Customer Billing to take place. The MCC does not describe the specific metering equipment in use at an MPRN nor does it describe the overall capability of the metering equipment at the site.
						This may be changed when an MCC change forms part of a proposed increased / decreased connection.
2	FLD	DUOS	Group	1	See instructions	DUOS Group is a code which denotes the use of system tariff that applies to the MPRN. This item may be changed where a change in DuoS Group forms part of an increased / decreased connection proposed by Networks. See list of data codes for valid entries here.
2	SEG	Meter	Point Address	1	Mandatory	The address at which the Meter Point is connected. This is provided
						to Suppliers as confirmation of the Meter Point address to which the changes apply. Networks will provide the Meter Point Address held on their systems in this segment.
	3	FLD	Unit No.	1	Optional	This field can be used to populate information relating to the unit, flat or apartment number that can be part of an address.
	3	FLD	Addr Line 1	1	Optional	This field can be used as overflow for address details
	3	FLD	Addr Line 2	1	Optional	This field can be used as overflow for address details
	3	FLD	House No.	1	Optional	This can be used to populate the number of a premises given as part of an address
	3		Street	1	See instructions	This field stores information relating to the street part of an address. This field will be provided by Networks.

Segment and	Segment and Field Level Identifier – 301N			Optionality	Description / Purpose and composition instructions
3	FLD	Addr Line 4	1	Optional	This field can be used as overflow for address details
3	FLD	Addr Line 5	1	Optional	This field can be used as overflow for address details
3	FLD	Postal Code	1	Optional	This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.
					They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each Eircode is comprised of seven uppercase alpha/numeric characters.
3	FLD	City	1	Optional	Used to populate the details of which City an address resides in where appropriate
3	FLD	County - Ireland	1	See instructions	This denotes the county in which an address is situated and is defined as a AN(3) field for Meter Point Address. This item will match one of the permissible values for County - Ireland codes. See the list of Data codes for permissible values here.
3	FLD	Country	1	See instructions	This denotes the Country in which a Meter Point address is situated and is defined as a AN(3) field. This item will be populated with the value <b>IE</b> – Ireland or <b>GB</b> –United Kingdom for Meter Point addresses.

#### 1.27 311 Meter Problems


#### **Purpose / Description of Message**

The purpose of the 311 Meter Problems message is to notify the Registered Supplier of the Meter Point of problems observed at that Meter Point.

Message 311 is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 12 Meter Problems and Damage		To notify supplier of problems observed at the Meter Point
MPD 17 Adjustments and Consumption		To notify supplier of problems observed at the Meter Point

#### **Data Hierarchy Diagram**

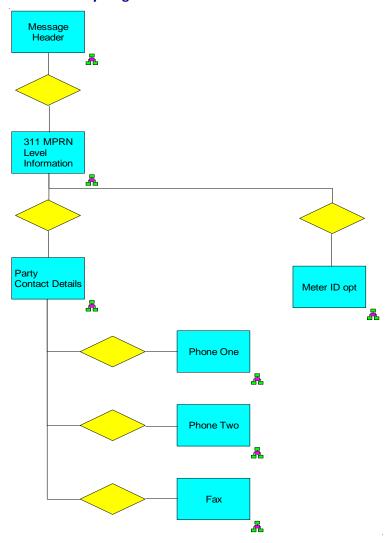

#### **Message Structure**

This section describes the structure of the 311 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field L	evel Identifier – 311 Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	essage H	leader		1	Mandatory	Refer to common data segments document
1 Me	1 Meter Point Details			1	Mandatory	
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.	
2	SEG	Party (	Contact Details	1	Optional	Party Contact Details provides details such as contact name, organisation and department, telephone, e-mail and/or fax details enabling the party to be contacted. This allows Networks to forward their contact details in case of queries with the message.
	3	FLD	Phone number 1	1	See instructions	This is the principal phone number of a contact and will be populated if the segment is provided.
	3	FLD	Phone Ext1	1	See instructions	This is the principal phone number overflow field for storing number extensions where applicable
	3	FLD	Phone number 2	1	Optional	This field can be used for the secondary phone number where this is required.
	3	FLD	Phone Ext2	1	Optional	This is the secondary phone number overflow field for storing number extensions where applicable.
	3		Fax	1	Optional	This field is intended to store a Fax telephone number where applicable
	3		Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable
	3		Email	1	Optional	This field is intended to store electronic mail address details where applicable

Segmo	ent and	Field Level Identifier – 311 Message	Rpt	Optionality	Description	on / Purpose and composition instructions
2	FLD	Observation Code	1	Mandatory	concerning	on Code is a code that describes observations made at or g a meter point or meters at a meter point. Valid observation this message are as follows:
					31	Suspect/Tampered
					32	Meter Damaged
					33	Glass broken
					34	R/M seal broken
					35	Local seal broken
					36	Meter reversing
					37	Meter stopped
					38	Cab Door broken
					39	Cab Door Missing
					40	Meter Exchanged
					41	Meter Removed
					42	Meter Upside down
					43	Meter Board Loose
					44	4 Digit meter
					45	6 Digit meter
					46	Time Switch stopped
					47	Time Switch at wrong time > 2 hours
					48	Time Switch broken

Segme	Segment and Field Level Identifier – 311 Message				Optionality	Description / Purpose and composition instructions	
						49 Stuck on Night	
						50 Delete Access Instruction	
						51 Premises in use	
						52 Builder on Premises	
						Freeform Trouble message – See  99 observation text.	
2	FLD	Observ	vation Date	1	Mandatory	Observation Date is the date an observation was made.	
2	FLD	Observ	vation Text	1	Optional	Observation Text provides a description of an observation and may be used to convey comments regarding a problem. Observation text will be provided where Observation Code is set to <b>99</b> (See above) and in other cases as necessary.	
2	2 SEG					This segment provides information relating to a particular meter installed at a meter point to which observation details can apply. This segment is only provided where observations apply to a particular Meter at a Meter Point.	
		Meter	ID		Optional	<b>N.B</b> This segment should be 01 as per 260 and 261 messages. Only one Meter ID will be provided. If problems are found at more than one meter at a meter point separate messages are sent for each meter affected.	
	3		FLD Meter Category		Optional <sup>1</sup>	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies a Meter. This item is only	

<sup>&</sup>lt;sup>1</sup> Market Message Guide error – these fields are optional on the schema

Segment and	Segment and Field Level Identifier – 311 Message			Optionality	Description / Purpose and composition instructions
					populated if observations apply to a particular meter or meters at a meter point.
					Item should be Mandatory as on 260,261 – where segment is provided item will always be populated.
3	FLD		1		Serial No is the physical number found on a meter. When combined with meter category it uniquely identifies a device.
		Serial Number		Optional1	Item should be Mandatory as on 260,261 – where segment is provided item will always be populated.

## 1.28 260 Observation of Problem, Damage or Tampering


### **Purpose / Description of Message/Validation**

The 260 Observation of problem, Damage or Tampering message allows the Supplier registered to the Meter Point to notify Networks of problems identified at a Meter point. . DSO will undertake validation of the message at segment and field level

Message 260 is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 12	Meter Problems and Damage	To notify ESB Networks of problems observed at the Meter Point

## **Data Hierarchy Diagram**

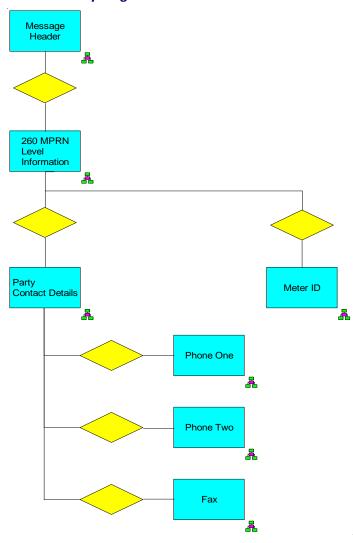

## Message Structure/Validation

of the the items com th under	This section describes the structure of the 260 message. The purpose of the message segments and data items are explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level Segment and Field Level Identifier – 260 Message			Optionality	Description / Purpose and composition instructions	Validation
1 Me	ssage F	leader	1	Mandatory	Refer to common data segments document	
1 Me	ter Poin	t Details	1	Mandatory		
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN must be provided.	Message will fail validation if a valid MPRN registered to the Supplier is not provided.
2	FLD	Market Participant Business Reference	1	Mandatory	This is the Suppliers number given as reference in the request. This will be used in future contact with Suppliers to reference the request.	Mandatory Message will fail validation if this field is not populated.
2	FLD	Supplier ID	1	Mandatory	Supplier ID is the identification code of a Supplier. This must be the valid Supplier for the Meter Point.	The Supplier to whom the Meter Point is registered. A check is made to ensure that the Supplier is registered to the Meter Point.
2	SEG	Party Contact Details	1	Optional	Party Contact Details provides details such as contact name, organisation and department, telephone, e-mail and/or fax details enabling the party to be contacted. This allows Supplier to forward their contact details in case of queries with the message.	No validation of this segment

of the the ritems a comp	This section describes the structure of the 260 message. The purpose of the message segments and data items are explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level Segment and Field Level Identifier – 260 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
	3	FLD	Phone number 1	1	See instructions	This is the principal phone number of a contact and must be populated if the segment is provided.	No validation of this field.
	3 FLD Phone Ext1 1		1	See instructions	This is the principal phone number overflow field for storing number extensions where applicable	No validation of this field	
	3 FLI		Phone number 2	1	Optional	This field can be used for the secondary phone number where this is required.	No validation of this field
	3	FLD	Phone Ext2	1	Optional	This is the secondary phone number overflow field for storing number extensions where applicable.	No validation of this field
	3	FLD	Fax	1	Optional	This field is intended to store a Fax telephone number where applicable	No validation of this field
	3	FLD	Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable	No validation of this field
	3 FLD Email		1	Optional	This field is intended to store electronic mail address details where applicable	No validation of this field.	
2	2 FLD Observation Cod		vation Code	1	Mandatory	Observation Code is a code that describes observations made at or concerning a meter point or meters at a meter point. Valid observation codes for this message are as follows:	Message will fail validation if one of the code values specified is not populated.

This section describes the structure of the 260 message. The purpose of the message segments and data items are explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level Segment and Field Level Identifier – 260 Message	Rpt	Optionality	Description instructions	/ Purpose and composition	Validation
			31	Suspect/Tampered	
			32	Meter Damaged	
			33	Glass broken	
			34	R/M seal broken	
			35	Local seal broken	
			36	Meter reversing	
			37	Meter stopped	
			38	Cab Door broken	
			39	Cab Door Missing	
			40	Meter Exchanged	
			41	Meter Removed	
			42	Meter Upside down	
			43	Meter Board Loose	
			44	4 Digit meter	
			45	6 Digit meter	

of the the items com th under	This section describes the structure of the 260 message. The purpose of the message segments and data items are explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level Segment and Field Level Identifier – 260 Message		Rpt	Optionality	Description / F instructions	Purpose and composition	Validation
					<b>46</b> T	Fime Switch stopped	
					<b>47</b> T	Fime Switch at wrong time > 2 hours	
					<b>48</b> T	Time Switch broken	
					<b>49</b> S	Stuck on Night	
					<b>50</b>	Delete Access Instruction	
					<b>51</b> P	Premises in use	
					<b>52</b> B	Builder on Premises	
						Freeform Trouble message – See observation text.	
					If code <b>99</b> is protext field provid	ovided Suppliers must populate the led below.	
2	FLD	Observation Date	1	Mandatory	Observation Damade.	ate is the date an observation was	Message will fail validation if this field is not populated
2	FLD	Observation Text	1	Optional	observation and	ext provides a description of an d may be used to convey arding a problem. Observation text	No validation of this field

of the the items com th under	This section describes the structure of the 260 message. The purpose of the message segments and data items are explained and any rules for composition outlined together with the validation which the DSO undertakes at segment and field level Segment and Field Level Identifier – 260 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation	
						must be provided where Observation Code is set to <b>99</b> (See above) and in other cases where applicable.		
2	SEG	Meter	ID	1 Optional		This segment provides information relating to a particular meter installed at a meter point to which observation details can apply. This segment must be populated if Suppliers wish to make observations relating to a particular meter at a Meter Point.	This segment provides information relating to particular meters installed at a meter point to which observation details can apply.	
	3	FLD	Meter Category	1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies a device. This item must be populated if observations apply to a particular meter at a meter point.	This item must be populated if observations apply to a particular meter at a meter point.  Message will fail validation if omitted.	
	3	3 FLD Serial Number		1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies a device. This item must be populated if observations apply to a particular meter at a Meter point.	This item must be populated if observations apply to a particular meter at a meter point.  Message will fail validation if omitted.	

Retail Market Message Guide – N
---------------------------------

# 1.29 261 Resolution of Problem, Damage or Tampering


## **Purpose / Description of Message**

The 261 Resolution of problem, Damage or Tampering message allows ESB Networks to inform the Supplier registered to the Meter Point that problems with the meter point notified by Supplier on a 260 or by Networks on a 311have been resolved.

Message 261 is used in the following Market Process:

Process Number and Title		Use of Message
MPD 12	Meter Problems and Damage	To notify supplier of resolution of problems observed at the Meter Point

## **Data Hierarchy Diagram**

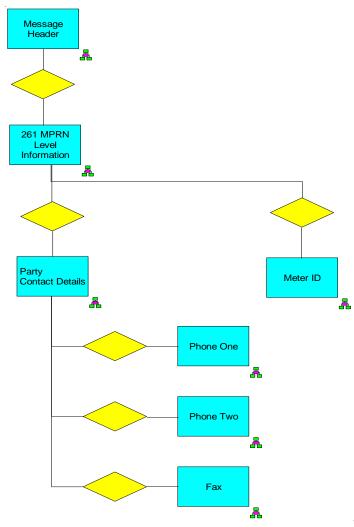

### **Message Structure**

This section describes the structure of the 261 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	ent and	Field L	evel Identifier - 261 Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Me	ssage H	eader		1	Mandatory	Refer to common data segments document
1 Me	ter Poin	Details	3	1	Mandatory	
2	FLD	MPRN	I	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.
2	FLD	Market Participant Business Reference			Optional	This is the reference provided on the 260 message referenced back to Supplier where appropriate. This message may be generated by Networks initiated work so will not always relate back to an originating Supplier 260 message. In such cases this item will not be provided.
2	SEG	Party Contact Details		1	Optional	Party Contact Details provides details such as contact name, organisation and department, telephone, e-mail and/or fax details enabling the party to be contacted. This allows Networks to forward their contact details in case of queries with the message.
	3	FLD	Phone number 1	1	See instructions	This is the principal phone number of a contact and must be populated if the segment is provided.
	3	FLD	Phone Ext1	1	See instructions	This is the principal phone number overflow field for storing number extensions where applicable
	3 FLD Phone number 2		1	Optional	This field can be used for the secondary phone number where this is required.	

Segme	ent and	Field L	evel Identifier - 261 Message	Rpt	Optionality	Description / Purpose and composition instructions
	3	FLD	Phone Ext2	1	Optional	This is the secondary phone number overflow field for storing number extensions where applicable.
	3	FLD	Fax	1	Optional	This field is intended to store a Fax telephone number where applicable
	3	FLD	Fax Ext	1	Optional	This field is intended to store a Fax extension telephone number where applicable
	3	FLD	Email	1	Optional	This field is intended to store electronic mail address details where applicable
2	FLD	Obser	 vation Code	1	Mandatory	Observation Code is a code that describes observations made at or concerning a meter point or meters at a meter point. Valid observation codes for this message are as follows:
						31 Suspect/Tampered
						32 Meter Damaged
						33 Glass broken
						34 R/M seal broken
						35 Local seal broken
						36 Meter reversing
						37 Meter stopped
						38 Cab Door broken
						39 Cab Door Missing
						40 Meter Exchanged

Segme	ent and	Field Level Identifier - 261 Message	Rpt	Optionality	Description	n / Purpose and composition instructions
					41	Meter Removed
					42	Meter Upside down
					43	Meter Board Loose
					44	4 Digit meter
					45	6 Digit meter
					46	Time Switch stopped
					47	Time Switch at wrong time > 2 hours
					48	Time Switch broken
					49	Stuck on Night
					50	Delete Access Instruction
					51	Premises in use
					52	Builder on Premises
					99	Freeform Trouble message – See observation text.
					If code <b>99</b> is below.	s provided Networks will populate the text field provided
2	FLD	Observation Date	1	Mandatory	Observation	n Date is the date an observation was made.
2	FLD	Observation Text	1	Optional	used to con must be pro	n Text provides a description of an observation and may be avey comments regarding a problem. Observation text ovided where Observation Code is set to <b>99</b> (See above) provided in other cases where applicable.

Segm	ent and	Field L	evel Identifier - 261 Message	Rpt	Optionality	Description / Purpose and composition instructions
2	SEG	Meter	ID	01	Optional	This segment provides information relating to a particular meter installed at a meter point to which observation details can apply. This segment is only provided where observations apply to a particular Meter at a Meter Point.
	3	FLD	Meter Category	1	Optional	Meter Category is a code allocated by Meter Asset Manager to denote the manufacturer and type of meter. When combined with Serial Number it uniquely identifies a device. This item will be populated if observations apply to a particular meter at a meter point.
	3	FLD	Serial Number	1	Mandatory	Serial No is the physical number found on a Meter. When combined with Meter Category it uniquely identifies a device. This item will be populated if observations apply to a particular meter at a meter point.

### 1.30 330 Notification of change of metering to Interval


### **Purpose / Description of Message**

The 330 message allows ESB Networks to notify TSO when the metering at a meter point is changing to Interval

Message 330 is used in the following Market Processes:

Process	Number and Title	Use of Message					
MPD 8	Changes to Connection	To notify updated customer details after a change to Interval meter connection					
1.1.	Characteristics	characteristics where applicable					
MPD 11	Changes to Meter Configuration	To notify updated customer details after a change in Interval Meter Configuration where applicable					
MPD 35	Change of metering to Interval	To notify TSO of a change of metering to Interval					

## **Data Hierarchy Diagram**

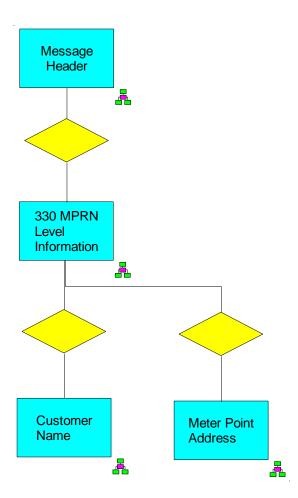

### **Message Structure**

This section describes the structure of the 330 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segm	Segment and Field Level Identifier – 330 Message			Optionality	Description / Purpose and composition instructions		
1 Me	<ul><li>1 Message Header</li><li>1 Meter Point Details</li></ul>		1	1 Mandatory Refer to common data segments document			
1 Me			1	Mandatory			
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.		
2	FLD	Maximum Import Capacity	1	See instructions	Maximum Import Capacity is the capacity in kVA agreed in the connection agreement and permitted to be imported at a meter point.		
2	FLD	Connection System Code	1	See instructions	Connection System is a code that indicates the network to which a meter point is connected.  The code values for this item are as follows:  DSO_GRID ESB Distribution TSO_GRID Eirgrid Transmission This item is provided for information on this message.		
2	FLD	DLF (Distribution Loss Factor) Code	1	See instructions	Distribution Loss Factor is either linked to the connection voltage or may be specific to a site. The Distribution Loss Factor itself is expressed as a multiplier and may vary according to time of day. It		

Segm	ent and	Field Level Identifier – 330 Message	Rpt	Optionality	Description / Purpose and composition instructions	
					represents the number of KWH required to pass from the transmission system to provide 1 KWH of consumption at a connection point to the distribution system. For demand customers, it is a standard code dependent on connection voltage. For embedded generators, it is site specific. It is used in Data Aggregation. It is currently expressed as a value for day KWH and a value for night KWH.	
					The code values for this item are as follows:	
					LV Low voltage	
					MV Medium voltage	
					<b>38KV</b> 38 KV	
					<b>110KV</b> 110 KV	
					This item will only be changed following increased / decreased connections initiated by the Customer via Networks.	
2	FLD	Supplier ID	1	Mandatory	The Supplier to whom the Meter Point is registered.	
2	FLD	SSAC	1	Mandatory	The arrangement, requested by the Supplier, under which consumptio usage will be aggregated for settlement.	
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 330 message is a code to identify the connection status of a meter point.	

2	FLD	Transf	nsformer Loss Factor		See instructions	Transformer Loss Factor is a factor that is applied to account for transformer losses when a meter point is metered at lower voltage than the connection voltage. Where the consumption at a meter point is metered on the secondary side of the customer's primary transformer, the metered consumption is multiplied by the TLF to infer the consumption at the actual connection point.  This item may be changed manually by Networks when changes to a connection result in a change to the TLF for a site. For example, change of transformer or metering.
2	2 FLD DUOS Group		1	See instructions	DUOS Group is a code which denotes the use of system tariff that applies to the MPRN. This item may be changed as part of an increased / decreased connection initiated by Networks. See list of data codes for valid entries here.	
2	FLD	Maximum Export Capacity		1	See instructions	Maximum Export Capacity is the capacity in kVA agreed in the connection agreement and permitted to be exported at a meter point.  This item is mandatory if available.
2	2 SEG Meter Point Address		1	Mandatory	The address at which the Meter Point is connected. This is provided to Suppliers as confirmation of the Meter Point address to which the changes apply. Networks will provide the Meter Point Address held on their systems in this segment.	
	3	FLD	Unit No.	1	Optional	This field can be used to populate information relating to the unit, flat or apartment number that can be part of an address.
	3	FLD	Addr Line 1	1	Optional	This field can be used as overflow for address details
	3 FLD Addr Line 2 1 Optional		Optional	This field can be used as overflow for address details		
	3 FLD House No. 1 Op		Optional	This can be used to populate the number of a premises given as part of an address		
3 FLD		FLD	Street	1	See instructions	This field stores information relating to the street part of an address.  This field will be provided by Networks.

3	FLD	Addr Line 4	1	Optional	This field can be used as overflow for address details
3	FLD	Addr Line 5	1	Optional	This field can be used as overflow for address details
3	FLD	Ireland has implemented where available it is reconstructed. Technical Contact Detail  They should conform to allowable exception for the state of t		This is the Postal Code given as part of an address where appropriate. Ireland has implemented a Postal Code system called Eircode and where available it is recommended that these Postal Codes for Technical Contact Details are communicated in Market Messages.  They should conform to the Eircode structure A65F4E2 (there is one allowable exception for the first three characters viz.D6W) where each Eircode is comprised of seven uppercase alpha/numeric characters.	
3	FLD	City	1 Optional Used to populate the diappropriate		Used to populate the details of which City an address resides in where appropriate
3	3 FLD County - Ireland 1 See instructions			This denotes the county in which an address is situated and is defined as a AN(3) field for Meter Point Address. This item will match one of the permissible values for County - Ireland codes. See the list of Data codes for permissible values here.	
3	FLD	Country	1	See instructions	This denotes the Country in which a Meter Point address is situated and is defined as a AN(3) field. This item will be populated with the value <b>IE</b> – Ireland or <b>GB</b> –United Kingdom for Meter Point addresses.
2 SEG	Custor	mer Name	1	Mandatory	The customer name stored by Networks
					See Common Data Segments for a description of individual data fields.

#### 1.131 131 Works Status

#### **Purpose / Description of Message**

The 131 message allows ESB Networks to notify Suppliers of the status of a meter works request, de-energisation request, re-energisation request, revenue protection and meter problem calls

Message 131 is used in the following Market Processes:

Process	Number and Title	Use of Message					
MPD 9 De-energisation		To notify a supplier of the work status of a request for a change of meter point status to 'D' or DR'					
MPD 10	Re-energisation	To notify a supplier of the work status of a request for a change of meter point status to 'E'					
MPD 11	Changes to Meter Configuration	To notify a supplier of the work status of a request for a change of meter configuration					
MPD 12	Meter problems and damage	To notify a supplier of the work status of a meter problem or damage call					
MPD 24	Change to Customer Details	To notify a supplier of the work status of a Smart Data Services change request					
MPD 25	Change of Legal Entity	To notify a supplier of the work status of a Smart Data Services change request					

### Message 131 will be issued in the following circumstances:


- At various points in the NPA and Supplier Request (Not NPA related) de-energisations, re-energisations, meter works and revenue protection processes
- Only supplier requested works (the exception to this being revenue protection where 131 is sent for both supplier requested and networks requested works)

- When work requested was not completed but call is FINId
- When a call is cancelled by supplier request
- When a call is set as rescheduled.
- Where a PAYG re-energisation request has not been completed due to comms unavailability.
- Where a De-energise (Supplier Request, NPA related) or Re-energise(not NPA related) request has been attempted remotely by ESBN, but cannot be completed remotely due to comms unavailability
- Where a De-Energise (NPA related) or Re-Energise (NPA related) request has been attempted remotely by ESBN but cannot be completed remotely due to comms unavailability

### Message 131 will not be issued in the following circumstances:

- To acknowledge receipt of supplier works requests
- When supplier works completes successfully (the exception to this being revenue protection where the 131 will always be sent for FINId status)

### **Data Hierarchy Diagram**

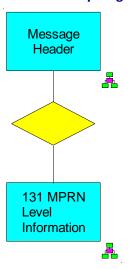

### **Message Structure**

This section describes the structure of the 131 message. The purpose of the message segments and data items are explained and any rules for composition outlined.

Segment and Field Level Identifier - 131 Message	Rpt	Optionality	Description / Purpose and composition instructions
1 Message Header	1	Mandatory	Refer to common data segments document
1 Meter Point Details	1	Mandatory	
2 FLD MPRN		Mandatory	The unique identifying reference number for the Meter Point that the customer has taken over. All elements of MPRN will be provided.

Segm	Segment and Field Level Identifier - 131 Message		Rpt	Optionality	Description / Purpose and composition instructions		
2	FLD	Market Participant Business Reference	1	Optional	This is the reference provided on the inbound message referenced back to Supplier where appropriate. This message may be generated by Networks initiated work so will not always relate back to an originating message. In such cases this item will not be provided.		
2	FLD	131 Request Status	1	Mandatory	This is a coo	de indicating the status of the original request:	
					Status	Description	
					Α	Work request accepted	
					Х	Work is cancelled	
					C1	Work Physically complete and call complete	
					C2	Work Physically Incomplete and call complete	
					R	Work is Rescheduled	
2	FLD	Appointment ID	1	Optional	Not in use in	ROI	
2	FLD	Date of Visit	1	Optional	This is the scheduled date for the order. It should also be the date the order is FINId. When the order status is RESC, this field will not show rescheduled date. Where a call is cancelled (status = WCCH or WCNC), this field will not be populated.		
2	FLD	Meter Point Status	1	Mandatory	Meter Point Status on a 131 message is a code to identify the current connection status of a meter point. This would be set to code values of either <b>E</b> – Energised, <b>D</b> – De-energised or DR – De-energised Remotely		
2	FLD	Work Type	1	Mandatory	This is a code indicating the work type:		
					Work Type Description		
					W101	De-energise- (Supplier Request, not NPA)	

Segment and Field Level Identifier - 131 Message	Rpt	Optionality	Description	/ Purpose and composition instructions
			W102	De-energise Unmet
			W103	De-energise NPA
			W104	De-energise (Service Removal)
			W105	De-energise (Customer Request)
			W201	Re-Energise
			W202	Re-Energise – Wiring Cert Required
			W203	Re-Energise NPA
			W204	Re-Energise Unmet
			W205	Re-energise with MCC Change
			W206	Re-energise with MCC Change Wiring Cert
			W207	Re-energise NPA with MCC Change
			W208	Re-energisation PAYG
			W301	MCC change-Exch from D/T to S/T
			W302	MCC change-Exch from F.R. to MD
			W303	MCC change-Exch from ST to D/T
			W304	MCC change-Install NSH MT & T/S
			W305	MCC change-Remove NSH MT & T/S
			W306	MCC change-Other MCC Change
			W307	Install Token Meter
			W308	Reset Token Meter

Segm	Segment and Field Level Identifier - 131 Message		Rpt	Optionality	Description / Purpose and composition instructions		
					W309	Token Meter Fau	ult/Ex
					W310	Remove Token I	Meter
					W311	Other Meter Wo	rk-Inst Signals Ext MFM
					W312	Other Meter Wo	rk-Exch MD for MD+Sgnls
					W321	Smart MCC Cha	inge
					W401	Revenue Protec	tion-Reseal MT/T/S Local
					W402	RP Inspection V	isit
					W403	RP Special Test	Exch
					W404	Revenue Protec	tion-Special test in-situ
					W405	Revenue Protec	tion-WC CK/Repl/Reset T/S
					W406	Revenue Protec	tion-MM CK/Repl/Reset T/S
					W407	Revenue Protec	tion-Meter/ T/S Damage
2	FLD	Outcome Reason	1	Optional	This is a coo	le indicating the outco	ome reason of the original request:
					Please note that this field is not populated is 'WCCH' or 'WCNC'		opulated where the Order Status
					Outcome R	Reason	Description
					DN03		Not D/E -
							Sickness/Bereavement
					DN04		Not D/E - No Adult Present
					DN05		Not D/E - Refused Access

Segment and Field Level Identifier - 131 Message	Rpt	Optionality	Description / Purpos	e and composition instructions
			DN06	Not D/E - Cust/Supp Arr/Paid
			DN07	COLE done by Supplier
			DN08	Not D/E - o/s/costs involved
			DN09	Supplier Phone Unanswered
			DN10	Staff Safety Problem
			R001	No Access
			R002	Snag Customer Fault
			R003	Snag ESBs Fault
			R004	Temporary Repair
			R005	Partial Complete Customers Fault
			R006	Partial Complete ESBs Fault
			R007	Missed Appointment Customers Fault
			R008	Missed Appointment ESBs Fault
			R009	Unreached
			R010	Cert required
			DS03	Not D/E -
				Bereavement

Segment and Field Level Identifier - 131 Message		Optionality	Description / Purpose and composition instructions			
			DS04	COLE done by Supplier		
			DS05	Not D/E - o/s/costs involved		
			DS06	Supplier Phone Unanswered		
			DS07	Could not locate premise		
			DS08	Safety Problem		
			DS09	Missed Appointment Customers Fault		
			RE02	Not Re-energised due to No Access		
			RE03	Not Re-energised due to Missed appointment / Customers fault		
			RE04	Not re-energised – safety problem		
			C001	Completed as requested		
			C002	Could not locate premise		
			C003	No access/ missed appt cust fault		
			C004	Incorrect call type requested		

Segm	ent and	Field Level Identifier - 131 Message	Rpt	Rpt Optionality Description / Purpose and comp		and composition instructions
					C005	Location not suitable
					C006	cust did not allow job to proceed
					C007	Staff Safety Problem
2	FLD	Order Status	1	Optional	This is the code indicating	g the status of the order:
					Order Status	Description
					FINI	Finished
					RESC	Rescheduled
					WCCH	Cancelled with charge
					WCNC	Cancelled with no charge
2	FLD	Observation Text	1	Optional	Observation Text provide used to convey comment	s a description of an observation and may be s regarding a problem.
					by the NT in completing t remarks' on AREAS or th	I will contain free text where this is provided he service order. This corresponds to 'crew e text provided on the current e-mail e.g.the of e.g. New Tenant, Auctioneer etc. The text he protection orders

#### **APPENDIX 1**

The tables below outline the valid combinations of Read Reason, Read Type and Read Status that can be found on messages 306, 307 and 332.

#### 1.32 APPENDIX 1A - MESSAGE 306 COMBINATIONS

Scenarios	Read Reason	Read Type	Read Status	Comments
Non Interval De- energisation with no meter removal	13 - De-energisation	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible)	REST	
		E - Estimate (No Access)	REST	Where a final billing must take place
		E - Estimate (No Access)	RENS	Where no final billing is required (i.e. a de-energise for reasons of NPA)

### 1.33 APPENDIX 1B - MESSAGE 307 COMBINATIONS

Scenarios	Read Reason	Read Type	Read Status	Comments
Non Interval Re- energisation with no meter installation	18 - energisation	A - Actual	RV	
		A - Actual	RREL	


# 1.35 APPENDIX 1C - MESSAGE 332 COMBINATIONS

Scenarios	Read Reason	Read Type	Read Status	Comments
Meter Removal concurrent with de-energisation	22 - Closing read for register removed	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible)	REST	
Meter install concurrent with energisation	18 - Energisation	A - Actual	RV	
		A - Actual	RREL	
Meter Changes	21 - Start read for new register	A - Actual		
	22 - closing read for register removed	A - Actual	RV	
		A - Actual	RREL	


Scenarios	Read Reason	Read Type	Read Status	Comments
		EF - Estimate (Implausible)	REST	
	16 - Closing read before meter re-programme	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible)	REST	
	11 - Opening read after meter reprogramme	A - Actual		
Remaining meters at a meter point where other meters have been installed/exchange/removed	09 – Special Read (Non- chargeable)	A – Actual	RV	
		A – Actual	RREL	
		EF - Estimate (Implausible)	REST	

#### **APPENDIX 2**

#### 1.35 APPENDIX 2A - METER POINT STATUS CHANGE VALIDATION SEQUENCE DIAGRAM

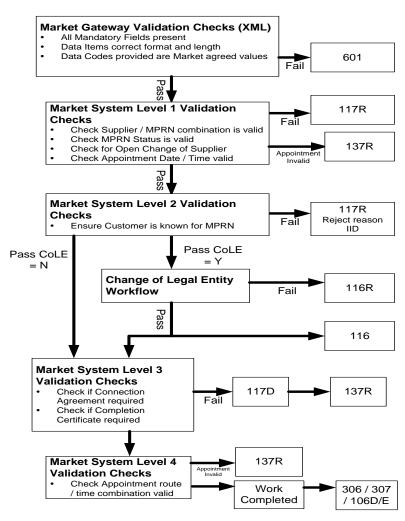

### 1.36 APPENDIX 2B - METER WORKS REQUEST VALIDATION SEQUENCE DIAGRAM

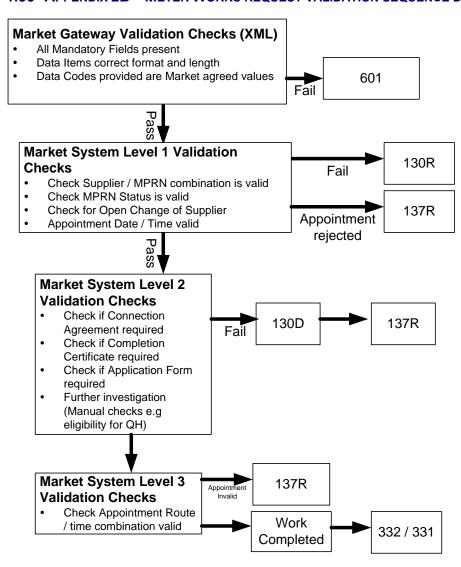

## **APPENDIX 3**

## 1.37 APPENDIX 3A - MESSAGE 131 - FIELDWORK STATUS CODE

Х	Work is Cancelled	Supplier Withdrawal Duplicate
C1	Work Complete, Call Complete	Meter tests and revenue protection only
2C	Work Incomplete, Call Complete - Cancelled	Call Complete but work cancelled (either as a result of visit or subsequently)
R	Call complete – Work (To Be) rescheduled	A further visit is required which ESB will arrange

etail Market Message Guide – Meter Works	
Market Message Guide - Meter Works Baseline V6.1	

### 1.38 APPENDIX 3B - MESSAGE 131 - MESSAGE USAGE MATRIX

	A	R	X	C1	C2	
017	NO	YES	YES	NO	YES	
030	NO	YES	YES	YES (M02/3/14)	YES	
252	NO	NO	NO	NO	NO	
260	NO	YES	YES	YES (RP Only)	YES	
RP/311	N/A	NO	N/A	YES	YES	
013	N/A	N/A	N/A	N/A	YES	
016	N/A	N/A	N/A	N/A	YES	
	Α	R	S	x	C1	C2
017	NO	YES	NIE	YES	NO	YES

030	NO	YES	NIE	YES	YES (M02/3/14)	YES
252	NO	NIE	NIE	NIE	NO	NIE
260	NO	ESB	NO	ESB	ESB (RP Only) NIE (RP & Check Meter Fitted Only)	ESB
RP/311	N/A	NO	N/A	N/A	ESB	ESB
013	N/A	N/A	N/A	N/A	N/A	ESB
016	N/A	N/A	N/A	N/A	N/A	ESB

### **APPENDIX 4**

## APPENDIX 4A - MESSAGE 017 - DE-ENERGISATION/RE-ENERGISATION REQUEST MAPPING

Note: For a Re-Energisation request to be attempted remotely, the current Meter Point Status must be 'DR'.

De-Energisation Request: Meter Point Status Reason	Re-Energisation Request: Meter Point Status Reason	Re-Energisation Meter Point Status Reason valid ?	Change of Tenant / Legal Entity Field (mandatory): - value* allowed  *(A value of 1 = True, A value of 0 = False)
<b>D01</b> (Supplier request, Not NPA)	E01 (Not NPA related)	Yes	1
	E02 (NPA related)	No	N/A
	E05 (HH PAYG)	No	N/A
D02 (NPA related)	E01 (Not NPA related)	Yes	1
	E02 (NPA related)	Yes	0
	E05 (HH PAYG)	No	N/A
<b>D04</b> (Service Removal)	E01 (Not NPA related)	Yes	1
	E02 (NPA related)	No	N/A
	E05 (HH PAYG)	No	N/A
D05 (HH PAYG)	E01 (Not NPA related)	Yes	0 or 1
	E02 (NPA related)	No	N/A
	E05 (HH PAYG)	Yes	0
D06 (Customer Request)	E01 (Not NPA related)	Yes	1
	E02 (NPA related)	No	N/A

Retail Market Message Guide – Meter W
---------------------------------------

E05 (HH PAYG)	No	N/A