Retail Market Message Guide

Data Processing

Document Information					
Business Area: ESB Networks					
Status: Final					
Author/s:	ESBN				
Version Number:	6.2				
Reason for Change	Minor Market Release v14.3				

Document Updates						
	Name	Date	Reason	Version		
	H&SP Project	22/02/2012	Initial Draft	2.3		
	RMDS	01/07/2013	Updated following approval at IGG of MCR 1134	2.4		
	Co-MMR 10.4	11/02/2015	341 MM & 342 mm – Replaced PDS with ESBN 341 MM & 342 MM – Read Date Amended 2.5.8 – Message to TSO deleted 2.5.10 – Advise interval meter readings for export channels deleted and message to TSO deleted	2.5		
	Co-MMR 10.6	04/12/2015	341 MM – Channel Level Details – "and may have zero, one or two Export Channels" deleted from "Each Meter Point will have two import channels and may have zero, one or two Export Channels" 342 MM – Read Date updated to read "The date on which the export recorded in the message occurred"	2.6		
	Co-MMR 10.7	02/06/2016	AIQ 5842 "Generation Unit ID" removed from the MPRN Level Information on MM 342 on page 80	2.7		
	Schema Release V11.0	05/08/2016	Re-versioned as part of Schema Release V11.0	3.0		
	Co-MMR 11.1	02/10/2017	AIQ 6034 "Generation Unit ID" added to the MPRN Level Information on MM 342 on page 80	3.1		
	Schema Release V12.0	23/04/2019	Re-versioned as part of Schema Release V12.0 MCR1175: Provide MP Bus Ref for Reading	4.0		

Co-MMR 12.1 4.1	19/08/2020	Re-versioned as part of Co-MMR 12.1	4.1
Schema Release V13.0	16/02/2021	Re-versioned as part of Schema Release V13.0 (Smart) MCR1157: Smart Metering Data Processing and Data Aggregation	5.0
MMR 13.2	15/12/2021	Page 10, Remove 'NI Specific validations are not included in this guide' Page 60 & 87, Remove IMP text - 'or is not valid for this jurisdiction'.	5.1
Schema Release V14.0	08/11/24	Re-versioned post detailed design as part of Schema Release V14.00.00 (MCR1216)	6.0
MMR 14.2	16/01/25	Inconsistencies with Description for VCHG corrected	<u>6.1</u>
MMR 14.3	05/08/2025	Non conformance	<u>6.2</u>

Table of Contents

INTRO	DUCTION	7
1.1	Purpose of the Message Implementation Guide	7
1.2	Validation	<u>9</u>
1.3	Message Version	10
1.4	Notes	10
DATA P	PROCESSING MESSAGE GROUP	11
1.5	Scope and Business Context	11
1.6	Message Usage Summary	12
1.7	RELATED BUSINESS DOCUMENTS	14
1.8	Message Directory – Supplier to ESB Networks	15
1.8	8.1 Message 208: Replacement Reading	15
1.8	8.2 Message 210: Supplier Provided Reading	21
1.8	8.3 Message 252: Request for Special Reading	29
1.9	MESSAGE DIRECTORY – DATA PROCESSOR/DATA COLLECTOR TO SUPPLIER	34

	1.9.1	Message 300: Validated Non Interval Readings (Scheduled)	34
	1.9.2	Message 300S: Valid Non Interval Readings (Special)	40
	1.9.3	Message 300W: Withdrawn Non Interval Readings	46
	1.9.4	Message 303R: Customer Read Rejection	51
	1.9.5	Message 305: Non Settlement Estimates	<i>57</i>
	1.9.6	Message 308: Non Interval Load Factor Reading Exception	61
	1.9.7	Message 321: Read Cycle Notification	64
	1.9.8	Message 322: DUoS Billing Cycle Notification	66
	1.9.9	Message 341: Interval Meter Daily Data	67
	1.9.10	Message 343: Smart Metering Interval Data	72
	1.9.11	Message 352R: Special Reading Request Rejection	76
	1.9.12	Message 342: Interval Meter Daily Data (Export)	79
	1.9.13	Message 345: SMART HH Cumulative Register Readings (Import)	84
\PI	PENDIX 1		88
1	L.10 APF	ENDIX 1A – MESSAGE 300 COMBINATIONS	88
1	L.11 APF	ENDIX 1B — MESSAGE 300S COMBINATIONS	90
1	L.12 APF	ENDIX 1C - MESSAGE 305 COMBINATIONS	91
ΔPI	PENDIX 2		93
-			

1.13	APPENDIX 2A – SUPPLIER PROVIDED READING VALIDATION SEQUENCE DIAGRAM	. 93
	· ·	
1.14	APPENDIX 2B – PROPOSED REPLACEMENT READING VALIDATION SEQUENCE DIAGRAM	. 94

INTRODUCTION

1.1 Purpose of the Message Implementation Guide

This document is a Message Implementation Guide to assist Suppliers in:

- The construction of market messages to be sent to DSO and MRSO; and
- The interpretation of messages received from DSO and MRSO.

The Message Implementation Guides are organized into separate **Message Groups** documents based around key business processes. These are:

- Registration, including Change of Supplier
- Customer Data and Agreements
- Data Processing
- Data Aggregation
- DUoS and Transaction Payments
- Meter Works
- SSA
- Unmetered
- Market Gateway Activity

This document is the **Data Processing Message Group** Implementation Guide.

Each Message Group section contains:

• An introduction outlining the scope and business context for the message group

- A Message Usage Summary with a description of when each message is used
- A list of Related Business Documents that govern the process
- A message directory with a section for each separate message which includes:
 - A description of each message and when it should be used
 - An overview diagram of the structure of the message.
 - For messages sent by Suppliers:
 - o A table containing composition instructions on how to populate each segment and field
 - o A table describing how the message will be validated
 - A description of the responses that can be expected
 - For messages sent by ESB Networks:
 - o A table containing a description of how each segment and field will be populated.

The same type of data is often provided in several messages and, irrespective of the message type, this data is subject to common rules for population. An example is the Meter Point Address.

A separate document exists to describe the population rules for these types of data, providing:

- An overview of the structure of the segment
- Instructions relating to how to populate each segment and field.

This is the Common Data Segments Implementation Guide.

1.2 Validation

The document provides notes on how ESB Networks will validate the messages received. The purpose of these notes is to aid the Supplier in the population of each message and is intended to avoid instances where messages are rejected due to the incorrect population of a message field. The validation described is therefore limited to field specific validations.

Syntax validation is excluded from the validation notes. This is performed by using standard XML Schema validation against the ieXML schema provided that defines the data structures of all market messages in scope. Syntax validation includes:

- Checks that the structure of the message is correct
- Checks that all mandatory fields are provided. Mandatory fields are, however, indicated in the instructions for populations.
- Checks that any data code is selected from the list of data codes issued in the ROI Market Design.

In cases where the segment on a message fails on any of these reasons, a negative acknowledgement is sent back as a market message to the message sender containing the following information:

- The Transaction Reference Number supplied on the inbound message
- A copy of the message contents as received by ESB Networks
- A description of the error.

General market process validations that are not specific to individual market message fields are excluded. These are described in the appropriate ROI Specific Market Procedure Documents (MPD) referenced in each section.

If there is any inconsistency between an MPD and the Message Implementation Guide then the MPD will take precedence.

1.3 Message Version

This Message Guide refers to and is consistent with the Discussion Request (DR 176) which is based on Market Design version 8 and the 131 market message from MCR0171.

1.4 Notes

In this document, the references to segment and field levels should be interpreted as follows:

- The level number indicated against the segment refers to the level of the data items and segments <u>within</u> that segment. Therefore, for example, in message 208 where 'MPRN Level Information –Level 2' is stated it is the data items and segments that comprise 'MPRN Level Information' that are level two items (e.g. MPRN field, Market Participant Business Reference field, Meter ID segment). Accordingly, within this document, MPRN Level Information segment is shown as a Level 1 segment.
- Message Header is a Level 1 segment is a child of Header Level Information.

DATA PROCESSING MESSAGE GROUP

1.5 Scope and Business Context

The purpose of the Data Processing messages is to enable a Supplier to provide meter readings to or request meter readings from ESB Networks and to enable the Data Processor to provide validated readings to the Supplier.

Data Processing messages are used in the following business contexts:

- The processing of Interval readings where message 341, 342 and 343 are sent by the Data Processor.
- The processing of Cumulative import 24 hour readings where message 345 is sent by the Data Processor.
- The processing of scheduled Non Interval readings where messages 300 and 305 are sent by the Data Processor.
- The notification of the read cycle where message 321 are sent by the Data Processor.
- The notification of the DUoS Billing cycle where message 322 is sent by the Data Processor.
- The processing of special reads where message 252 is sent by a Supplier and messages 352R or 300S may be received from the Data Processor.
- The processing of customer reads where message 210 may be sent by a Supplier and messages 303R or 300 may be received from the Data Processor.

In addition meter readings can also be sent to the Data Processor using messages 010 (Change of Supplier) and 016 (Change of Legal Entity). These are described in the Registration and Customer Data sections respectively. Change of Supplier reading messages 310 and 320 are also described in the Registration section.

Meter readings may also be withdrawn for a variety of reasons. Message 300W is used to communicate withdrawn readings to Suppliers.

In addition meter readings are also sent by the Data Processor as a result of Meter Works. These messages, 306, 307 and 332, and their associated withdrawal messages are described in the Meter Works sections.

The following table lists the Market Process Diagrams (MPD) where the messages are used:

MPD 1	Change of Supplier –CoS Non interval
MPD 14	Readings Processing – Non Interval Metered
MPD 15	Data Processing – QH Metered
MPD 18	Special Read Request
MPD 15.1	Data Processing for HH Interval Metering

1.6 Message Usage Summary

The following table provides a trigger list for each message detailing when it is used.

Message	Title	Sender	Recipient	Trigger	Predecessor	MPD Ref.
208	Replacement Reading	Supplier	Data Processor	Supplier decides to dispute a Change of Supplier reading by providing a replacement	310 or 320	MPD 1
210	Supplier Provided Reading	Supplier	Data Processor	Supplier has elected to provide a customer reading for a Change of Supplier or other purpose		MPD 14 Also MPD 1
252	Request for Special Reading	Supplier	Data Collector	Supplier requests a special reading to dispute a previous reading or for other purposes		MPD 18 Also MPD 1

Message	Title	Sender	Recipient	Trigger	Predecessor	MPD Ref.
300	Validated Non Interval Readings	Data Processor	Supplier	A scheduled reading is collected and processed.	Scheduled Read, 016 or 210	MPD 14
				A customer reading is obtained and processed.		
300S	Validated Non Interval Readings (Special)	Data Processor	Supplier	A special reading is obtained and processed.	252	MPD 14, 18
300W	Withdrawn Non Interval Reading	Data Processor	Supplier	A scheduled, customer or special reading or estimate is withdrawn by the Data Processor	300, 300S, 305	MPD 14
303R	Customer Read Rejection	Data Processor	Supplier	Data Processor rejects a Customer Read	010, 016 or 210	MPD 14 Also MPD 1
305	Non Settlement Estimates	Data Processor	Supplier	A 'no read' condition is returned by the Data Collector for a scheduled reading event	None	MPD 14
308	Non Interval Load Factor Reading Exception	Data Processor	Supplier	A load factor has been calculated from readings to be consistently different to that currently recorded	Any Non Interval reading	MPD 14
321	Read Cycle Notification	Data Collector	Supplier	Data Collector makes a change to the read schedule for a Meter Point	None	MPD 14
322	DUoS Billing Cycle Notification	Data Collector	Supplier	Data Collector makes a change to the DUoS Billing schedule for a Half Hourly Meter Point	None	MPD 15.1
341	Interval Meter Daily Readings (Import)	Data Processor	Supplier and TSO	Data Processor receives import Interval meter readings	None	MPD 15

Message	Title	Sender	Recipient	Trigger	Predecessor	MPD Ref.
342	Interval Meter Daily Readings (Export)	Data Processor	Supplier and Generator	Date Processor receives export Interval meter readings	None	MPD 15
343	Interval Meter Daily Readings (Smart Import)	Data Processor	Supplier	Data Processor receives SMART import Interval meter readings	None	MPD 15 MPD 15.1
345	SMART HH Cumulative Register Readings	Data Processor	Supplier	Data Processor receives SMART Cumulative either import or import and export 24 hour reading	None	MPD 15 MPD 15.1
352R	Special Reading Request Rejection	Data Collector	Supplier	Data Collector rejects a request for a special reading	252	MPD 18

1.7 Related Business Documents

Estimation Briefing Paper

QH Validation, Estimation and Substitution

HH Validation, Estimation and Substitution

1.8 Message Directory - Supplier to ESB Networks

1.8.1 Message 208: Replacement Reading

Purpose and Description of Message/Validation

Message 208 is sent by a New or Old Supplier to the Data Processor in order to dispute a Change of Supplier reading.

It contains a nominated replacement reading that, if agreed by both Suppliers, will be used to replace the Change of Supplier reading. The readings should be dated at, and will be applied as at, a Read Date equal to the original Change of Supplier date. The Data Processor will undertake the validation.

Message 208 is used in the following Market Processes:


Process Number and Title		Use of Message
MPD 1	Change of Supplier —Non Interval Metered	To dispute a Change of Supplier reading.

Message 208 should only be sent when:

- Message 310 or 320 has been received
- The replacement reading has been agreed with the other Supplier involved.

Readings must not be provided for Maximum Demand registers.

Data Hierarchy Diagram

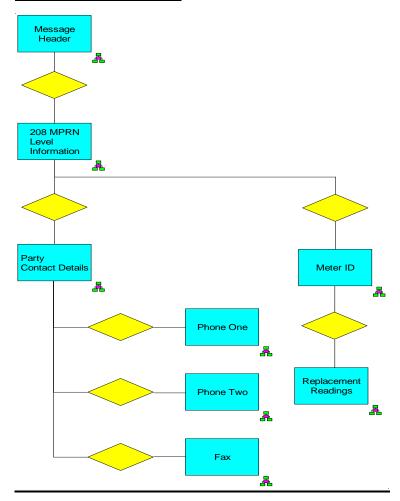

Composition Instructions/Validation

Supplier should follow the instructions below in populating the Replacement Reading message. The Data Processor will undertake the validation

•	Segment and Field Level Identifier – 208 Message		<u> </u>		Rpt	Optionality	Description / Purpose and composition instructions	Validation		
1 Me	1 Message Header		Message Header		Vlessage Header		1	Mandatory	See Common Data Segments for detailed notes on structure and population.	Not validated by Data Processor
1 MF	RN Lev	el Information	1	Mandatory						
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point for which the replacement readings are provided All elements of the MPRN must be provided	The MPRN must either be currently registered to the Supplier or have been registered to the Supplier as the immediate previous Supplier.				
2	FLD	Market Participant Business Reference	1	Mandatory	The Supplier must provide an internal reference number.	Not validated by Data Processor				
2	FLD	Read Date	1	Mandatory	The Read Date is the date to which the reading will be applied. It should be the date of the reading being replaced as communicated on message 310 or 320.	MRSO will check that the Read Date relates to the date of a Change of Supplier reading				
2	FLD	Read Reason	1	Mandatory	A code that indicates the reason that the reading is provided. The Read Reason should be set to:	The Read Reason should be set to: 26 - Change of Supplier				
					26 - Change of Supplier:					

Segm Mess		Field L	evel Identifier – 208	Rpt	Optionality	Description / Purpose and composition instructions	Validation
2	FLD	Supplier ID		1	Mandatory	The Supplier ID should be set to the Party ID of the Supplier providing the replacement reading.	The Supplier ID should be the Party ID of the Supplier providing the replacement reading.
2	SEG Party Contact Details		1	Optional	Details enabling the Supplier to be contacted in the event of a query with the replacement reading. See Common Data Segments for detailed notes on structure and population	.Not validated by Data Processor	
2	SEG	Meter	ID	1:N	Mandatory		
	3	FLD	Meter Category	1	See instructions	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.	Not validated by Data Processor
						This field is not required although it may be obtained from the meter readings provided by DSO.	
	3	FLD	Serial Number	1	See instructions	The physical number found on a meter.	If provided the Data Processor will match the last four characters of the Serial Number to the Serial Number(s) recorded for the Meter Point by DSO and if
						. The complete serial number should be provided if possible, but if not, at least the last four digits should be provided. The	a unique match cannot be found the readings will be rejected.

Segment and Message	Field L	evel Ide	entifier – 208	Rpt	Optionality	Description / Purpose and composition instructions	Validation
						serial number can be obtained from the meter readings provided by DSO	
3	SEG	Regist	er Reading	1:N	Mandatory	Where customer readings are to be provided then a reading should be provided for every consumption and wattless register together with sufficient information to identify the appropriate register. Readings should not be provided for Maximum Demand registers. In normal circumstances only one of Meter Register Sequence, Timeslot or Register Type is required	The Data Processor will expect a reading for every consumption and wattles register installed at the Meter Point. The Data Processor will not replace previously used Maximum Demand register readings based on data this message.
	4	FLD	Meter Register Sequence	1	See Instructions	An identifier to distinguish between different meter dials on a physical meter or set of meters. The Meter Register Sequence must be provided if neither Timeslot nor Register Type can be provided. If provided, it may be obtained from information published or readings data provided by DSO.	If provided, the Data Processor will match the Meter Register Sequence to the Meter Register Sequence (s) recorded for the Meter Point by DSO. If a unique match cannot be found the readings will be rejected.
	4	FLD	Timeslot	1	See Instructions	A code that indicates the period that a meter is recording electricity consumption or wattless reactive energy. The Timeslot must be provided if neither Meter Register Sequence nor Register Type can be provided. If provided, it may	If provided, the Data Processor will match the Timeslot to the Timeslot (s) recorded for the Meter Point and Meter Serial Number matched above. If a unique match cannot be found the readings will be rejected.

Segment and Field Lo Message	Segment and Field Level Identifier – 208 Message			Optionality	Description / Purpose and composition instructions	Validation
					be obtained from information published or readings data provided by DSO. Refer to the data published by ESB DSO	
4	FLD	Register Type	1	See Instructions	for the current set of codes. A code that indicates the purpose of the register. The Register Type must be provided if Meter Register Sequence is not provided or if Timeslot is not known or not unique. This will enable the Data Processor to distinguish between the types of register. If provided, it may be obtained from readings data provided by DSO. Refer to the data published by ESB DSO	If provided and the Data Processor cannot otherwise match readings to a register, the Data Processor will match the Register Type to the Register Type (s) recorded for the Meter Point and Meter Serial Number matched above. If a unique match cannot be found the readings will be rejected
4	FLD	Reading	1	Mandatory	for the current set of codes. This should be the replacement reading the Supplier requests to be used for meter register identified by the Serial Number and Meter Register Sequence, Timeslot and Register Type data provided and which will be treated as effective on the Read Date.	Provided the readings are not rejected, the Data Processor will validate the readings according to the rules specified in MPD14. A positive consumption exceeding tolerance will generally be accepted if agreed by both Suppliers
4	FLD	Read Type	1	Mandatory	This should be set to:	Not validated by Data Processor

Segment and Field Level Identifier – 208 Message	Rpt	Optionality	Description / Purpose and composition instructions	Validation
			 RC denoting a Replacement Reading for a Change of Supplier 	

Providing that the validation is successful then the Data Processor will contact the other Supplier involved at the Change of Supplier to confirm that the Change of Supplier reading is acceptable. If so, the Data Processor will replace the original Change of Supplier readings with the Replacement readings and will use messages 310W, 310, 320W and 320 to communicate the withdrawn and replacement readings.

1.8.2 Message 210: Supplier Provided Reading

Purpose and Description of Message/Validation

Message 210 can be sent by a Supplier to the Data Processor for a variety of reasons:

- By a New Supplier in order to provide a Change of Supplier Reading
- By an existing Supplier to fulfil a scheduled meter read order
- By an existing Supplier to correct a DUoS billing over-estimate.


Message 210 is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 1	Change of Supplier – Non Interval Metered	To provide a Change of Supplier reading.

MPD 14	Readings Processing – Non Interval Metered	To provide a customer reading where a scheduled meter read order is open. To correct a DUoS billing over-estimate
		-

Message 210 should not be used for a Maximum Demand or Interval Meter Point.

Data Hierarchy Diagram

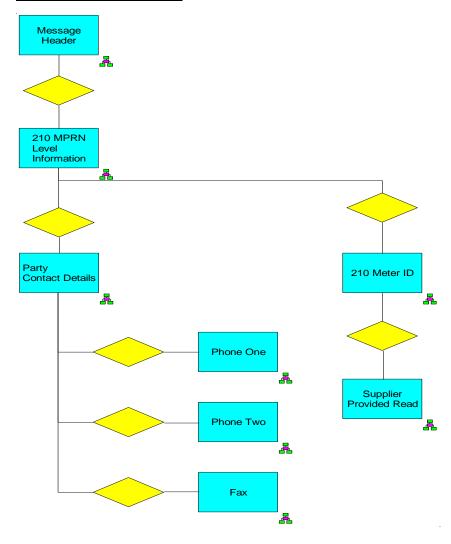

Composition Instructions/Validation

Supplier should follow the instructions below in populating the Supplier Provided Reading message. The Data Processor will reject Supplier or Customer readings for Maximum Demand sites. The Data Processor will also undertake the validation.

	egment 210 Me	and Field Level Identifier ssage	Rpt	Optionality	Description / Purpose and composition instructions	Validation
1	Message Header			Mandatory	See Common Data Segments for detailed notes on structure and population.	Not validated by Data Processor
1	MPRN	Level Information	1	Mandatory		
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point for which the customer reading is provided. All elements of the MPRN must be provided	The MPRN must either be currently registered to the Supplier or, if the Read Reason denotes Change of Supplier, be subject to a registration request from the Supplier that has not yet been confirmed as complete. The MPRN must not identify a Meter Point that is a Maximum Demand or Interval Meter Point.
2	FLD	LD Market Participant Business Reference		Mandatory	The Supplier must provide an internal reference number.	Not validated by Data Processor
2	FLD	FLD Read Date		Mandatory	The Read Date is the date to which the reading will be applied.	If the Read Reason denotes a Change of Supplier, then the Read Date must not be

	egment 210 Me	and Field Level Identifier ssage	Rpt	Optionality	Description / Purpose and composition instructions	Validation
					The date on which the reading was obtained from the meter should be provided.	more than three days prior to the date of receipt by the Data Processor.
						If the Read Reason does not denote a Change of Supplier, then the Read Date must not be prior to the date of the last DUoS Bill.
2	FLD	Read Reason	1	Mandatory	A code that indicates the reason that the reading is provided.	Read Reason is used to determine how the other validations are performed.
					The Read Reason should be set to one of the following: o 26 – If the reading is provided for a Change of Supplier o 95 – If the reading is provided for any other purpose (i.e. not for Change of Supplier) o 27 – If the reading is provided for a Change of Legal Entity	
2	FLD	Supplier ID	1	Mandatory	The Supplier ID should be the Party ID of the Supplier providing the reading.	If the Read Reason denotes Change of Supplier, then the Supplier must have an incomplete registration request in progress.

	egment 210 Mes		eld Level Identifier	Rpt	Optionality	Description / Purpose and composition instructions	Validation
							Otherwise, the Supplier ID should be the Supplier that is registered at the Meter Point.
2	SEG	Party Contact Details		1	Optional	Details enabling the Supplier to be contacted in the event of a query with the customer reading.	.Not validated by Data Processor
						See Common Data Segments for detailed notes on structure and population	
2	SEG	Meter ID		1:N	See instructions	Suppliers should provide sufficient information so that the readings provided for the Meter Registers on site can be identified.	
	3	FLD	Meter Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.	.Not validated by Data Processor
						This field is not required although it may be obtained from meter data provided by DSO.	
	3	FLD	Serial Number	1	Required	The physical number found on a meter.	If provided the Data Processor will match the last four characters of the Serial Number to the Serial Number(s) recorded for the Meter
						The serial number should be provided if there is more than one meter installed. The complete serial number should be provided if possible, but if not, at least the last four digits should be provided. The serial number can be obtained either:	Point by DSO and if a unique match cannot be found the readings will be rejected.

	Segment and Field Level Identifier – 210 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation
						 From the meter itself From information published by DSO (refer to MPRN Publication). 	
3	SEG	Supplier Read	Provided	1:N	Mandatory	Where customer readings are to be provided then a reading should be provided for every consumption and wattless register together with sufficient information to identify the appropriate register. In normal circumstances only one of Meter Register Sequence, Timeslot or Register Type is required	The Data Processor will expect a reading for every register installed at the Meter Point
	4	FLD Meter Register Sequence		1	See Instructions	An identifier to distinguish between different meter dials on a physical meter or set of meters. The Meter Register Sequence must be provided if neither Timeslot nor Register Type can be provided. If provided, it may be obtained from information published by DSO (refer to MPRN Publication).	If provided, the Data Processor will match the Meter Register Sequence to the Meter Register Sequence (s) recorded for the Meter Point by DSO. If a unique match cannot be found the readings will be rejected.
	4	FLD Tir	meslot	1	See Instructions	A code that indicates the period that a meter is recording electricity consumption or wattless reactive energy.	If provided, the Data Processor will match the Timeslot to the Timeslot (s) recorded for the Meter Point and Meter Serial Number

Segment and Fig - 210 Message	Segment and Field Level Identifier - 210 Message			Optionality	Description / Purpose and composition instructions	Validation
					The Timeslot must be provided if neither Meter Register Sequence nor Register Type can be provided. If provided, it may be obtained from information published by DSO or made available on prior readings messages.	matched above. If a unique match cannot be found the readings will be rejected.
4	FLD	Register Type	1	See Instructions	A code that indicates the purpose of the register. The Register Type must be provided if Meter Register Sequence is not provided or if Timeslot is not known or not unique. This will enable the Data Processor to distinguish between the types of register	If provided and the Data Processor cannot otherwise match readings to a register, the Data Processor will match the Register Type to the Register Type (s) recorded for the Meter Point and Meter Serial Number matched above. If a unique match cannot be found the readings will be rejected.
4	FLD	Reading	1	Mandatory	This should be the reading recorded on the read date on the meter register identified by the Serial Number and Meter Register Sequence, Timeslot and Register Type data provided.	Provided the readings are not rejected, the Data Processor will validate the readings according to the rules specified in MPD14.
4	FLD	Read Type	1	Mandatory	This should be set to: o SC denoting a Supplier Provided Customer Reading	Not validated by Data Processor

If the validation is not successful then the Data Processor will reject the reading using message 303R. If the validation is successful then the Data Processor will process the reading as described in MPD 14 and communicate the results using message 300 or, for a Change of Supplier, 310 and 320.

1.8.3 Message 252: Request for Special Reading

Purpose and Description of Message/Validation

Message 252 is sent by a Supplier to the Data Collector in order to request a special reading. The Data Processor will undertake the validation.

A special reading may be sought for a variety of reasons including:


- An Old or New Supplier disputing of a Change of Supplier reading
- A registered Supplier obtaining a reading to be used at a Change of Tenancy

Message 252 can also be used by an Old or New Supplier to request an estimate to resolve a Change of Supplier reading dispute.

Message 252 is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 1	Change of Supplier – Non Interval Metered	To dispute a Change of Supplier reading.
MPD 18	Special Read Request	To request a special reading in cases other than Change of Supplier

Data Hierarchy Diagram

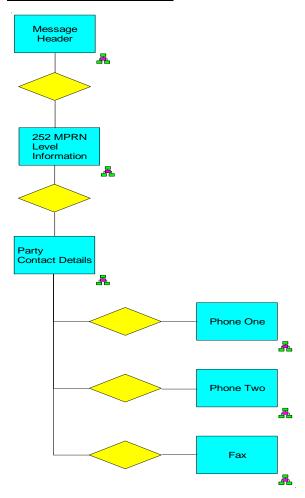

Composition Instructions/Validation

Supplier should follow the instructions below in populating the Request for Special Reading Message. The Data Processor will undertake the validation.

Segment and Field Level Identifier – 252 Message			Rpt	Optionality	Description / Purpose and composition instructions	Validation	
1 Me	1 Message Header			Mandatory	See Common Data Segments for detailed notes on structure and population.	Not validated by Data Processor	
1 MF	RN Lev	el Information	1	Mandatory			
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the request is made. All elements of the MPRN must be provided	The MPRN must either be currently registered to the Supplier or have been registered to the Supplier as the immediate previous Supplier.	
2	FLD	Market Participant Business Reference	1	Mandatory	The Supplier must provide an internal reference number.	Not validated by Data Processor	
2	FLD	Supplier ID	1	Mandatory	The Supplier ID should be the Party ID of the Supplier requesting the reading or estimate.	If the Read Reason is for a Change of Supplier then the Supplier ID may identify: • the Supplier that is currently registered at the Meter Point; or • the Supplier that was registered as the immediate previous Supplier. Otherwise the Supplier ID must identify the Supplier that is currently registered at the Meter Point.	

	Segment and Field Level Identifier – 252 Message			Optionality	Description / Purpose and composition instructions	Validation	
2	SEG	Party Contact Details	1	Optional	Details enabling the Supplier to be contacted in the event of a query with the request. See Common Data Segments for detailed notes on structure and population	No validation of this segment.	
2	FLD	Read Type	1	Mandatory	A code that indicates the type of reading required. The Read Type should be set to one of the following: • A – denoting that an actual reading is required • E - denoting that an estimated reading is required for Change of Supplier only. This setting may only be used with a Read Reason of 04.	If the Read Reason is for a dispute (04) then the Read Type may be for an Actual Read or Estimate. Otherwise the Read Type may only be for an Actual Read.	
2	FLD	Read Reason	1	Mandatory	A code that indicates the reason that the reading is required The Read Reason should be set to one of the following: • 04 – denoting that a special reading is required to dispute a previous reading	The request will be rejected if the Read Reason is not 02 or 04.	

_	Segment and Field Level Identifier – 252 Message			Optionality	Description / Purpose and composition instructions	Validation
					02 – denoting a chargeable special reading that is required for any reason other than a dispute.	
2	FLD	Request Status	1	Mandatory	An indicator that a request is being initiated or withdrawn The Request Status should be set to one of the following: • I – to initiate the request • W – to withdraw the request	The request will be rejected if it does not either: o initiate a special read request o withdraw an initiated request that in not completed and can still be withdrawn
2	FLD	Required Date	1	See Instructions	If an Actual Read is to be collected on a specific day then this date should be provided here. At least five working days notice is required. If this field is omitted then the Data Collector will schedule the reading within the following five days in accordance with service levels (to be agreed). If an Estimate is required to settle a dispute then this date should be set to the date of the reading being disputed.	If provided, the Required Date must not be within five days of the receipt of the request by the Data Collector. Otherwise the request is rejected.
2	FLD	Access Arrangements	1	Optional	Text may be provided to describe any special arrangements required for access to the meters. It is recommended that sufficient detail is provided to enable the customer to be contacted as visits that do	No validation of this field

_	Segment and Field Level Identifier – 252 Message			Optionality	Description / Purpose and composition instructions	Validation
					not result in the collection of a reading may still be chargeable.	
2	FLD	Appointment ID	1	Optional	Not used in ROI	No validation on this field

If the validation is successful then the Data Collector will obtain the requested special reading (or estimate) and this will be communicated using message 300S or, for a Change of Supplier, 310 and 320. If the above validation is not successful then the Data Collector will send rejection message 352R to the Supplier.

1.9 Message Directory – Data Processor/Data Collector to Supplier

1.9.1 Message 300: Validated Non Interval Readings (Scheduled)


Purpose and Description of Message

Message 300 is sent by the Data Processor to a Supplier to advise of processed scheduled and customer meter readings.

Message 300 is used in the following Market Process:

Proces	s Number and Title	Use of Message			
MPD 14	Readings Processing – Non Interval Metered	To advise processed scheduled and customer meter readings to the Supplier			

Data Hierarchy Diagram

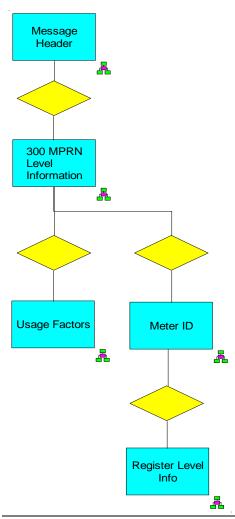

Message Structure and Interpretation

ent and	l Field Level Identifier – 300 Message	Rpt	Optionality	Description and Purpose	
Message Header MPRN Level Information			Mandatory	See Common Data Segments for detailed notes on structure and population.	
			Mandatory		
FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the readings are provided.	
FLD	Market Participant Business Reference	1	Optional	A reference to the Market Participant Business Reference provided in the Message Header of the 016 or 210 message sent by the Supplier. It enables the Supplier to uniquely identify the original message to which this is the response.	
FLD	Networks Reference Number	1	Mandatory	A unique reference allocated by ESB Networks to the readings	
FLD	Load Profile	1	Mandatory	A code denoting the standard load profile that determines, when coupled with Timeslot, the derived profile that is applied to consumption usage for settlement purposes.	
				Refer to the Data Codes published by MRSO for a complete list of codes.	
FLD	DUoS Group	1	Mandatory	A code which denotes the use of system tariff applied by ESB DSO to the Meter Point.	
FLD	Meter Point Status	1	Mandatory	 The connection status of the Meter Point. This will be: D – Meter Point is De-Energised DR – Meter Point is De-energised Remote E – Meter Point is Energised 	
	PRN Lev FLD FLD FLD	PRN Level Information FLD MPRN FLD Market Participant Business Reference FLD Networks Reference Number FLD Load Profile FLD DUoS Group	PRN Level Information 1 FLD MPRN 1 FLD Market Participant Business Reference 1 FLD Networks Reference Number 1 FLD Load Profile 1	PRN Level Information 1 Mandatory FLD MPRN 1 Mandatory FLD Market Participant Business Reference 1 Optional FLD Networks Reference Number 1 Mandatory FLD Load Profile 1 Mandatory FLD DUoS Group 1 Mandatory	

Segm	Segment and Field Level Identifier – 300 Message				Optionality	Description and Purpose
2	FLD	Read D	Date	1	Mandatory	The date on which the readings provided in the message were read from the meter or the date to which any estimate applies. The time of the readings is assumed to be 23h59 at the end of the day. For remote reads, it will be the 23h59 reading.
2	SEG	Usage	Factors	0 N	See instructions	Usage factors will be calculated for all actual readings. Usage factors are also calculated for certain events which are billed to an estimated reading – these are: •CoS •CoLE •Change of DUoS Group •De-Registration •De-energisation •Add Device/Register •Replace/Remove Meter •Re-programme Meter (change register group) •De-energisation For each Timeslot there will be two usage segments; one containing actual usage and one containing estimate usage, each with their own separate Effective From Date.
	3	FLD	Timeslot	1	Mandatory	A code that indicates the time intervals for which a usage factor is effective and will be aggregated.

Segment and	Segment and Field Level Identifier – 300 Message				Optionality	Description and Purpose
3	FLD	Effecti	ve From Date	1	Mandatory	The inclusive date from which the estimated or actual usage factor will be aggregated. Refer to MPD14 section 3.10 for how the date is set.
3	FLD	Actual	Usage Factor	1	See instructions	A statement in kWh of the actual consumption for the Timeslot from the Effective From Date to the Read Date inclusive, extrapolated to an annual consumption based on the applicable <u>derived</u> profile.
3	FLD	Estimated Usage Factor		1	See instructions	A statement in kWh of the estimated consumption for the Timeslot for the 365 days starting from the Effective From Date
2 SEG	Meter	ID		1:N	Mandatory	
3	3 FLD M		Meter Category		Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
3	FLD	Serial	Number	1	Mandatory	The physical number found on the meter.
3	SEG	Regist	er Level Information	1:N	Mandatory	
	4	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
	4	FLD	Timeslot	1	Mandatory	A code that indicates the period that a Meter register is recording.
	4	FLD	Unit of Measurement	1	Mandatory	A code that indicates the value that is measured on this register.
	4	FLD	Meter Multiplier	1	Mandatory	A factor to be applied to an advance or reading at a register in order to derive a true value
	4	FLD	Reading	1	Mandatory	The reading for this register.
	4	FLD	Read Reason	1	Mandatory	A code that indicates the reason that a reading was collected. This should be set to one of the following:

Segment and Field L	evel Ide	entifier – 300 Message	Rpt	Optionality	Description and Purpose	
					 01 – Scheduled Read 10 – Ad hoc, non chargeable check read 27 – Change of Legal Entity 	
4	FLD	Read Type	1	Mandatory	A code that indicates whether the reading is: A – An actual reading obtained by ESB Networks CU – A reading provided directly by a customer E – An estimate due to no access ED – An estimate due to a CoLE reading preceding the last DUoS billing date EF – An estimate due to an implausible reading / No read available SC – A customer reading provided by a Supplier	
4	FLD	Previous Read Date	1	Mandatory	The date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register.	
4	FLD	Consumption	1	See instructions	The consumption in kWh calculated from the Previous Read Date. This is provided for kWh registers only.	
4	FLD	Read Status	1	Mandatory	A code that indicates:	

Segment and Field Lo	evel Ide	ntifier – 300 Message	Rpt	Optionality	Description and Purpose	
					 REST – Reading was estimated and usage factors deriving from estimate will be used in Settlement. See Read Type for reason for estimate. RENS – Reading was estimate but usage factors are not updated and will not be used in settlement. This is if there is a mixture of actual and estimated readings. 	
4	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register.	
2	SEG	Meter Reader Remarks (Meter Reader Remarks Type)	1:N	Optional	Not used in ROI	
3	FLD	Meter Reader Remark Code	1	Mandatory	Not used in ROI	
3	FLD	Meter Reader Remarks	1	Optional	Not used in ROI	

1.9.2 Message 300S: Valid Non Interval Readings (Special)


Purpose and Description of Message

Message 300S is sent by the Data Processor to a Supplier to advise of processed special meter readings.

Message 300S is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 14	Readings Processing – Non Interval Metered	To advise processed special meter readings to the Supplier

Data Hierarchy Diagram

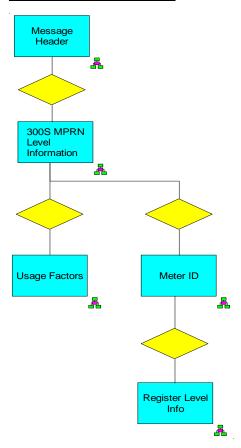

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 300S Message	Rpt	Optionality	Description and Purpose
1 Me	ssage F	Header	1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MF	RN Lev	el Information	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the readings are provided.
2	FLD	Market Participant Business Reference	1	See Description	A reference to the Market Participant Business Reference provided in the Message Header of an originating 252 message if this was sent by the Supplier to the Data Collector. It enables the Supplier to uniquely identify the original message to which this is the response.
2	FLD	Networks Reference Number	1	Mandatory	A unique reference allocated by ESB Networks to the readings
2	FLD	Load Profile	1	Mandatory	A code denoting the standard load profile that determines, when coupled with Timeslot, the <u>derived</u> profile that is applied to consumption usage for settlement purposes.
					Refer to the Data Codes published by MRSO for a complete list of codes.
2	FLD	DUoS Group	1	Mandatory	A code which denotes the use of system tariff applied by ESB DSO to the Meter Point.
2	FLD	Meter Point Status	1	Mandatory	The connection status of the Meter Point. This will be: • D – Meter Point is De-Energised

Segm	ent and	Field Level Identifier – 300S Message	Rpt	Optionality	Description and Purpose
					 DR – Meter Point is De-energised Remote E – Meter Point is Energised
2	FLD	Read Date	1	Mandatory	The date on which the readings provided in the message were read from the meter or the date to which any estimate applies. The time of the readings is assumed to be 23h59 at the end of the day. For remote reads, it will be the 23h59 reading on the actual read date i.e. not the reading collection date.
2	SEG	Usage Factors	0 N	See	Usage factors will be calculated for all actual readings.
				instructions	Usage factors are also calculated for certain events which are billed to an estimated reading – these are:
					•CoS
					•CoLE
					•Change of DUoS Group
					•De-Registration
					•De-energisation
					•Add Device/Register
					•Replace/Remove Meter
					•Re-programme Meter (change register group)
					•De-energisation
					For each Timeslot there will be two usage segments; one containing actual usage and one containing estimate usage, each with their own separate Effective From Date.

Segme	Segment and Field Level Identifier – 300S Message					Optionality	Description and Purpose
	3	FLD	Timesl	ot	1	Mandatory	A code that indicates the time intervals for which a usage factor is effective and will be aggregated.
	3	FLD	Effecti	ve From Date	1	Mandatory	The inclusive date from which the estimated or actual usage factor will be aggregated. Refer to MPD14 section 3.10 for how the date is set.
	3 FLD Actual Usage Factor		1	See instructions	A statement in kWh of the actual consumption for the Timeslot from the Effective From Date to the Read Date inclusive, extrapolated to an annual consumption based on the applicable <u>derived</u> profile.		
	3 FLD Estimated Usage Factor		ited Usage Factor	1	See instructions	A statement in kWh of the estimated consumption for the Timeslot for the 365 days starting from the Effective From Date	
2	SEG	Meter	ID		1 N	Mandatory	
	3	FLD	Meter Category		1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
	3	FLD	Serial Number		1	Mandatory	The physical number found on the meter.
	3	SEG	Register Level Information		1 N	Mandatory	
		4	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
			FLD	Timeslot	1	Mandatory	A code that indicates the period that a meter register is recording.
			FLD	Unit of Measurement	1	Mandatory	A code that indicates the value that is measured on this register.
		4	FLD	Meter Multiplier	1	Mandatory	A factor to be applied to an advance or reading at a register in order to derive a true value

Segment and Field L	evel Ide	entifier – 300S Message	Rpt	Optionality	Description and Purpose
4	FLD	Reading	1	Mandatory	The reading for this register.
4	FLD	Read Reason	1	Mandatory	A code that indicates the charging status of the reading. This will be set to: • 02 – Special Read that is chargeable • 09 – Special Read that is non-chargeable
4	FLD	Read Type	1	Mandatory	A code that indicates whether the reading is: A – An actual reading obtained by ESB Networks E – An estimate due to no access or a missing register reading EF – An estimate due to an implausible reading / No read available
4	FLD	Previous Read Date	1	Mandatory	The date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register.
4	FLD	Consumption	1	See instructions	The consumption in kWh calculated from the Previous Read Date. This is provided for kWh registers only.
4	FLD	Read Status	1	Mandatory	 A code that indicates: RV –Reading which is plausible RREL – Reading was originally implausible but released on investigation as plausible

Segment and Field Lo	Segment and Field Level Identifier – 300S Message				Description and Purpose
					 REST – Reading was estimated and usage factors deriving from estimate will be used in Settlement. See Read Type for reason for estimate. RENS – Reading was estimate but usage factors are not updated and will not be used in settlement. This is generally because a full set of readings was estimated due to
					implausibility.
4	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register.

1.9.3 Message 300W: Withdrawn Non Interval Readings


Purpose and Description of Message

Message 300W is sent by the Data Processor to a Supplier to advise withdrawn scheduled, special and customer meter readings and withdrawn estimates.

Message 300W is used in the following Market Process:

Process	Number and Title	Use of Message		
MPD 14	Readings Processing – Non Interval Metered	To advise withdrawn meter readings or estimates to the Supplier		

Data Hierarchy Diagram

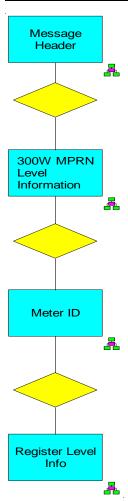

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 300W Message	Rpt	Optionality	Description and Purpose
1 Me	ssage F	leader	1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MF	RN Lev	el Information	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the readings are provided.
2	FLD	Market Participant Business Reference	1	Optional	A reference to the Market Participant Business Reference of the withdrawn reading. It enables the Supplier to uniquely identify the original message to which this is the response.
2	FLD	Networks Reference Number	1	Mandatory	A reference to the Networks Reference allocated by ESB Networks to the readings that are being withdrawn.
2	FLD	Load Profile	1	Mandatory	A code denoting the standard load profile that determines, when coupled with Timeslot, the <u>derived</u> profile that is applied to consumption usage for settlement purposes. Refer to the Data Codes published by MRSO for a complete list of codes.
2	FLD	DUoS Group	1	Mandatory	A code which denotes the use of system tariff applied by ESB DSO to the Meter Point
2	FLD	Meter Point Status	1	Mandatory	 The connection status of the Meter Point. This will be: D – Meter Point is De-Energised DR – Meter Point is De-energised Remote E – Meter Point is Energised
2	FLD	Read Date	1	Mandatory	The date of the readings that are being withdrawn.

Segm	ent and	Field L	evel Identifier – 300W Message	Rpt	Optionality	Descript	ion and Purpose	
2	FLD	FLD Withdrawal Reason		1	Mandatory	A code to indicate the reason that the reading was withdrawn. This will be set to one of the following values:		
						A1	Erroneous Change of Supplier	
						A2	Disputed CoS Meter Reading	
						A3	Change of Supplier Cancellation	
						A4	Change of Supplier	
						A5	Change of Legal Entity	
						B1	Incorrect MPRN	
						C1	Incorrect Estimation	
						C2	Incorrect Meter Reading	
						D1	Incorrect Rate	
						D2	Incorrect Billing Period	
						D3	Incorrect Meter	
2	SEG	Meter ID		1 N	Mandatory			
	3 FLD		Meter Category	1	Optional	A code a and type	llocated by Meter Asset Manager to denote the manufacturer of meter.	
	3	FLD	FLD Serial Number		Mandatory	The phys	ical number found on the meter.	
	3		SEG Register Level Information		Mandatory			

Segment and Field L	evel Ide	entifier – 300W Message	Rpt	Optionality	Description and Purpose
4	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
4	FLD	Timeslot	1	Mandatory	A code that indicates the period that a meter register is recording.
4	FLD	Unit of Measurements	1	Mandatory	A code that indicates the value that is measured on this register.
4	FLD	Meter Multiplier	1	Mandatory	A factor to be applied to an advance or reading at a register in order to derive a true value
4	FLD	Reading	1	Mandatory	The reading, for this register, that is being withdrawn.
4	FLD	Read Reason	1	Mandatory	A code that indicates the reason that a reading was collected.
4	FLD	Read Type	1	Mandatory	A code that indicates whether the type of reading being withdrawn.
4	FLD	Previous Read Date	1	Mandatory	The date to which a reading prior to the one being withdrawn applies, i.e. this is the end of the of the previous consumption period for the register.
4	FLD	Consumption	1	See instructions	The consumption in kWh calculated from the withdrawn reading. This is provided for kWh registers only.
4	FLD	Read Status	1	Mandatory	A code that indicates the status of the reading being withdrawn.
4	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register.

1.9.4 Message 303R: Customer Read Rejection


Purpose and Description of Message

Message 303R is sent by the Data Processor to a Supplier to advise that a customer reading has been rejected.

Message 303R is used in the following Market Processes:

Process	Number and Title	Use of Message
MPD 1	Change of Supplier – Non Interval Metered	To advise the Supplier that a customer read has been rejected
MPD 14	Readings Processing – Non Interval Metered	To advise the Supplier that a customer read has been rejected

Data Hierarchy Diagram

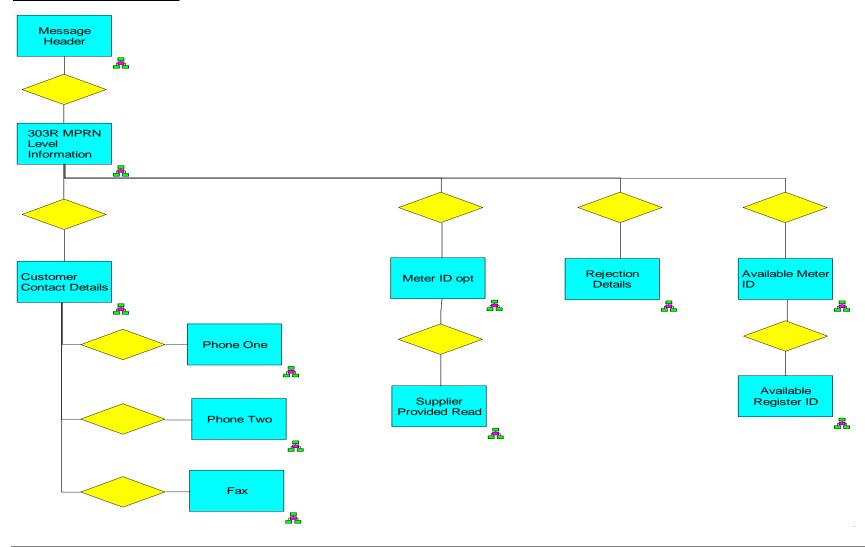

Message Structure and Interpretation

Segm	ent and	Field L	.evel Identifier – 303R Message	Rpt	Optionality	Description and Purpose
1 Me	ssage H	leader		1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MF	PRN Lev	el Inforr	nation	1	Mandatory	
2	FLD	MPRN	I	1	Mandatory	The unique identifying reference number for the Meter Point for which the readings are rejected.
2	FLD	Market Participant Business Reference			Mandatory	A reference to the Transaction Reference provided in the Message Header of the 010, 016 or 210 message sent by the Supplier. It enables the Supplier to uniquely identify the original message to which this is the response.
2	FLD	Read	Date	1	Mandatory	The Read Date provided by the Supplier
2	FLD	Read Reason		1	Mandatory	The Read Reason provided by the Supplier
2	FLD	Suppli	ier ID	1	Mandatory	The Supplier Id provided by the Supplier
2	SEG	Party Contact Details		1	See Instructions	The Party Contact Details if and as provided by the Supplier
2	SEG	Meter ID		1 N	Mandatory	This segment provides details of the rejected readings
	3		Meter Category	1	See Instructions	The Meter Category as and if provided by the Supplier
	3		Serial Number	1	See instructions	The Serial Number as and if provided by the Supplier
	3		Supplier Provided Read	1 N	Mandatory	

Segm	ent and	Field L	evel Ide	entifier – 303R Message	Rpt Op	Optionality	Description and Purpose
	4 FLD Meter Register Sequence		1	See Instructions	The Meter Register Sequence if and as provided by the Supplier		
		4	FLD	Timeslot	1	See Instructions	The Timeslot if and as provided by the Supplier
		4	FLD	Reading	1	Mandatory	The Reading provided by the Supplier
		4	FLD	Read Type	1	Mandatory	The Read Type provided by the Supplier
	4		FLD	Register Type	1	See Instructions	The Register Type if and as provided by the Supplier
2	SEG	Reject	ion Deta	ils	1 N	Mandatory	An instance of this segment is provided for each rejection reason provided.
	3	FLD	Reject	Reason	1	Mandatory	 IA – A customer reading has been received for a Maximum Demand Meter Point or Networks already hold a reading for the read date IMP – The MPRN does not exist. IMT – The Meter Id does not exist at this MPRN according to data held by DSO IRP – Register Type does not exist at Meter Point according to data held by DSO IRS – Register Sequence does not exist at Meter Point according to data held by DSO ITI – Timeslot does not exist at Meter Point according to data held by DSO ITI – Timeslot does not exist at Meter Point according to data held by DSO

Segment and	Field L	evel Identifier - 303R Message	Rpt	Optionality	Description and Purpose
					NRS – No register identification data (sequence number, timeslot or register type) has been provided
					SNR – The Supplier providing the reading is not registered to the Meter Point
					TIM – The Read Date has not passed the date validations specified for messages 010, 016 or 210
					IID – The original readings provided contained invalid or incomplete data to allow Data Processor to process the readings
					IRI – Invalid Request for Half Hourly site
					RIR - Remote Site Invalid Read. For a remotely read site where a read is received on 210 with Read Reason 95 or 27
					 RIR - Remote Site Invalid Read. Read received on 010, 016 or 210 (with Read Reason 26) where site has been read remotely.
2 SEG	Available Meter ID 1 See Instructions			This segment will be provided if the readings were rejected due to invalid or absent meter or register data. It provides the data currently held by ESB DSO.	
3	FLD	Meter Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
3	FLD	Serial Number	1	Mandatory	The physical number found on the meter.
3	SEG	Available Register Level Information	1 N	Mandatory	

Segment and Field Lo	evel Ide	ntifier – 303R Message	Rpt	Optionality	Description and Purpose
4	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
4	FLD	Timeslot	1	Mandatory	A code that indicates the period that a meter register is recording.
4	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register.

1.9.5 Message 305: Non Settlement Estimates


Purpose and Description of Message

Message 305 is sent by MRSO to a Supplier to advise that an estimate has been created for use in DUoS Billing due to a no-read situation.

Message 305 is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 14	Readings Processing – Non Interval Metered	To advise the Supplier that an estimate has been created for use in DUoS Billing due to a no-read situation

Data Hierarchy Diagram

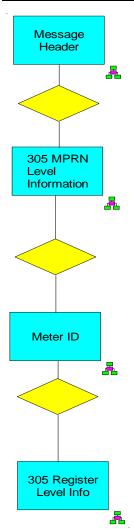

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 305 Message	Rpt	Optionality	Description and Purpose
1 Me	ssage F	leader	1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MF	RN Lev	el Information	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the estimates are provided.
2	FLD	Networks Reference Number	1	Mandatory	A unique reference allocated by ESB Networks to the estimates
2	FLD	Market Participant Business Reference	1	See instructions	This is the Suppliers reference where one was provided on a 210 Supplier Provided reading and this message was sent in response (where no actual read was obtained)
2	FLD	DUoS Group	1	Mandatory	A code which denotes the use of system tariff applied by ESB DSO to the Meter Point.
2	FLD	Meter Point Status	1	Mandatory	 The connection status of the Meter Point. This will be: D – Meter Point is De-Energised DR – Meter Point is De-energised Remote E – Meter Point is Energised
2	FLD	Read Date	1	Mandatory	The date of the estimates provided in the message. The estimates will be dated at the scheduled read date.
2	FLD	No Read Code	1	Mandatory	A code to describe why no read was obtained on a site visit or that no site visit was made or a remote read was not obtained.
2	FLD	Re-estimation Flag	1	Optional	A flag that alerts a supplier that a recalculation of estimates has been carried out on this MPRN for a debit amount.

Segm	Segment and Field Level Identifier – 305 Message					Optionality	Description and Purpose
							Valid values are:
							• 1 i.e. a logical value of True where recalculation has occurred
							 0 i.e. a logical value of False where recalculation has not occurred.
2	SEG	Meter	ID		1 N	Mandatory	
	3	FLD	Meter	Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
	3	FLD	Serial	Number	1	Mandatory	The physical number found on the meter.
	3	SEG	Regist	Register Level Information		Mandatory	
		4	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
		4	FLD	Timeslot	1	Mandatory	A code that indicates the period that a meter register is recording.
		4	FLD	Unit of Measurements	1	Mandatory	A code that indicates the value that is measured on this register.
	4		FLD	Meter Multiplier	1	Mandatory	A factor to be applied to an advance or estimate at a register in order to derive a true value
	•		FLD	Reading	1	Mandatory	The estimated reading determined for this register. This is calculated according to the approach described in MPD 14 and the <i>Estimation Briefing Paper</i> .
		4	FLD	Read Reason	1	Mandatory	A code that indicates the reason that a reading was due to have been collected. This should be set one of the following:

Segment and Field L	evel Ide	ntifier – 305 Message	Rpt	Optionality	Description and Purpose
					01 – Scheduled Read14 – Estimate
4	FLD	Read Type	1	Mandatory	A code that indicates whether the reading is:
4	FLD	Previous Read Date	1	Mandatory	The date to which a reading prior to the one currently being reported applies, i.e. this is the end of the previous consumption period for the register.
4	FLD	Consumption	1	See instructions	The consumption in kWh calculated from the Previous Read Date. This is provided for kWh registers only.
4	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register.

1.9.6 Message 308: Non Interval Load Factor Reading Exception


Purpose and Description of Message

Message 308 is sent by MRSO to a Supplier to advise that a consistent change to the load factor has been determined from two consecutive readings.

Message 308 is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 14	Readings Processing – Non Interval Metered	To advise the Supplier of a consistent change to the calculated load factor

Data Hierarchy Diagram

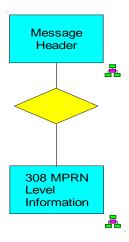

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 308 Message	Rpt	Optionality	Description and Purpose
1 Me	ssage H	leader	1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MF	RN Lev	el Information	1	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which the load factor exception has been detected.
2	FLD	Meter Point Status	1	Mandatory	The connection status of the Meter Point. This will be: • D – Meter Point is De-Energised

Segm	ent and	Field Level Identifier – 308 Message	Rpt	Optionality	Description and Purpose
					E – Meter Point is Energised
2	FLD	Read Date	1	Mandatory	The date of the reading from which the load factor exception has been determined.
2	FLD	Read Reason	1	Mandatory	The reason for the reading from which the load factor exception has been determined.
2	FLD	Load Factor	1	Mandatory	A code that identifies the current Load Factor for the Meter Point
2	FLD	Load Factor (New)	1	Mandatory	A code that identifies the Load Factor now suggested by the meter readings received for the Meter Point

Based on the new Load Factor, MRSO may change the Load Profile associated with the Meter Point. This is communicated using message 301.

1.9.7 Message 321: Read Cycle Notification


Purpose and Description of Message

Message 321 is sent by the Data Collector to a Supplier to advise a change to the read schedule for an Non Interval Meter Point.

Message 321 is used in the following Market Process:

Process	Number and Title	Use of Message			
MPD 14	Readings Processing – Non Interval Metered	To advise the Supplier of a change to the read schedule for an Non Interval Meter Point			
	Motoroa	T Onk			

Data Hierarchy Diagram

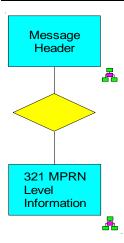

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 321 Message	Rpt	Optionality	Description and Purpose	
1 Me	ssage F	leader	1	Mandatory Mandatory	See Common Data Segments for detailed notes on structure and population.	
1 MP	RN Lev	el Information				
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which read schedule is provided	
2	FLD	Read Frequency	1	Mandatory	A code that indicates the frequency with which a meter reading is scheduled to be taken by ESB Data Collector. Typically this will be set to: • B - Bi-Monthly.	
2	FLD	Read Cycle Day	1	Mandatory	The day in a 41 day cycle that a meter is due to be read.	

1.9.8 Message 322: DUoS Billing Cycle Notification


Purpose and Description of Message

Message 322 is sent by the ESB Networks business or to a Supplier to advise a change to the DUOS billing schedule for an HH Interval Meter Point.

Message 322 is used in the following Market Process:

Process	Number and Title	Use of Message
MPD	Data Processing for HH Interval	
15.1	Metering	

Data Hierarchy Diagram

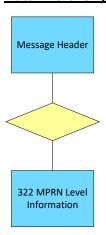

Message Structure and Interpretation

Segment and Field Level Identifier – 322 Message		Optionality	Description and Purpose
1 Message Header	1	Mandatory	See Common Data Segments for detailed notes on structure and population.

1 MF	1 MPRN Level Information			Mandatory	
2	2 FLD MPRN		1	Mandatory	The unique identifying reference number for the Meter Point for which read schedule is provided
2	FLD	DUoS Billing Frequency Code	1	See Instructions	DUoS billing schedule for an MPRN with Half Hourly Interval Meter: • B - Bi-Monthly.
2	2 FLD DUOS Billing Cycle		1	See Instructions	The day in a 41 day cycle that a meter is due to be billed. Provided for Half Hourly Meter Points only

1.9.9 Message 341: Interval Meter Daily Data

Purpose and Description of Message


Message 341 is sent by the Data Processor in the following circumstances:

• To a Supplier and to TSO to advise processed QH Interval meter readings data for Import Channels

Message 341 is used in the following Market Process:

Process	Number and Title	Use of Message
MPD 15	Data Processing – QH Metered	To advise the Supplier and TSO of processed Interval meter readings data

Data Hierarchy Diagram

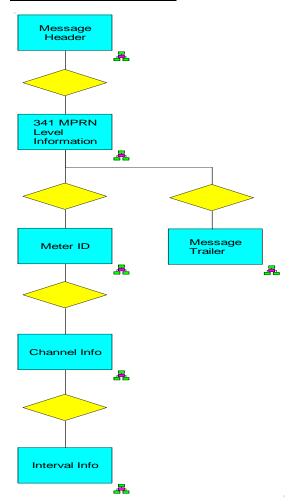

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 341 Message	Rpt	Optionality Mandatory	Description and Purpose
1 Me	ssage F	leader	1		See Common Data Segments for detailed notes on structure and population.
1 MF	RN Lev	el Information	10	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which Interval reading data is provided.
2	FLD	Read Date	1	Mandatory	The date on which the import in the message occurred.
2	FLD	Transformer Loss Factor (Applied)	1	See instructions	A factor that is applied to account for transformer losses when a meter point is metered at lower voltage than the connection voltage. An example is 1.005 representing a 0.5% loss. The majority of sites are not metered in this way and therefore the Transformer Loss Factor will not normally be present.
2	FLD	Version Number	1	Mandatory	The version number acts as a counter which increments by 1 every time there is reading replacement of interval data for a particular day.
2	FLD	Alert Flag (old Channel Status)	1	Mandatory	A code to indicate the validity of the data
2	SEG	Meter ID1	1 N	Mandatory	The current design does not support the provision of more than one meter for interval sites even though the message permits multiple meters.

Segment and	Field L	evel Ide	entifier – 341 Message	Rpt	Optionality	Description and Purpose
3	FLD	D Meter Category		1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
3	3 FLD Serial Number 3 SEG Channel Level Det		Serial Number 1		Mandatory	The identification number for the meter to which data is allocated in the Data Processor system. At complex sites data may be collected from multiple physical meters and totalised against a single nominated meter.
3			nel Level Details	1 N	Mandatory	Each Meter Point will have two import
	4	FLD	Metering Interval	1	Mandatory	The length of a period when consumption is recorded on an interval meter. 15 15 minutes
	4	FLD	Register Type	1	Mandatory	A code that indicates the type of value recorded for the channel. The typical settings for interval meters will be: • 50 – denoting import kilowatts • 51 – denoting import kVA reactive • 52 – denoting export kilowatts • 53 – denoting export kVA reactive
	4		Unit of Measurements	1	Mandatory	A code that indicates the value that is measured. The typical settings for Interval meter will be: • KWT – denoting kilowatts • KVR – denoting kVA reactive
	4	SEG	Interval Data	N	Mandatory	Except for days on which the clocks change, there will normally be 96 intervals

Segment and Field Level Ide	ntifier -	- 341 Message	Rpt	Optionality	Description and Purpose	
5	FLD	Value (Interval Demand)	1	Mandatory	The value of a reading or estimate (refer to Interval Status) in the form passed to the Data Processor measured in the units identified by Unit of Measurement including the application of multipliers and transformer loss factors where appropriate.	
5	FLD	Interval Period Timestamp	1	Mandatory	The start time of an interval period when data is recorded on an interval meter.	
5	FLD	Interval Status	1	Mandatory	A code that indicates the status of the value for the interval. It can take the following values: • VEST – indicates that the value is estimated • VCHG – indicates a value that has been manually changed by MRSO • VACH – indicates a value that has been manually changed (substituted) by ESBN • VVAK – indicates that the value is collected or totalised from a meter	
5	FLD	Value (Net Active Demand)	1	See instructions	The net of the Interval Demand Value for Import and the Interval Demand Value for Export. Suppliers receive import data for all Interval Autoproducers and CHP and will have netted values for Import populated on the 341 message. Where the Interval Meter Point is an Autoproducer or a CHP this field will always be present on the 341 Import flow, and where export exceeds import in an interval then the net import communicated is zero.	

Segm	ent and	Field Level Identifier – 341 Message	Rpt	Optionality	Description and Purpose
1 Message Trailer				Mandatory	
2	FLD	MPRN Count	1	Mandatory	A count of the number of MPRN segments included in the message
2	FLD	Channel Count	1	Mandatory	A count of the number of Channel level segments included in the message

1.9.10 Message 343: Smart Metering Interval Data

Purpose and Description of Message


Message 343 is sent by the Data Processor in the following circumstances:

• To a Supplier to advise processed Interval meter readings data for Import Channels

Message 343 is used in the following Market Process:

Process Number and Title		Use of Message
MPD 15.1	Data Processing for HH Interval Metering	To advise the Supplier of processed HH Interval meter readings data

Data Hierarchy Diagram

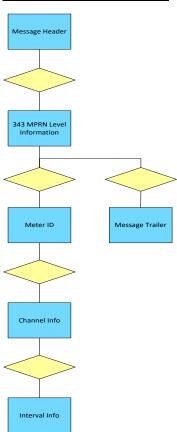

Segment and Field Level Identifier – 343 Message	Rpt	Optionality	Description and Purpose
1 Message Header	1	Mandatory	See Common Data Segments for detailed notes on structure and population.

1	1 MPRN Level Information				Mandatory	
2	FLD	MPRN		1	Mandatory	The unique identifying reference number for the Meter Point for which Interval reading data is provided.
2	FLD	Read I	Date	1	Mandatory	The date on which the import recorded in the message occurred.
2	FLD	Version Number			Mandatory	The version number acts as a counter which increments by 1 every time there is reading replacement of interval data for a particular day.
2	FLD	Alert Flag			Mandatory	A code to indicate the validity of the data
2	SEG	Meter	ID	1 N	Mandatory	The current design does not support the provision of more than one meter for interval sites even though the message permits multiple meters.
	3	FLD	Meter Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
	3	FLD Serial Number		1	Mandatory	The identification number for the meter to which data is allocated in the Data Processor system. At complex sites data may be collected from multiple physical meters and totalised against a single nominated meter.
	3	SEG	Channel Level Details	1 N	Mandatory	Each Meter Point will have one import channel

4	FLD	Metering Interval		1	Mandatory	The length of a period when consumption is recorded on an interval meter. • 30 – 30 minutes
4	FLD	Register Type		1	Mandatory	A code that indicates the type of value recorded for the channel. The typical settings for interval meters will be: 70 Import HH KWT
4	FLD	Unit of Measurements		1	Mandatory	A code that indicates the value that is measured. The typical settings for Interval meter will be: • KWT – denoting kilowatts
4	SEG	Interva	al Data	N	Mandatory	Except for days on which the clocks change, there will normally be 48 intervals
	5	FLD	Value (Interval Demand)	1	Mandatory	The value of a reading or estimate (refer to Interval Status) in the form passed to the Data Processor measured in the units identified by Unit of Measurement including the application of multipliers and transformer loss factors where appropriate.
	5		Interval Period Timestamp	1	Mandatory	The start time of an interval period when data is recorded on an interval meter.
5		FLD	Interval Status	1	Mandatory	A code that indicates the status of the value for the interval. It can take the following values: • VEST – indicates that the value is estimated

					VCHG – indicates a value that has been changed manually by ESBN.
					VACH – indicates a value that has been changed manually (substituted) by ESBN
					VVAK – Valid Value
1 Me	1 Message Trailer			Mandatory	
2	2 FLD MPRN Count		1	Mandatory	A count of the number of MPRN segments included in the message
2	FLD	Channel Count	1	Mandatory	A count of the number of Channel level segments included in the message

1.9.11 Message 352R: Special Reading Request Rejection

Purpose and Description of Message

Message 352R is sent by the Data Collector to a Supplier to advise that a special read request has been rejected.

Message 352R is used in the following Market Process:

Process	Number and Title	Use of Message				
MPD 18	Special Read Request	To advise the Supplier that a special read request has been rejected				

Data Hierarchy Diagram



Message Structure and Interpretation

Segm	ent and	Field L	evel Identifier – 352R Message	Rpt	Optionality	Description and Purpose		
1 Message Header					Mandatory	See Common Data Segments for detailed notes on structure and population.		
1 MF	RN Lev	el Inforn	nation	1	Mandatory			
2	FLD	MPRN	I	1	Mandatory	The unique identifying reference number for the Meter Point for which a Special Read Request is rejected		
2	FLD	Marke	t Participant Business Reference	1	Mandatory	A reference to the Business Reference provided in the 252 message sent by the Supplier. It enables the Supplier to identify the original message to which this is the response.		
2	FLD	Suppli	er Id	1	Mandatory	The Supplier Id provided by the Supplier		
2	FLD	Read	Туре	1	Mandatory	The Read Type provided by the Supplier		
2	FLD	Read	Reason	1	Mandatory	The Read Reason provided by the Supplier		
2	FLD	Reque	est Status	1	Mandatory	The Request Status provided by the Supplier		
2	FLD	Requi	red Date	1	Optional	The Required Date if and as provided by the Supplier		
2	SEG	Reject	tion Details	1 N	Mandatory	An instance of this segment is provided for each rejection reason provided.		
	3	FLD	Reject Reason	1	Mandatory	 A code to identify why data was rejected IMP – The MPRN does not exist. IRQ – The Request Status provided was invalid IRR – The Read Reason has not passed the validations specified for message 252 		

Segment and Field Level Identifier – 352R Message	Rpt	Optionality	Description and Purpose
			IRT – The Read Type has not passed the validations specified for message 252
			SNR – The Supplier requesting the reading is not registered to the Meter Point
			IDT – The Required Date has not passed the validations specified for message 252
			IRI – Invalid Request for Half Hourly site

1.9.12 Message 342: Interval Meter Daily Data (Export)


Message 342 is sent by the Data Processor in the following circumstances:

- To the Generator to advise processed QH Interval meter readings data for Export Channels
- To TSO to advise processed QH Interval meter readings data for Export Channels. .

Message 342 is used in the following Market Process:

Process	Number and Title	Use of Message			
MPD 15	Data Processing – QH Metered	To advise the Supplier and TSO of processed Interval meter readings data			

Data Hierarchy Diagram

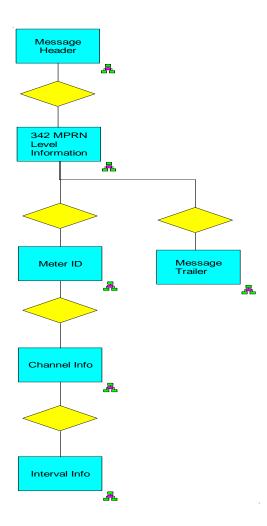

Message Structure and Interpretation

Segm	ent and	Field Level Identifier – 342 Message	Rpt	Mandatory	Description and Purpose
1 Me	ssage F	leader	1		See Common Data Segments for detailed notes on structure and population.
1 MF	PRN Lev	el Information	N	Mandatory	
2	FLD	MPRN	1	Mandatory	The unique identifying reference number for the Meter Point for which Interval reading data is provided.
2	FLD	Read Date	1	Mandatory	The date on which the export recorded in the message occurred.
2	FLD	Transformer Loss Factor (Applied)	1	See instructions	A factor that is applied to account for transformer losses when a meter point is metered at lower voltage than the connection voltage. An example is 1.005 representing a 0.5% loss. The majority of sites are not metered in this way and therefore the Transformer Loss Factor will not normally be present.
2	FLD	Generator MPID	1	See instructions	The participant identification code of a Generator, provided only where data is provided for an export site.
2	FLD	Generation Unit Id	1	See instructions	The unique identifier referencing the generation unit linked to this MPRN, provided only where data is provided for an export site.
2	FLD	Version Number	1	Mandatory	The version number acts as a counter which increments by 1 every time there is reading replacement of interval data for a particular day.
2	FLD	Alert Flag (old Channel Status)	1	Mandatory	A code to indicate the validity of the data

Segment and Field Level Identifier – 342 Message					Optionality	Description and Purpose
2 SEG	Meter	ID		1 N	Mandatory	The current design does not support the provision of more than one meter for Interval sites even though the message permits multiple meters.
3	FLD	Meter	Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
3	3 FLD Serial Number		1	Mandatory	The identification number for the meter to which data is allocated in the Data Processor system. At complex sites data may be collected from multiple physical meters and totalised against a single nominated meter.	
3	SEG	G Channel Level Details		1 N	Mandatory	Each Meter Point will have one or two Export Channels.
	4	FLD	Metering Interval	1	Mandatory	The length of a period when consumption is recorded on an interval meter • 15 15 minutes
	4 FLD Register T		Register Type	1	Mandatory	A code that indicates the type of value recorded for the channel. The typical settings for an interval meter will be: • 52 – denoting export kilowatts • 53 – denoting export kVA reactive
	4	FLD	Unit of Measurements	1	Mandatory	A code that indicates the value that is measured. The typical settings for an interval meter will be: • KWT – denoting kilowatts • KVR – denoting kVA reactive

Segment and Field Level Ide	ntifier -	- 342 Message	Rpt	Optionality	Description and Purpose
4 SEG	Interva	al Data	N	Mandatory	Except for days on which the clocks change, there will normally be 96 intervals
5	FLD	Value (Interval Demand)	1	Mandatory	The value of a reading or estimate (refer to Interval Status) in the form passed to the Data Processor measured in the units identified by Unit of Measurement including the application of multipliers and transformer loss factors where appropriate.
5	FLD	Interval Period Timestamp	1	Mandatory	The start time of an interval period when data is recorded on an interval meter.
5	FLD	Interval Status	1	Mandatory	A code that indicates the status of the value for the interval. It can take the following values: • VEST – indicates that the value is estimated • VCHG – indicates a value that has been changed manually by ESBN • VACH – indicates a value that has been changed manually (substituted) by ESBN • VVAK – indicates that the value is collected or totalised from a meter
5	FLD	Value (Net Active Demand)	1	See instructions	The net of the Interval Demand Value for Import and the Interval Demand Value for Export. Suppliers receive import data for all Interval Autoproducers and CHP and will have netted values for Import populated on the 342 message. Where the Interval Meter Point is an Autoproducer or a CHP this field will always be present on the 342 Import flow, and where export exceeds import in an interval then the net import communicated is

Segment and Field Level Identifier – 342 Message					Rpt	Optionality	Description and Purpose
							zero.
1 Me	1 Message Trailer			1	Mandatory		
2	FLD	MPRN Count	MPRN Count			Mandatory	A count of the number of MPRN segments included in the message
2	FLD	Channel Count			1	Mandatory	A count of the number of Channel level segments included in the message

1.9.13 Message 345: SMART HH Cumulative Register Readings (Import)

Message 345 is sent by the Data Processor in the following circumstances:

For HH meter a Cumulative import 24 hour reading will be distributed to the supplier using the 345 Market Message


This 24 hour reading will be taken from a 24 hour cumulative register at the End of Day (23:59:59). The reading will be used for MID compliance and customer reconciliation.

- When an actual read is obtained on D+1 (Calendar) it will be sent to the Supplier registered for Import at the MPRN on the read date
- Where actual data is obtained post D+1, it will be sent retrospectively.

Message 345 is used in the following Market Process:

Process Number and Title		Use of Message
MPD	Data Processing for HH Interval	To advise the Supplier of the cumulative 24 hour meter reading data
15.1	Metering	

Data Hierarchy Diagram

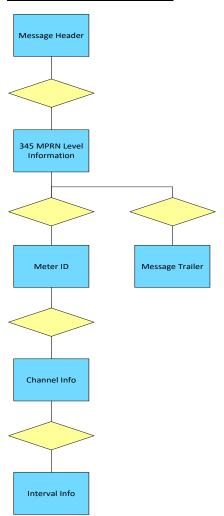

Message Structure and Interpretation

Segm	Segment and Field Level Identifier – 345 Message			Rpt	Optionality	Description and Purpose
1 Me	1 Message Header			1	Mandatory	See Common Data Segments for detailed notes on structure and population.
1 MP	1 MPRN Level Information		1- 1000	Mandatory		
2	FLD	MPRN	MPRN		Mandatory	The unique identifying reference number for the Meter Point for which cumulative 24 hour meter reading data is provided.
2	FLD	Read I	Date	1	Mandatory	The date on which the read recorded in the message occurred.
2	SEG	EG Meter ID		1N	Mandatory	
	3	FLD	Meter Category	1	Optional	A code allocated by Meter Asset Manager to denote the manufacturer and type of meter.
	3	FLD	Serial Number	1	Mandatory	The identification number for the meter to which data is allocated in the Data Processor system. At complex sites data may be collected from multiple physical meters and totalised against a single nominated meter.
2	SEG	Regist	er Level Information	1:N	Mandatory	
	3	FLD	Meter Register Sequence	1	Mandatory	An identifier to distinguish between different meter dials on a physical meter or set of meters.
	3	FLD	Timeslot	1	Mandatory	A code that indicates the period that a Meter register is recording.
	3	FLD	Register Type	1	Mandatory	A code that indicates the purpose of the register. 74 Import 24hr kWh
	3	FLD	Unit of Measurements	1	Mandatory	A code that indicates the value that is measured.

Segment and Field Level Identifier – 345 Message			Rpt	Optionality	Description and Purpose
					• kWh
3	FLD	ReadingValue	1	Mandatory	Reading is the value of a reading in the form passed to the Data Processor measured in the units identified by the meter register prior to application of any multipliers.

APPENDIX 1

The tables below outline the valid combinations of Read Reason, Read Type and Read Status that can be found on messages 300, 300S and 305.

1.10 Appendix 1A - Message 300 Combinations

Scenarios	Read Reason	Read Type	Read Status	Comments
Change of Legal Entity	27 - Change of Legal Entity	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible /No read available)	REST	Where some of the reads provided were implausible but not all
		ED - Estimate (DUoS billing has occurred)	REST	
		SC - Supplier Provided Customer Reading	RV	Where read provided on 016
		SC - Supplier Provided Customer Reading	RREL	Where read provided on 016
Out of Cycle Customer Reads	10 - Ad-hoc, non chargeable check read	CU - Customer	RV	Reading provided via the IVR

Scenarios	Read Reason	Read Type	Read Status	Comments
		CU - Customer	RREL	Reading provided via the IVR
		SC - Supplier Provided Customer Reading	RV	Reading provided on 210
		SC - Supplier Provided Customer Reading	RREL	Reading provided on 210
		EF - Estimate (Implausible / No read available)	REST	Where some of the reads provided by Customer/Supplier fail validation but not all
Scheduled Reads	01 - Scheduled	A - Actual	RV	
		A - Actual	RREL	
		CU - Customer	RV	
		CU - Customer	RREL	
		EF - Estimate (Implausible / No read available)	REST	Where some of the register reads fail validation but not all
		SC - Supplier Provided Customer Reading	RV	
		SC - Supplier Provided Customer Reading	RREL	
Opening Reading following CoS Cancellation	01 – Scheduled	A – Actual	RV	
		A – Actual	RREL	

Scenarios	Read Reason	Read Type	Read Status	Comments
		A – Actual	REST	
		CU – Customer	RV	
		CU _ Customer	RREL	
		CU – Customer	REST	
		EF – Estimate (Implausible/No Read available)		

1.11 Appendix 1B – Message 300S Combinations

Scenarios	Read Reason	Read Type	Read Status	Comments
Special read	02 - Special Read - Chargeable	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible / No read available)	REST	Where a mixture of actuals and estimates are to be provided

Scenarios	Read Reason	Read Type	Read Status	Comments
		EF - Estimate (Implausible / No read available)	RENS	Where a complete set of estimates are provided
		E - Estimate (No access)	RENS	Where a complete set of estimates are provided
		E – Estimate (No access)	REST	
	09 - Special Read - Non Chargeable	A - Actual	RV	
		A - Actual	RREL	
		EF - Estimate (Implausible / No read available)	REST	Where a mixture of actuals and estimates are to be provided
		EF - Estimate (Implausible / No read available)	RENS	Where a complete set of estimates are provided
		E - Estimate (No access)	RENS	Where a complete set of estimates are provided


1.12 Appendix 1C - Message 305 Combinations

Scenarios	Read Reason	Read Type	Comments

Block Estimate	01 - Scheduled	EP - Estimate (Block Planned)	
		EU - Estimate (Block Unplanned)	
Scheduled Reading - no valid register reads	01 - Scheduled	E - Estimate (No Access)	
		EF - Estimate (Implausible / No read available)	Where a set of register readings are obtained but are all implausible
Out of Cycle read	14 - Estimate	EF - Estimate (Implausible / No read available)	Where reads on a 210 are all implausible and replaced by a complete set of estimates

APPENDIX 2

1.13 Appendix 2A – Supplier Provided Reading validation sequence diagram

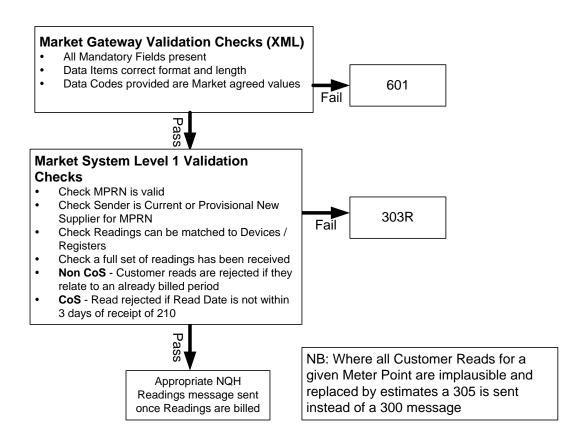

1.14 Appendix 2B – Proposed Replacement Reading validation sequence diagram

